

HOW TO SEARCH

Press CTRL + F to search for items you are looking for.

Aircraft Manual Numbers:

- 1 - Flight Manual
- 2 - Maintenance/Service Manual
- 3 - Structural/Overhaul Manual
- 4 - Parts Manual

Item	Model	Model 2	Contract	Modification	Manual	Engine	Manufacture	T.O. #/Notes	Date
1		MK	61		2	MK-61, MK-65, MK-66, MK-67, MK-74 (Aero Eng.)	Aero Engine	AP 2234K, AP 2234L, AP 2234M (Repair, Installation)	7/49 X
2		E	107	A	1 thru 4	E-107A, E-113A, E-113B, E-113C (Aeronca)	Aeronca	Operations, Overhaul, Parts	
3						Aerospace Equipment	Aerospace	1-1-2 (Corrosion Prevention & Control)	9/1975
4	T	F	41	A-1	4	TF41-A-1, TF41-A-1A, TF41-A-1B	Allison	2J-TF41-4	11/1988
5		J	33		3	J33 (Series)	Allison	2J-J33-5 (Rev.)	6/68 X
6		J	33		3	J33 (Series)	Allison	02B-105B-5	10/53 X
7		J	33		3	J33 (Series)	Allison	2J-J33-5 (Rev.)	12/54 X
8		J	33		3	J33 (Series)	Allison	2J-J33-5 (Rev.)	6/68 X
9		J	33		3	J33 (Series)	Allison	02B-105B-5	10/53 X
10		J	33		4	J33 (Series)	Allison	00-25-113-J33	9/67 X
11		J	33		4	J33 (Series)	Allison	00-25-113-J33	12/62 X
12		J	33			J33, J35, T40	Allison	Tool Catalog	8/53 X
13		J	33	A-35	4	J33-1-35	Allison	2J-J33-14 (I.P.B.)	1969 .

14		J	33	9	3	J33-9, J-33-11	Allison	02-105BA-3 (Overhaul Instructions)	7/1945
15		J	33	9	2	J33-9, J-33-11	Allison	02-105BA-2	5/45 X
16		J	33	A-10	4	J33-A-10, J33-A-10A, J33-A-20	Allison	02B-105BB-4	8/64 X
17		J	33	A-10	4	J33-A-10, J33-A-10A, J33-A-20	Allison	02B-105BB-4	8/64 X
18		J	33	A-10	4	J33-A-10, J33-A-10A, J33-A-20	Allison	02B-105BB-4 (I.P.B.)	1960 .
19		J	33	A-10	3	J33-A-10, J33-A-10A, J33-A-23, J33-A-31, J33-A-35	Allison	2J-J33-13 (Rev.)	2/54 x
20		J	33	A10	2	J33-A10, J33-A-A23, J33-A-16, C3, A2, A4	Allison	Technical Man.	X
21		J	33	A-10A	2	J33-A-10A, J33-A-20	Allison	02-105BB-2 (Rev.)	8/64 X
22		J	33	A-10A	3	J33-A-10A, J33-A-20	Allison	02B-105BB-3	9/65 X
23		J	33	A-10A	3	J33-A-10A, J33-A-20	Allison	02B-105BB-3	8/60 X
24		J	33	A-16		J33-A-16, J33-A-24A, J33-A-16A, J33-A-24	Allison	02B-105BF-4	9/64 X
25		J	33	A-16	4	J33-A-16, J33-A-24A, J33-A-16A, J33-A-24	Allison	02B-105BF-4 (I.P.B.)	1960 .

26		J	33	A-16	3	J33-A-16, J33-A-16A, J33-A-24	Allison	02B-105BF-3	5/55 X
27		J	33	A-18A	2	J33-A-18A	Allison	02B-5CA-502	7/57 X
28		J	33	A-18A	3	J33-A-18A	Allison	02B-5CA-503	4/56 X
29		J	33	A-18A	4	J33-A-18A	Allison	02B-5CA-504 (I.P.B.)	1960 .
30		J	33	A-20		J33-A-20, J33-A-35	Allison	AR82-J33-A-20/35	11/73 X
31		J	33	A-23	4	J33-A-23, J33-A-10, J33-A-31, J33-A-10A, J33-A-20	Allison	2J-J33-14	12/55 Y
32		J	33	A-23	2	J33-A-23, J33-A-33, J33-A-33A, J33-A-35	Allison	2J-J33-6 (Filed Maint.)	1958 .
33		J	33	A-33	2	J33-A-33 (Allison)	Allison	Svc. Instructions	1951 .
34		J	33	A-33	4	J33-A-33, J33-A-33A	Allison	2J-J33-24	5/58 X
35		J	33	A-33	3	J33-A-33, J33-A-33A	Allison	2J-J33-23 (Overhaul Instructions)	1958 .
36		J	33	A-33	2	J33-A-33, J33-A-33A, J33-A-35	Allison	2J-J33-6 (Filed Maint.)	1962 .
37		J	33	A-35	2	J33-A-35	Allison	2J-J33-12	1/60 X
38		J	33	A-35	2	J33-A-35	Allison	2J-J33-12 (Svc. Instructions)	1958 .
39		J	33	A-35	3	J33-A-35	Allison	2J-J33-13	7/71 X
40		J	33	A-35	3	J33-A-35	Allison	2J-J33-13	2/78 X
41		J	33	A-35	3	J33-A-35	Allison	2J-J33-13	7/71 x
42		J	33	A-35	3	J33-A-35	Allison	2J-J33-13 (Overhaul Instructions)	1965 .
43		J	33	A-35	4	J33-A-35	Allison	2J-J33-14	9/77 X

44		J	33	A-37	2	J33-A-37, J33-A-41	Allison	2J-J33-32	2/58 X
45		J	33	A-37	4	J33-A-37, J33-A-41	Allison	2J-J33-34	10/66 X
46		J	33	A-37	4	J33-A-37, J33-A-41	Allison	2J-J33-34	6/57 X
47		J	33	A-37	4	J33-A-37, J33-A-41	Allison	2J-J33-34 (Rev.)	9/57 X
48		J	33	A-37	3	J33-A-37, J33-A-41	Allison	2J-J33-33	5/57 X
49		J	33	A-9	3	J33-A-9, J33-A-17, J33-GE-11	Allison	02-105BA-3 (Overhaul Instructions)	
50		J	33	A-9	3	J33-A-9, J33-GE-11, J33-A-17	Allison	2J-J33-3 (Overhaul Instructions)	1955
51		J	33	A-9	2	J33-A-9, J33-A-11, J33-A-17, J33-A-21, J33-A-23, J33-A-33, J33-A-33A, J33-A-35	Allison	02B-105B-6 (Rev.)	2/54 X
52		J	33	A-9	2	J33-A-9, J33-A-17, J33-A-21, J33-GE-11	Allison	02B-105BA-2	8/49 X
53		J	35		2	J35 (Series)	Allison	2J-J35-6 (Rev.)	10/64 X
54		J	35		2	J35 (Series)	Allison	2J-J35-6	10/55 X
55		J	35		2	J35 (Series)	Allison	2J-J35-6	4/57 X
56		J	35		2	J35 (Series)	Allison	2J-J35-6 (Field Maint.)	1957 .
57		J	35		3	J35 (Series)	Allison	2J-J35-5 (Rev.)	6/57 X
58		J	35		3	J35 (Series)	Allison	2J-J35-5 (Overhaul Changes)	1957 .

59		J	35	1	2	J35-1, J35-3	Allison	02-105-CA-2 (Svc. Instructions)	8/1945
60		J	35	1	2	J35-1, J35-3	Allison	02-105CA-2 (Svc. Instructions)	8/1945
61		J	35	1	4	J35-1, J35-3	Allison	02-105CA-4	11/45 X
62		J	35	3	4	J35-3, J35-5, J35-7, J35-9, J35-11, J35-13, J35-15	Allison	02B-105CA-4	5/48 Y
63		J	35	A-17	2	J35-A-17, J35-A-27	Allison	2J-J35-12 (Rev.)	2/55 X
64		J	35	A-17	2	J35-A-17, J35-A-27	Allison	2J-J35-12 (Svc. Instructions)	1955 .
65		J	35	A-17A	4	J35-A-17A, J35-A-17B, J35-A-27	Allison	02B-105CC-4	2/51 X
66		J	35	A-17A	3	J35-A-17A, J35-A-17B, J35-A-27	Allison	02B-105CC-3	2/51 X
67		J	35	A-17A	4	J35-A-17A, J-35-A-17B, J35-A-27	Allison	2J-J35-14 (Rev.)	6/53 Y
68		J	35	A-17D	3	J35-A-17D, J35-A-27A, J35-A-29A	Allison	2J-J35-53 (Overhaul Instructions)	1957 .
69		J	35	A-17D	4	J35-A-17D, J35-A-27A, J-35A-29A	Allison	2J-J35-54 (I.P.B.)	1956 .
70		J	35	A-17D	4	J35-A-17D, J35-A-27A, J35-A-29A	Allison	2J-J35-54	9/56 X
71		J	35	A-17D	3	J35-A-17D, J35-A-27A, J35-A-29A	Allison	2J-J35-53 (Rev.)	4/57 X

72		J	35	A-17D	3	J35-A-17D, J35-A-27A, J35-A-29A	Allison	2J-J35-53 (Rev.)	1/56 X
73		J	35	A-21B	2	J35-A-21B, J35-A-21C, J35-A-43, J35-A-45	Allison	2J-J35-42 (Rev.)	2/55 X
74		J	35	A-29	1	J35-A-29	Allison	442A (Operating Guide Report)	1952 .
75		J	35	A-29	2	J35-A-29	Allison	Allison Svc. Instructions	7/52 X
76		J	35	A-29	2	J35-A-29	Allison	Op Guide	7/52 X
77		J	35	A-29	2	J35-A-29	Allison	Svc. Instructions	1952 .
78		J	35	A-29	2	J35-A-29, J35-A-29A	Allison	2J-J35-52 (Rev.)	2/57 X
79		J	35	A-29	2	J35-A-29, J35-A-29A	Allison	2J-J35-52 (Rev.)	2/57 X
80		J	35	A-29	2	J35-A-29, J35-A-29A	Allison	2J-J35-52 (Svc. Instructions)	1957 .
81		J	35	A-29A	3	J35-A-29A	Allison	2J-J35-53	X
82		J	35	A-33	3	J35-A-33, J35-A-33A, J35-A-41	Allison	02B-105CJ-3 (Rev.)	5/53 Y
83		J	35	A-33	2	J35-A-33, J35-A-33A, J35-A-33B, J35-A-42, J35-A-47	Allison	2J-J35-62 (Svc. Instructions)	1957 .
84		J	35	A-33	2	J35-A-33, J35-A-33A, J35-A-33B, J35-A-41, J35-A-47	Allison	2J-J35-62	1/57 Y
85		J	35	A-33	2	J35-A-33, J35-A-33A, J35-A-33B, J35-A-41, J35-A-47	Allison	2J-J35-62	1/57 X

86		J	35	A-33	4	J35-A-33, J35-A-33A, J35-A-41	Allison	02B-105CJ-4 (Rev.)	8/53 Y
87		J	35	A-35		J35-A-35	Allison	Allison Instructions Charts	
88		J	35	A-35	2	J35-A-35	Allison	02B-105CK-2	4/54 Y
89		J	35	A-35	2	J35-A-35	Allison	Instruc. Charts	11/53 X
90		J	35	A-35	2	J35-A-35, J35-A-35A	Allison	2J-J35-72 (Rev.)	10/58 Y
91		J	35	A-35	3	J35-A-35, J35-A-35A, J35-A-47	Allison	2J-J35-73	5/58 X
92		J	35	A-35	4	J35-A-35, J35-A-47	Allison	2J-J35-74 (Rev.)	8/58 X
93		J	35	A-35A	4	J35-A-35A, J35-A-35B	Allison	2J-J35-74 (I.P.B.)	1966 .
94		J	35	A-35A	4	J35-A-35A, J35-A-35B	Allison	2J-J35-74	4/66 X
95		J	35	A-35A	2	J35-A-35A, J35-A-35B	Allison	2J-J35-6 (Rev.)	5/65 X
96		J	35	C-3	2	J35-C-3	Allison	02-105CA-2	11/46 X
97		J	71	A-13	2	J71-A-13	Allison	Pub #7J2	1/59 X
98		J	71	A-2	2	J71-A-2, J71-2A, J71-2B, J71-2E	Allison	02B-5ACE-2	7/61 X
99		J	71	A-2	3	J71-A-2, J71-2A, J71-2B, J71-2E	Allison	02B-5ACE-3	7/61 X
100		J	71	A-2	4	J71-A-2, J71-2A, J71-2B, J71-2E	Allison	02B-5ACE-4	3/63 X
101		J	85			J85	Allison	Training Guide	X
102		J	85	54	4	J85-54, J85-64	Allison	2J-J85-54	Y

103		J	85	5C	2	J85-5C, J85-5D, J85-5E, J85-5F, J85-5G, J85-5H, J85-5J	Allison	2J-J85-56-1S-36 (Missing Pgs.)	11/74 X
104		J	85	CAN-15N	3	J85-CAN-15N	Allison	J85-15N-3-6	7/85 X
105		J	85	CAN-15N	4	J85-CAN-15N	Allison	J85-15N-4 (Rev.)	1/87 X
106		T	56		2	T56 (Allison)	Allison	Turbo Prop., Aeronautic Meeting	4/55 X
107		V	1710			V-1710 (Allison)	Allison	30-5A-1 (Information Guide)	1/44 X
108		V	1710			V-1710 (Allison)	Allison	ALD-4TC (Tools Cat.)	9/43 X
109		V	1710			V-1710, V-1710- 93, V-1710-E- 11, V-1710-117, V-1710-E-21 (Allison)	Allison	30-5A-1S (Information Guide)	7/44 Y
110						Allison Aircraft Eng.	Allison	02-5-3 (Tools Cat.)	11/1943
111					3	Allison Eng.	Allison	Overhaul, SVC. Tools	1941 .
112					4	Allison Jet Eng.	Allison	Non-Illustrated Parts Cat.	1953 .
113		V	1710			V-1710	Allison	02A-5-3 (Tools Cat.)	11/43X
114		V	1710		2	V-1710	Allison	02-5-2 (Svc. Tools Cat.)	
115		V	1710			V-1710	Allison	02-5-1 (Tables of Limits)	11/1944
116		V	1710		1	V-1710	Allison	30-5A-1 (Information Guide)	1944 .
117		V	1710			V-1710	Allison	02-5-6 (Installation & Removal of Eng. Reduction Gear)	1/1943

118		V	1710			V-1710	Allison	02-5-4 (Parts List, Requisitioning Guide)	1/1945
119		V	1710		1	V-1710 (Series)	Allison	Operator's Handbook	
120		V	1710		4	V-1710 (Series)	Allison	021-5-4 (Parts List, Requisition)	1/45 X
121		V	1710	109	4	V-1710-109, V-1710-109A	Allison	02-5AD-4F (Parts Cat.)	6/45 X
122		V	1710	111	4	V-1710-111, V-1710-113, V-1710-115	Allison	02A-5AB-4E (Parts Cat.)	6/45 X
123		V	1710	117	4	V-1710-117	Allison	02-5AD-4D (Parts Cat.)	7/45 X
124		V	1710	143	2	V-1710-143, V-1710-145	Allison	02A-5AH-2 (Svc. Instructions)	1949 .
125		V	1710	143	3	V-1710-143, V-1710-145	Allison	02-5AH-3 (Overhaul Instructions)	1947 .
126		V	1710	143	4	V-1710-143, V-1710-145	Allison	02A-5AH-4 (I.P.B.)	1951 .
127		V	1710	27	4	V-1710-27, V-1710-29	Allison	02-5AB-4 (Parts Cat.)	11/41X

128		V	1710	27	2	V-1710-27, V-1710-29, V-1710-39, V-1710-49, V-1710-51, V-1710-53, V-1710-55, V-1710-73, V-1710-81, V-1710-87, V-1710-89, V-1710-91, V-1710-99, V-1710-111, V-1710-113, V-1710-115	Allison	02-5AB-2 (Svc. Instructions)	4/45 C
129		V	1710	27	4	V-1710-27, V-1710-29, V-1710-35, V-1710-39, V-1710-49, V-1710-51, V-1710-53, V-1710-55, V-1710-63, V-1710-73, V-1710-81, V-1710-83, V-1710-85, V-1710-87, V-1710-89, V-1710-91, V-1710-93	Allison	02-5-7 (Parts List, Requisition)	9/43 X

130		V	1710	27	2	V-1710-27, V-1710-29, V-1710-39, V-1710-49, V-1710-51, V-1710-53, V-1710-55, V-1710-73, V-1710-81, V-1710-87, V-1710-89, V-1710-91, V-1710-99	Allison	02-5AB-2 (Svc. Instructions)	4/44 X
131		V	1710	27	2	V-1710-27, V-1710-29, V-1710-39, V-1710-49, V-1710-51, V-1710-53, V-1710-55, V-1710-73, V-1710-81, V-1710-87, V-1710-89, V-1710-91, V-1710-99, V-1710-111, V-1710-113, V-1710-115	Allison	02-5AB-2 (Svc. Instructions)	9/45 Y

132		V	1710	27	2	V-1710-27, V-1710-29, V-1710-39, V-1710-49, V-1710-51, V-1710-53, V-1710-55, V-1710-73, V-1710-81, V-1710-87, V-1710-89, V-1710-91, V-1710-99, V-1710-111, V-1710-113, V-1710-115	Allison	02-5AB-2 (Svc. Instructions)	10/44Y
133		V	1710	27	3	V-1710-27, V-1710-29, V-1710-39, V-1710-49, V-1710-51, V-1710-53, V-1710-55, V-1710-73, V-1710-81, V-1710-87, V-1710-89, V-1710-91, V-1710-99, V-1710-111, V-1710-113, V-1710115	Allison	02-5AB-3 (Overhaul Instructions)	7/45 Y

134		V	1710	27	2	V-1710-27, V-1710-29, V-1710-39, V-1710-49, V-1710-51, V-1710-53, V-1710-55, V-1710-73, V-1710-81, V-1710-87, V-1710-91, V-1710-99, V-1710-111, V-1710-113, V-1710-115	Allison	AN-02-5AB-2 (Svc. Instructions)	1945 .
135		V	1710	27	3	V-1710-27, V-1710-29, V-1710-39, V-1710-49, V-1710-51, V-1710-53, V-1710-55, V-1710-73, V-1710-81, V-1710-87, V-1710-91, V-1710-99, V-1710-111, V-1710-113, V-1710-115	Allison	02-5AB-3 (Overhaul Instructions)	1945 .
136		V	1710	33	2	V-1710-33	Allison	02-5AC-2 (Svc. Instructions)	1/41 X
137		V	1710	33	3	V-1710-33	Allison	02-5AC-3 (Overhaul Instructions)	4/1943

138		V	1710	33	4	V-1710-33	Allison	02-5AC-4 (Parts Cat.)	12/1943
139		V	1710	33	1	V-1710-33	Allison	02-5AC-1 (Operations Instructions)	7/1942
140		V	1710	35	3	V-1710-35	Allison	02-5AD-3 (Overhaul Instructions)	12/41X
141		V	1710	35	1	V-1710-35, V-1710-37, V-1710-63, V-1710-83, V-1710-85	Allison	02-5AD-1 (Operating Instructions)	12/43X
142		V	1710	35	3	V-1710-35, V-1710-37, V-1710-63, V-1710-83, V-1710-85	Allison	02-5AD-3 (Overhaul Instructions)	1/44 X
143		V	1710	35	2	V-1710-35, V-1710-63, V-1710-83, V-1710-85, V-1710-93, V-1710-109, V-1710-117	Allison	02-5AD-2 (Svc. Instructions)	5/45 X
144		V	1710	35	3	V-1710-35, V-1710-63, V-1710-83, V-1710-85, V-1710-93, V-1710-109, V-1710-117	Allison	02-5AD-3 (Overhaul Instructions, Rev.)	8/45 X

145		V	1710	35	3	V-1710-35, V-1710-63, V-1710-83, V-1710-85, V-1710-93, V-1710-109, V-1710-117	Allison	02-5AD-3 (Overhaul Instructions)	5/45 X
146		V	1710	37	4	V-1710-37	Allison	02-5AD-4 (Parts Cat.)	10/41X
147		V	1710	39	4	V-1710-39	Allison	02-5AB-4B (Parts Cat.)	8/42 X
148		V	1710	49	4	V-1710-49, V-1710-53	Allison	02-5AB-4A (Parts Cat.)	2/43 X
149		V	1710	51	4	V-1710-51, V-1710-55, V-1710-73	Allison	02-5AB-4C (Parts Cat.)	8/43 X
150		V	1710	63	4	V-1710-63, V-1710-83, V-1710-85	Allison	02-5AD-4B (Parts Cat.)	4/43 X
151		V	1710	63	4	V-1710-63, V-1710-83, V-1710-85	Allison	02-5AD-4B (Parts Cat.)	4/43 X
152		V	1710	81	4	V-1710-81, V-1710-87	Allison	02-5AB-4D (Parts Cat.)	3/44 X
153		V	1710	81	4	V-1710-81, V-1710-87	Allison	02-5AB-4D (I.P.B.)	1944 .
154		V	1710	89	4	V-1710-89, V-1710-91	Allison	02-5AE-4 (Parts Cat.)	12/43X
155		V	1710	89	4	V-1710-89, V-1710-91	Allison	02-5AE-4 (Parts Cat.)	10/43X
156		V	1710	E		V-1710-93	Allison	Svc. School Handbook, Sup.	
157		V	1710	93	4	V-1710-93	Allison	02-5AD-4C (Parts Cat.)	1/45 X

158		V	1710	99	4	V-1710-99	Allison	02-5AG-4 (Parts Cat.)	2/45 X
159		V	1710	C15	2, 3	V-1710-C15	Allison	Maint., Overhaul	3/40 X
160		V	1710	C15	1	V-1710-C15	Allison	Operations Man.	9/43 X
161		V	1710	C15	3	V-1710-C15, V-1710-E4, V-1710-E6, V-1710-E18, V-1710-E19, V-1710-F2R, V-1710-F2L, V-1710-F3R, V-1710-F4R, V-1710-F5R, V-1710-F10, V-1710-F17, V-1710-F20R	Allison	2TL3 (Table of Limits)	8/43 X
162		V	1710	E	1, 2	V-1710-E	Allison	2E2 (Operation, Maint.)	1943 .
163		V	1710	E	1, 2	V-1710-E	Allison	Operations, Maint.	4/44 X
164		V	1710	E	1 thru 3	V-1710-E	Allison	Operations, Maint., Overhaul	
165		V	1710	E	1 thru 3	V-1710-E	Allison	Operations, Maint., Overhaul	
166		V	1710	E	3	V-1710-E	Allison	Overhaul Bulletins	8/45 X
167		V	1710	E	3	V-1710-E	Allison	ALD-3E3 (Overhaul)	1945 .
168		V	1710	E		V-1710-E, V-1710-F	Allison	Svc. School Handbook	12/43X
169		V	1710	E		V-1710-E, V-1710-F	Allison	Svc. School Handbook	4/43 X
170		V	1710	E		V-1710-E, V-1710-F	Allison	Svc. School Handbook	9/42 X
171		V	1710	E		V-1710-E, V-1710-F	Allison	Svc. School Handbook	5/42 X

172		V	1710	E		V-1710-E, V-1710-F	Allison	ALD-SSH-5 (svc. School Handbook)	1943 .
173		V	1710	E		V-1710-E, V-1710-F	Allison	ALD-SSH-6 (Auxilliary Stage Supercharger, Svc. School Handbook, Sup.)	
174		V	1710	E22	4	V-1710-E22	Allison	1E4F (Parts List)	5/45 X
175		V	1710	E4	1, 2	V-1710-E4	Allison	Operations, Maint.	1941 .
176		V	1710	E4	1, 2	V-1710-E4	Allison	Operations, Maint.	4/41 X
177		V	1710	F	1, 2	V-1710-F	Allison	Operations, Maint.	4/44 X
178		V	1710	F	1, 2	V-1710-F	Allison	6F2 Operations, Maint.	1/45 X
179		V	1710	F	1, 2	V-1710-F	Allison	Operations, Maint.	1/45 X
180		V	1710	F	1, 2, 3	V-1710-F	Allison	Operations, Maint., Overhaul	
181		V	1710	F	2, 3	V-1710-F	Allison	Operations, Maint., Overhaul	6/42 X
182		V	1710	F	2, 3	V-1710-F	Allison	Maint., Overhaul	
183		V	1710	F		V-1710-F	Allison	Information Guide, Nose Information Man.	
184		V	1710	F	3	V-1710-F	Allison	ALD-4F3 (Overhaul)	1944 .
185		V	1710	F10R	4	V-1710-F10R, V-1710-F10L, V-1710-F4R	Allison	1F4B (Parts Cat.)	3/43 X
186		V	1710	F10R	4	V-1710-F10R, V-1710-10L, V-1710-4R	Allison	IF4B (I.P.B.)	1943 .
187		V	1710	F17R	3, 4	V-1710-F17R	Allison	1F4D (Overhaul, Parts Cat.	9/43 X
188		V	1710	F3R	1, 2	V-1710-F3R	Allison	Operation, Maint.	4/41 X
189		V	1710	F3R	4	V-1710-F3R	Allison	Parts Cat.	9/41 X

190		V	1710	F5R	1	V-1710-F5R, V-1710-5L, V-1710-10L, V-1710-10R	Allison	Pilot's Operations, Maint.	
191		V	1710	35	4	V-1720-35	Allison	02-5AD-4A (Parts Cat.)	8/42 X
192		V	1710	F5R	1, 2	V-1720-F5R, V-1720-F5L, V-1720-F10R, V-1720-F10L	Allison	Operations, Maint.	1/42 X
193		V	1719	143	4	V-1710-143, V-1710-45	Allison	02A-5AH-4 (Parts Cat., Rev.)	10/51X
194		V	3420		2	V-3420	Allison	Janes All The Worlds Aircraft, First Impression	2/46 X
195		V	3420		2	V-3420	Allison	Janes All The Worlds Aircraft, Eng. Specs.	8/44 X
196		V	3420		2	V-3420	Allison	Valve Timing	
197		V	3420		3	V-3420	Allison	Preliminary Overhaul	
198		V	3420			V-3420	Allison	Liturature, Janes Discriptive	
199		V	3420		2	V-3420, DV-6840	Allison	Eng. Arrangements	6/43 X
200		V	3420	B	2	V-3420-B, 23(B10)	Allison	Dismantling	3/51 X
201		T	63-A	5A	4	T63-A-5A, T-63-A-700	Allison	55-2840-231-35P	1/70 X
202		T	63-A	5A	4	T63-A-5A, T-63-A-700	Allison	55-2840-231-23P	5/76 X
203		T	63-A	5A	4	T63-A-5A, T-63-A-700	Allison	55-2840-231-34P	11/72X

204		T	63-A	5A	4	T63-A-5A, T-63-A-700	Allison	55-2840-231-20P	1/70 X
205		T	56		2	T56	Allison	Lockheed Svc. Digest	12/71X
206		T	56		4	T56	Allison	Allison Turbo Prop., Spare Parts Data	4/66 X
207		T	56		3	T56 (Series)	Allison	2J-T56-5 (overhaul Changes)	1/59 X
208		T	56	A-10W	3	T56-A-10W	Allison	02B-5DC-3 (Overhaul Instructions, Rev.)	10/64X
209		T	56	A-10W	4	T56-A-10W	Allison	02B-5DC-4 (Parts, Rev.)	9/64 X
210		T	56	A-10W	4	T56-A-10W	Allison	02B-5DC-4 (Parts)	6/64 X
211		T	56	A-10W	4	T56-A-10W	Allison	02B-5DD-4 (Parts)	3/80 Y
212		T	56	A-10W	3	T56-A-10W, T56-A-10WA	Allison	02B-5DC-3 (Overhaul Instructions, Rev.)	1/65 X
213		T	56	A-11	4	T56-A-11	Allison	2J-T56-34 (Parts)	7/58 X
214		T	56	A-14		T56-A-14	Allison	Training Man. (Eng., Related Sys.)	1975 X
215		T	56	A-14	4	T56-A-14	Allison	02B-5DD-4 (Parts)	12/65X
216		T	56	A-14		T56-A-14, T56-A-10W, T56-A-10WA	Allison	02B-5DD-6-1 (Maint. Instructions Man.)	5/75 X
217		T	56	A-15		T56-A-15	Allison	Allison Instruction Handbook, Training	
218		T	56	A-15		T56-A-15	Allison	Allison, Familiarization, Instruction Handbook	11/64X
219		T	56	A-15		T56-A-15	Allison	2J-T56-46S-16 (Operations Technical Man.)	10/80X

220		T	56	A-15	4	T56-A-15	Allison	2J-T56-44 (Parts, Rev.)	9/67 X
221		T	56	A-16	2-Jan	T56-A-16	Allison	02B-5DE-6-2 (Maint. Instructions Depot)	2/75 X
222		T	56	A-16	2-Jan	T56-A-16, T56-A-423	Allison	02B-5DE-6-2 (Maint. Instructions Depot)	11/74X
223		T	56	A-16	2-Jan	T56-A-16, T56-A-423	Allison	02B-5DE-6-2 (Maint. Instructions Depot)	8/74 X
224		T	56	A-16	2-Jan	T56-A-16, T56-A-423	Allison	02B-5DE-6-2 (Maint. Instructions Depot)	5/74 X
225		T	56	A-16	2-Jan	T56-A-16, T56-A-423	Allison	02B-5DE-6-2 (Maint. Instructions Depot)	2/74 X
226		T	56	A-16	2-Jan	T56-A-16, T56-A-423	Allison	02B-5DE-6-2 (Maint. Instructions Depot)	9/72 X
227		T	56	A-1A	3	T56-A-1A	Allison	2J-T56-13 (Overhaul)	11/57X
228		T	56	A-1A	4	T56-A-1A	Allison	2J-T56-14 (Parts)	2/61 X
229		T	56	A-1A	2-Jan	T56-A-1A, T56-A-9	Allison	2J-T56-16 (Field Maint.)	1/59 X
230		T	56	A-1A	2	T56-A-1A, T56-A-9	Allison	2J-T56-16 (Field Maint.)	9/61 X
231		T	56	A-1A	2-Jan	T56-A-1A, T56-A-9, T56-A-9A	Allison	2J-T56-16 (Field Maint.)	9/63 X
232		T	56	A-1A	3	T56-A-1A, T56-A-9	Allison	2J-T56-13 (Turbo Prop., Overhaul)	6/61 X
233		T	56	A-1A	3	T56-A-1A, T56-A-9	Allison	2J-T56-13E (Overhaul Sup.)	1/61 X
234		T	56	A-7	2	T56-A-7	Allison	2J-T56-26 (Field Maint. Man.)	6/59 X
235		T	56	A-7	2	T56-A-7	Allison	02B-5DA-502 (Svc. Instructions)	11/61X
236		T	56	A-7	2	T56-A-7	Allison	02B-5DA-502 (Svc. Man.)	1961 .

237		T	56	A-7	2	T56-A-7	Allison	2J-T56-26 (Technical Man., Field Maint.)	5/64 X
238		T	56	A-7	3	T56-A-7	Allison	2J-T56-23 (Overhaul)	11/61X
239		T	56	A-7	4	T56-A-7	Allison	2J-T56-24 (Parts)	4/63 X
240		T	56	A-7	4	T56-A-7	Allison	2J-T56-24 (Parts)	10/62 X
241		T	56	A-7	4	T56-A-7	Allison	2J-T56-24 (Parts)	10/61 X
242		T	56	A-7	4	T56-A-7	Allison	2J-T56-24 (Parts)	10/58 X
243		T	56	A-7	3	T56-A-7, T-56-A-7A	Allison	2J-T56-23 (Overhaul)	9/67 X
244		T	56	A-7	2	T56-A-7, T56-A-7A	Allison	02B-5DA-502 (Svc. Instructions)	3/66 X
245		T	56	A-7	4	T56-A-7, T56-A-7A	Allison	2J-T56-24 (Parts)	5/66 X
246		T	56	A-7A	3	T56-A-7A	Allison	2J-T56-23 (Overhaul)	6/67 X
247		T	56	A-7A	2	T56-A-7A, T56-A-7B	Allison	2J-T56-26 (Overhaul)	10/73 X
248		T	56	A-7A	4	T56-A-7A, T56-A-7B	Allison	2J-T56-24 (Parts)	12/74 X
249		T	56	A-7A	3	T56-A-7A, T56-A-7B	Allison	02B-5DA-503 (Overhaul Instructions)	1980 .
250		T	56	A-7A	2-Jan	T56-A-7A, T56-A-16, T56-A-423	Allison	02B-5DE-6-1 (Maint. Instructions)	7/75 X
251		T	56	A-7B	3	T56-A-7B, T56-A-7A	Allison	2J-T56-23 (Turbo-Prop, Overhaul)	6/80 X
252		T	56	A-8	2	T56-A-8	Allison	02B-5DB-2 (Svc. Instructions, Rev.)	1/65 X
253		T	56	A-8	2	T56-A-8	Allison	02B-5DB-2 (Svc. Instructions)	10/64X
254		T	56	A-8	4	T56-A-8	Allison	02B-5DB-4 (Parts)	10/64X

255		T	56	A-8	4	T56-A-8, T56-A-8A	Allison	02B-5DB-4 (Parts, Rev.)	1/66 X
256		T	56	A-8	4	T56-A-8, T56-A-8A	Allison	02B-5DB-4 (Parts, Rev.)	7/65 X
257		T	56	A-8	4	T56-A-8, T56-A-8A	Allison	02B-5DB-4 (Parts, Rev.)	1/65 X
258		T	56	A-8	2	T56-A-8, T56-A-8A	Allison	02B-5DB-2 (Svc. Instructions)	1/66 X
259		T	56	A-8	2	T56-A-8, T56-A-8A	Allison	02B-5DB-2 (Svc. Instructions)	10/65X
260		T	56	A-8	2	T56-A-8, T56-A-8A	Allison	02B-5DB-2 (Svc. Instructions, Rev.)	4/65 X
261		T	56	A-9	4	T56-A-9	Allison	2J-T56-14 (Parts)	11/61X
262		T	56	A-9	4	T56-A-9	Allison	2J-T56-14 (Parts)	12/62X
263		T	56	A-9	4	T56-A-9, T56-A-9A, T56-A-9B, T56-A-9C	Allison	2J-T56-14 (Parts)	8/74 X
264		T	56	A-9	4	T56-A-9, T56-A-9A, T56-A-9B	Allison	2J-T56-14 (Parts)	2/67 X
265		T	56	A-9	4	T56-A-9, T56-A-9A, T56-A-9B	Allison	2J-T56-14 (Parts)	5/66 X
266		T	56	A-9A	2	T56-A-9A	Allison	2J-T56-16 (Field Maint.)	9/65 X
267		T	56	A-9A	3	T56-A-9A, A-9B	Allison	2J-T56-13 (Overhaul)	1/69 X
268		T	56	A-9A	2	T56-A-9B,9C,9D	Allison	2J-T56-16 (Maint. Instructions)	5/88 X
269		T	63	A-5	2	T63-A-5, T63-A-700	Allison	55-2840-231-24 (Organization DS, GS, Maintenance)	1972 .
270		T	63	A-5A	2-Jan	T63-A-5A, T63-A-700	Allison	55-2840-231-24 (Maint. Man.)	3/72 X

271		T	63	A-5A	2-Jan	T63-A-5A, T63-A-700	Allison	55-2840-231-34P (Ds, GS, Maint., Parts)	1972 .
272		T	63	A-5A	2	T63-A-5A, T63-A-700	Allison	55-2840-231-20P (Organization, Maint. Repair, Parts)	1970 .
273		J	33	A-9	4	J33-A-9, J33-GE-11, J33-A-17	Allison	02-105BA-4	10/46 X
274		J	33	A-9B	4	J33-A-9B, GE-11B, A-17A, A-21	Allison	02B-105BA-4	6/53 X
275		J	33	A-9B	4	J33-A-9B, J33-GE-11B, J33-A-17A, J33-A-21	Allison	02B-105BA-4	6/53 X
276		J	33	A-9B	4	J33-A-9B, J33-GE-11B, J33-A-17A, J33-A-21	Allison	02B-105BA-4	6/53 X
277		J	35	C-34AC	4	J35-C-3AC, J35-A-5AC, J35-A-15AC	Allison	2J-J35-24A	6/50 X
278			501	D-13		501-D13	Allison	1RC12 (Training School Book, Prop. Jet Handbook)	
279			501	D-13	1	501-D13	Allison	Prop Jet Flight Crew Guide	
280	Y	T	56	A-1	2	YT56-A-1, T56-A-1	Allison	2J-T56-2 (Svc. Instructions, Rev.)	9/56 X
281	Y	T	56	A-1	2	YT56-A-1, T56-A-1	Allison	2J-T56-6 (Field Maint., Replace)	12/56X
282	Y	T	56	A-1	2	YT56-A-1, T56-A-1	Allison	2J-T56-6 (Field Maint., Replace)	1956 .

283	Y	T	56	A-1	3	YT56-A-1, T56-A-1	Allison	2J-T56-3 (Overhaul Instructions)	12/56X
284	Y	T	56	A-1	4	YT56-A-1, T56-A-1	Allison	2J-T56-4 (Parts)	12/56X
285	Y	T	56	A-1	4	YT56-A-1, T56-A-1	Allison	2J-T56-4 (Parts)	12/55X
286		T	40	A-10	2	T40-A-10	Allison	02B-5BAA-2 (Svc. Instructions)	5/55 X
287		T	40	A-10	3	T40-A-10	Allison	02B-5BAA-3 (Overhaul Instructions)	4/58 X
288		T	40	A-10	4	T40-A-10	Allison	02B-5BAA-4 (Parts)	4/58 X
289		T	40	A-6	1	T40-A-6, T40-A-10	Allison	Engineering Report, Operator's Guide	2/55 X
290	Y	T	40	A-6A		YT40-A-6A	Allison	Turbo-Prop Preliminary Instruction Training	9/52 X
291	Y	T	40	A-6A	2	YT40-A-6A	Allison	02B-5BB-2 (Svc. Instructions)	6/53 X
292	Y	T	40	A-6A		YT40-A-6A, YT-40-A-10	Allison	Turbo-Prop Eng. Preliminary Instruction Training	6/52 X
293		91	96	MARK III	1	Mark III (91/96 HP, American Cirrus Eng.)	American Cirrus Eng.	Instruction Book	1929 .
294						Anzani	Anzani	Aviation Eng. Handbook	1909 .
295		T	53			T53 (Avco Lycoming)	Avco Lycoming	Pictures Only	
296		T	53			T53 (Avco Lycoming)	Avco Lycoming	Training Man.	
297		T	53		3	T53 (Avco Lycoming)	Avco Lycoming	Kawasaki, Overhaul	10/61X

298						Austro-Daimler (Beardmore)	Beardmore	Duplicate, Svc. Man.	
299						Austro-Daimler (Beardmore)	Beardmore	Eng. Description	
300			BR	1	1	BR1 (Bently Rotary Eng.-150 HP)	Bentley Rotary	Instruction Handbook, 150hp	1918 .
301		T	50	BO-10	2-Jan	T50-BO-10, T50- BO-12	Boeing	02B-60B-6 (Maint. Instructions)	3/69 X
302		T	50	BO-10	4	T50-BO-10, T50- BO-12	Boeing	02B-60B-4 (Parts)	3/69 X
303		T	50	BO-4	4	T50-BO-4	Boeing	02B-60A-3 (Overhaul Instructions)	3/69 X
304		T	50	BO-4	4	T50-BO-4	Boeing	02B-60A-4 (Parts)	3/69 X
305		T	50	BO-4	2	T50-BO-4, T50- BO-8A	Boeing	02B-60A-2 (Svc. Instructions)	12/68X
306					3	Pegasus II M.3	Bristol Pegasus	Overhaul	1934 .
307				1	1	Gipsy Major 1, 1C, 1D, 1F, 1G, HC7 (Bristol Siddeley)	Bristol Siddeley	Descriptive Operation	
308					3, 4	Cheetah IX (Cheetah)	Cheetah	Parts, Overhaul Man.	1937 .
309	A	D	C	MARK II	2	A.D.C. Mark II 30/80 (Cirrus)	Cirrus	Notes, Maint.	
310					1, 3	Cirrus (80 HP)	Cirrus	Instructions, Operations, Overhaul	
311					3, 4	Cirrus	Cirrus	Instructions, Overhaul, Parts	1929 .

312				9Z		9Z, 9B (Clerget)	Clerget	Installation, Handling, Maint. (Aero Motors Man.)	1918 .
313		A	40		1 thru 4	A-40 (Series) 2, 3, 4, 5 (Continental)	Continental	Assembling & Overhaul, Operations, Installation, Inspection, Parts	
314		A	50		1 thru 4	A-50 (Series) 1, 2, 3 (Continental)	Continental	Overhaul, Operation, Installation, Inspection, Parts	1938 .
315		A	50		1, 2	A-50 (Series) 4, 5, A-65 (Series) 1, 3, A-75 (Series) 3 (Continental)	Continental	Operation, Installation, Maint., Inspection	
316		A	50		1 thru 3	A-50 (Series) 4, 5, 6, 7, 8, 9, A-75 (Series) 3, 6, 8, 9, A-80 (Series) 3, 6, 8, 9, A-65 (Continental)	Continental	Operation, Overhaul, Installation	
317		A	50		2, 3, 4	A-50, A-65, A-75, A-80 (Continental)	Continental	Maint., Overhaul, Parts	
318		A	50		'2-1	A-50, A-65, A-75, A-80 (Continental)	Continental	Model A Fuel Inject Sys. (Svc. Man.)	
319		A	100		2	A-100, C-115, C-125 (Continental)	Continental	Instruction & Svc. (Excello Fuel Injection, Misc. Military Tech.	

320		AA	7		1, 4	AA-7, AA7B, AU-7, AU-7B, AU-8M (Continental)	Continental	Operations, Maint., Parts	
321		AU	7B		1, 4	AU-7B, AU-8B, AU-85 (Continental)	Continental	Operations. Maint., Parts (Air Cooled, Industrial Eng., Built To Military Specs.)	
322	Y	J	69	T-9	2	YJ69-T-9 (Continental)	Continental	2J-J69-2 (Mdl. 352-1, Part 564101, Svc. Instruction)	1956 .
323	Y	J	69	T-9	2	YJ69-T-9, J69-T-9	Continental	2J-J69-6	4/57 X
324		J	69	T-19	4	J69-T-19, J69-T-19A, J69-T-19B (Continental)	Continental	2J-J69-14 (I.P.B.)	1960 .
325		J	69	T-19	2	J69-T-19, J69-T-19A	Continental	2J-J69-12	8/56 X
326		J	69	T-19	2	J69-T-19, J69-T-19A	Continental	2J-J69-16	4/57 X
327		J	69	T-19	3	J69-T-19, J69-T-19A	Continental	2J-J69-13	4/57 X
328		J	69	T-19	4	J69-T-19, J69-T-19A	Continental	2J-J69-14	11/57 X
329		J	69	T-19	3	J69-T-19, J69-T-19A, J69-T-19B	Continental	2J-J69-13	10/59 X
330		J	69	T-19	3	J69-T-19, J69-T-19A, J69-T-19B	Continental	2J-J69-13	10/59 C
331		J	69	T-19	4	J69-T-19, J69-T-19A, J69-T-19B	Continental	2J-J69-14	2/60 X
332		J	69	T-19A	2	J69-T-19A, J69-T-19B (Continental)	Continental	2J-J69-16 (Field Maint.)	1960 .

333		J	69	T-19A	3	J69-T-19A, J69-T-19B (Continental)	Continental	2J-J69-13 (Overhaul Instructions)	1960 .
334		J	69	T-2	4	J69-T-2	Continental	Letter	8/71 X
335		J	69	T-2	4	J69-T-2	Continental	02B-40AA-504	8/58 X
336		J	69	T-25		J69-T-25	Continental	Specs.	5/58 X
337		J	69	T-25	2	J69-T-25	Continental	2J-J69-46	1/72 X
338		J	69	T-25	2	J69-T-25	Continental	2J-J69-46 (Rev.)	8/61 X
339		J	69	T-25	2	J69-T-25	Continental	2J-J69-46	5/75 X
340		J	69	T-25	3	J69-T-25	Continental	2J-J69-43	5/75 X
341		J	69	T-25	4	J69-T-25	Continental	2J-J69-44	1/70 X
342		J	69	T-25	2	J69-T-25 (Continental)	Continental	2J-J69-46 (Field Maint.)	1961 .
343		J	69	T-25	3	J69-T-25 (Continental)	Continental	2J-J69-43 (Overhaul Instructions)	1961 .
344		J	69	T-25	4	J69-T-25 (Continental)	Continental	2J-J69-44 (I.P.B.)	1961 .
345		J	69	T-25	2	J69-T-25, J69-T-25A	Continental	2J-J69-46	10/82 X
346		J	69	T-25	4	J69-T-25, J69-T-25A	Continental	2J-J69-44	5/81 X
347		J	69	T-29	3	J69-T-29	Continental	2J-J69-33	2/72 X
348		J	69	T-29	3	J69-T-29	Continental	2J-J69-33	2/65 X
349		J	69	T-29	3	J69-T-29	Continental	2J-J69-33	8/72 X
350		J	69	T-29	4	J69-T-29	Continental	2J-J69-34	8/72 X
351		J	69	T-29	2	J69-T-29 (Continental)	Continental	2J-J69-36 (Field Maint.)	1961 .
352		J	69	T-29	3	J69-T-29 (Continental)	Continental	2J-J69-33 (Overhaul Instructions)	1961 .
353		J	69	T-29	4	J69-T-29 (Continental)	Continental	2J-J69-34 (I.P.B.)	1961 .
354		J	69	T-41A	4	J69-T-41A	Continental	2J-J69-54	9/72 X
355		J	69	T-41A	4	J69-T-41A	Continental	2J-J69-54	5/87 X
356		J	69	T-9		J69-T-9	Continental	Specs.	6/56 X

357		J	69	T-9	2	J69-T-9 (Continental)	Continental	2J-J69-6 (Field Maint.)	1960 .
358		J	69	T-9	3	J69-T-9 (Continental)	Continental	2J-J69-3 (Overhaul Instructions)	1960 .
359		J	69	T-9	4	J69-T-9 (Continental)	Continental	2J-J69-4 (I.P.B.)	1959 .
360		J	100	CA-100	4	J100-CA-100	Continental	2J-J100-4	8/76 X
361	I	O	360	C	3	IO-360-C, IO- 360-D	Continental	2R-0360-3	5/74 X
362	I	O	360	C	4	IO-360-C, IO- 360-D	Continental	2R-0360-4	10/76X
363	Y	O	300	11	2	YO-300-11, O- 300-11	Continental	02-70BA-2	12/44 X
364	Y	O	300	11	3	YO-300-11, O- 300-11	Continental	02-70BA-3	1/45 X
365		O	170	3	4	O-170-3	Continental	02-1-4A (Specific Installation & Test Instructions w/ Run-In Schedules, Maint.)	6/1944
366		O	170	3	2	O-170-3	Continental	02-40BA-2	9/43 X
367		O	170	3	3	O-170-3	Continental	02-40BA-3	7/44 X
368		O	170	3	'2-1	O-170-3 (Continental)	Continental	02-40BA-2 (Svc. Man. Instruction)	1945 .
369		O	170	3	1	O-170-3 (Continental)	Continental	02-40BA-1 (Operations)	1942 .
370		O	170	3	3	O-170-3 (Continental)	Continental	02-40BA-3 (Overhaul Instructions)	1944 .
371		O	170	3	4	O-170-3 (Continental)	Continental	02-40BA-4 (I.P.B.)	1943 .
372		O	170	3	4	O-170-3, 7	Continental	02-40BA-4	10/45 X

373		O	170	3	4	O-170-3, R-670-4, R-670-5, R-670-6, R-670-11	Continental	02-40-4	9/44 X
374		O	190	1	4	O-190-1	Continental	02A-40FA-1	2/48 X
375		O	190	1	3	O-190-1, O-205-1	Continental	2R-0190-3	1/52 X
376		O	190	1	4	O-190-1, O-205-1	Continental	2R-0190-4	11/51X
377		O	190	1	4	O-190-1, O-205-1	Continental	02A-40FA-4	11/51X
378		O	470		3	O-470 (Series, Continental)	Continental	2R-0470-5 (Overhaul, Changes)	1956 .
379		O	470	11	1, 2	O-470-11 (Continental)	Continental	1-2R-0470-2 (Operations, Svc.)	1960 .
380		O	470	11	3	O-470-11 (Continental)	Continental	1-2R-0470-3 (Overhaul Instructions)	1960 .
381		O	470	13		O-470-13 (Continental)	Continental		C
382		O	470	13	2, 3	O-470-13 (Continental)	Continental	Maint., Overhaul	
383		O	470	13	4	O-470-13 (Continental)	Continental	I.P.B.	
384		O	470	13	2	O-470-13, O-470-13A, O-470-4 (Continental)	Continental	Svc. Instructions	
385		O	470	13	4	O-470-13, O-470-13A, O-470-4 (Continental)	Continental	2R-0470-14 (I.P.B.)	1958 .

386		O	470	13A	3	O-470-13A, O-470-13B, O-470-4 (Continental)	Continental	2R-0470-13 (Overhaul Instructions)	1964 .
387		O	470	15	2	O-470-15 (Continental)	Continental	1-2R-0470-26 (Field Maint.)	1957 .
388		O	470	15	3	O-470-15 (Continental)	Continental	1-2R-0470-23 (Overhaul Instructions)	1958 .
389		O	470	15	4	O-470-15 (Continental)	Continental	1-2R-0470-24 (I.P.B.)	1959 .
390		O	470	7	3	O-470-7, O-470-11 (Continental)	Continental	2R-0470-3 (Overhaul Instructions)	1958 .
391		O	470	7	4	O-470-7, O-470-11 (Continental)	Continental	2R-0470-4 (I.P.B.)	1959 .
392		R	9A		1	R9A, GR9-A (Continental)	Continental	Operations Man.	
393		R	670		1	R-670 (Continental)	Continental	Operations Man., Includes Installation & Overhaul	
394		R	670	3	2	R-670-3, R-670-4, R-670-5 (Continental)	Continental	02-40AA-2 (Svc. Instructions)	1942 .
395		R	670	3	3	R-670-3, R-670-4, R-670-5 (Continental)	Continental	02-40AA-3 (Overhaul Instructions)	1943 .
396		R	670	4		R-670-4, W670-6N (Continental)	Continental	Operations, Maint. w/ Parts	
397		R	670	4		R-670-4, W670-6N (Continental)	Continental	Operations, Overhaul, Maint., Parts, Tool Cat.	

398		R	670	4	1	R-670-4, R-670-5, R-670-11 (Continental)	Continental	02-40AA-1 (Operations)	1943 .
399		R	670	4	4	R-670-4, R-670-5, R-670-6, R-670-11 (Continental)	Continental	02-40AA-4 (I.P.B.)	1943 .
400		R	670	4	2	R-670-4, R-670-5, R-670-6, R-670-11, R-670-11A (Continental)	Continental	02-40AA-2 (Svc. Instructions)	1945 .
401		R	670	4	3	R-670-4, R-670-5, R-670-6, R-670-11, R-670-11A (Continental)	Continental	02-40AA-3 (Overhaul Instructions)	1945 .
402		R	975	EC-2		R-975EC-2 (Continental, Tank Eng.)	Continental	Operations, Maint. Instructions	1942 .
403		W	670		3, 4	W-670, X-30009 (Continental)	Continental	Overhaul, Parts	1975 .
404		W	670	Series	1, 2, 4	W-670 (Series 6A, MA, Continental)	Continental	Operations. Maint., I.P.B.	
405		W	670		1, 2	W-670, W-6A, W-6N, W-6K, W-6M, W-16, W-17, W-23, W-24 (Continental Motors Corp.)	Continental	Operating, Maint. Instructions	12/56X

406		W	670	9A	1, 3, 4	W-670-9A (Continental)	Continental	Operations, Overhaul, Instructions, Parts (Used on Navy Landing Vehicles)	
407					2	Continental	Continental	Svc. Bulletins	1951 & Prior
408		R	670	4	2	R-670-4 (Continental)	Continental		3/41 X
409		O	470		3	O-470 (Series)	Continental	2R-0470-5 (Rev.)	4/56 X
410		O	470	11	2	O-470-11	Continental	02A-40EA-502 (Rev.)	1/52 X
411		O	470	11	4-Jan	O-470-11, O- 470-11A, O-470- 11B, O-470-15	Continental	55-2810-219-20P	10/71 X
412		O	470	11	4	O-470-11, O- 470-11A, O-470- 11B, O-470-15	Continental	2R-0470-24	3/73 X
413		O	470	13	3	O-470-13	Continental	02A-40EB-3	5/54 X
414		O	470	13	4	O-470-13	Continental	02A-40EB-4	11/53 X
415		O	470	13	2	O-470-13, O- 470-13A, O-470- 4	Continental	02A-40EB-2	11/56X
416		O	470	13	3	O-470-13, O- 470-13A, O-470- 4	Continental	02A-40EB-3 (Rev.)	5/64 X
417		O	470	13	4	O-470-13, O- 470-13A, O-470- 4	Continental	02A-40EB-4 (Rev.)	12/58X
418		O	470	13	4	O-470-13, O- 470-13A, O-470- 4	Continental	02A-40EB-4	12/58 X
419		O	470	15	3	O-470-15	Continental	2R-0470-23	1/58 X

420		O	470	15	4	O-470-15	Continental	2R-0470-24 (Rev.)	7/59 X
421		O	470	15	4	O-470-15	Continental	2R-0470-24	2/57 X
422		O	470	2	2	O-470-2	Continental	02A-40EC-502	2/57 X
423		O	470	2	4	O-470-2	Continental	02A-40EC-504	11/56X
424		O	470	2	4	O-470-2	Continental	02A-40EC-504 (Rev.)	8/57 X
425		O	470	7	2	O-470-7	Continental	02A-40EA-11	7/48 X
426		O	470	7	4	O-470-7	Continental	02A-40EA-4 (Rev.)	12/49Y
427		O	470	7	3	O-470-7, O-470-11	Continental	02A-40EA-3 (Rev.)	11/51X
428		O	470	7	3	O-470-7, O-470-11	Continental	02A-40EA-3 (Rev.)	1/58 X
429		O	470	7	4	O-470-7, O-470-11	Continental	02A-40EA-4	11/53X
430		O	470	7	4	O-470-7, O-470-11	Continental	02A-40EA-4 (Rev.)	5/79 X
431		O	470	11	3	O-470-7, O-470-11	Continental	02A-40EA-3	2/54 X
432	C	J	69	1400		CJ69-1400	Continental	#2179 (Spec.)	5/60 X
433	Y	J	69	T-17		YJ69-T-17	Continental	Specifications	11/55 X
434	Y	J	69	T-17	2	YJ69-T-17	Continental	2J-J69-26	2/57 X
435	Y	J	69	T-17	3	YJ69-T-17	Continental	2J-J69-23	4/57 X
436	Y	J	69	T-19	4	YJ69-T-19	Continental	2J-J69-14	2/55 X
437	Y	J	69	T-9		YJ69-T-9	Continental	Specifications	6/55 X
438	Y	J	69	T-9	2	YJ69-T-9, J69-T-9	Continental	Field Maint-No T/O #	4/57 X
439	Y	J	69	T-9	4	YJ69-T-9, J69-T-9	Continental	2J-J69-4	1/57 X
440		R	670	3	2	R-670-3, R-670-4, R-670-5	Continental	02-40AA-2	8/42 X
441		R	670	3	3	R-670-3, R-670-4, R-670-5	Continental	02-40AA-3	8/44 X
442		R	670	4	1	R-670-4, R-670-5, R-670-11	Continental	02-40AA-1	12/43X

443		R	670	4	2	R-670-4, R-670-5, R-670-11	Continental	02-40AA-2	1/44 X
444		R	670	4	4	R-670-4, R-670-5, R-670-6, R-670-11	Continental	02-40AA-4	11/43X
445		R	670	4	2	R-670-4, R-670-5, R-670-6, R-670-11, R-670-11A	Continental	02-40AA-2	7/45 X
446		R	670	4	3	R-670-4, R-670-5, R-670-6, R-670-11, R-670-11A	Continental	02-40AA-3	7/45 X
447		D	12		1	D-12 (Curtiss)	Curtiss	Eng. Handbook	1928 .
448		D	12	M	1 thru 3	D-12, D-12M, D-12C, D-12D, D-12E, D-12F (Curtiss)	Curtiss	Eng. Handbook, Operations, Overhaul	
449		D	12	M	1	D-12, D-12M, D-12C, D-12D, D-12E, D-12F (Curtiss)	Curtiss	Instruction	
450		V	2		1	V-2 (Curtiss)	Curtiss	Eng. Handbook	1917 .
451	O	X	5			OX-5 (Curtiss)	Curtiss	Repair Man., Handbook	
452	O	X	5			OX-5 (Curtiss)	Curtiss	Eng. Handbook	1918 .
453	O	X	5		4	OX-5 (Curtiss)	Curtiss	I.P.B. (Aeronautical Motor)	1917 .
454	O	X	5			OX-5, OX-6 (Curtiss)	Curtiss	Mechanic Man.	
455					1	Challenger (Curtiss)	Curtiss	Instructions Man.	
456					3, 4	Challenger (Curtiss)	Curtiss	Overhaul, Operations, Parts	1929 .

457					3, 4	Conqueror Eng. Man. (Curtiss)	Curtiss	Overhaul, Parts	1930 .
458	O	X	5			OX-5, OX-6 (Curtiss)	Curtiss	Eng. Handbook	1928 .
459		R	1750		1	R-1750 (Cyclone)	Cyclone	Instruction Man.	1928 .
460		R	1820	F	2	R-1820-F (Cyclone F-50)	Cyclone	Installation, Inspection, Maint.	1936 .
461			506		4	506 (Dart Turbine, Rolls Royce)	Dart Turbine, Rolls Royce	Schedule of Illustrated Spare Parts	1956 .
462					2	Gipsy Major (130 HP, DeHavilland)	DeHavilland	Care & Maint.	
463					4	Gipsy (Dehavilland)	DeHavilland	Parts Cat.	10/1932
464						Gipsy (Dehavilland)	DeHavilland	Installation Notes	1950 .
465						Gipsy (Dehavilland)	DeHavilland	Installation Notes	8/1950
466						Gipsy (Dehavilland)	DeHavilland	Notice To All Holders of Gipsy Technical & Modification News Sheets	3/1957
467					4	Gipsy Eng. (Dehavilland)	DeHavilland	Non-Illustrated Parts Cat. (British)	
468					2	Gipsy Major 10 (145 HP, DeHavilland)	DeHavilland	Maint. Man.	1947 .
469					4	Gipsy Major 1C (DeHavilland)	DeHavilland	Schedule of Spare Parts	

470					2	Gipsy Major 1C (Series, 140 HP, DeHavilland)	DeHavilland	Care & Maint.	
471					2	Gipsy Minor (Dehavilland)	DeHavilland	Care & Maint.	1939 .
472						Gipsy Queen 30, Mark II, (Degavilland)	DeHavilland	General Statement	1950 .
473						Gipsy Queen (30 & 70 Series Dehavilland)	DeHavilland	Spare Parts List	1/1958
474					2	Gipsy Queen II (210 HP, Dehavilland)	DeHavilland	Care & Maint.	
475					2	Gipsy Queen III (220 HP, Dehavilland)	DeHavilland	Care & Maint.	
476					4	Gipsy Queen (Series 30, 50, 70, Dehavillan)	DeHavilland	Illustrated Parts List	
477					1 thru 3	Gipsy Queen (Series 70, DeHavilland)	DeHavilland	Operations, Maint., Overhaul (Amended #25)	1947 .
478						Gipsy Queen (Series 70, DeHavilland)	DeHavilland	Hanbook Amendments (1 - 28)	6/1957
479		J	44	R-20	4	J44-R-20	Fairchild	02B-50BA-504 (Rev.)	2/55 X
480		J	44	R-20		J44-R-20, J44-R- 3	Fairchild	Brochure	8/49 X
481		J	44	R-26		J44-R-26	Fairchild	Spec.	3/56 X
482		J	44	R-3		J44-R-3	Fairchild	Spec.	2/56 X

483		J	44	R-3	4	J44-R-3	Fairchild	2J-J44-4 (Rev.)	8/59 X
484		J	44	R-3	4	J44-R-3	Fairchild	2J-J44-4 (Rev.)	8/59 X
485			447	B	2-Jan	447-B (Fairchild Caminez)	Fairchild	Description, Construction, Lubrication, Specs., Operations	
486			447	C	1	447-C (Fairchild Caminez)	Fairchild	Instruction Man.	
487		4AC	150		1, 4	4AC-150 (Franklin)	Franklin	Operator's Handbook	
488		4AC	150		2	4AC-150 (Franklin)	Franklin	ATC-150 (Svc. Man.)	
489		4AC	150		1, 4	4AC-150, 4AC-150A, 4AC-171 (Franklin)	Franklin	Operations w/ Parts List	
490		4AC	150		1, 4	4AC-150, 4AC-171 (Franklin)	Franklin	Operations w/ Parts List	
491		4AC	171		1 thru 4	4AC-171 (Franklin)	Franklin	Operations, Overhaul, Parts	
492		4AC	176		1 thru 4	4AC-176 (65 HP, Franklin)	Franklin	I.P.B, Svc., Overhaul	B
493		4AC	199		1 thru 4	4AC-199 (90 HP, Franklin)	Franklin	Operations, I.P.B., Overhaul	B
494		6A	335	B	1	6A-335-B, 6A-350C (Franklin)	Franklin	Operator's Handbook	

495		6A	335	B	3	6A-335-B, 6A-335-B1, 6A-350-C, 6A-350-C1, 6A-350-C2, 6A-350-D, 6A-350-D1, 6AS-335A, 6AS-335B, 5A-325B	Franklin	Overhaul Instructions	1968 .
496		6A	335	B	3	6A-335-B, 6A-335-B1, 6A-350-C, 6A-350-C1, 6A-350-C1A, 6A-350-C2, 6A-350-D, 6A-350-D1, 6A-350-D1A, 6AS-350-A (Franklin)	Franklin	Overhaul Man. (Franklin)	1968 .
497		6A4	150		1	335, 6A4-150-B3, 6A4-150-B-31, 6A4-165-B3 (Franklin)	Franklin	Operator's Instructions	
498		6A4	150	B3	4	6A4-150-B3 (Franklin)	Franklin	Non-Illustrated Parts List	
499		6A4	150	B3	4	6A4-150-B3, 6A4-145-A3 (Franklin)	Franklin	Non-Illustrated Parts List	
500		6A4	165	B3	4	6A4-165-B3 (Franklin)	Franklin	Non-Illustrated Parts List	
501		6A8	215	B9f	4	6A8-215-B8f, 6A8-215-B9F (Franklin)	Franklin	Non-Illustrated Parts List	

502		6A8	215	B8F	2, 3	6A8-215-B8F, 6A8-215-B9F (Franklin)	Franklin	Svc., Inspection, Maint., Overhaul	
503		6AC	264		1 thru 4	6AC-264, 6AC- 298 (Franklin)	Franklin		
504		6AS	150	B3	2	6AS-150-B3, 6AS-150-B31, 6AS-165-B3 (Franklin)	Franklin	Svc. Man.	
505		6V4	178	B32	4	6V4-178-B32, 6V4-178-B31 (Franklin)	Franklin	Parts List	
506		6V4	178	B32	3	6V4-178-B32, 6V4-178-B33, 6V4-200-C32, 6V4-200-C33, 6V-335-A, 6V- 335-B (Franklin)	Franklin	Overhaul	1964 .
507		6V4	178	B33	4	6V4-178-B33 (Franklin)	Franklin	Non-Illustrated Parts List	1953 .
508		6V4	300	C32	4	6VA-300-C32, 6VA-300-C33, 6V4-335-A, 6V4- 335-B (Franklin)	Franklin	Parts	
509	Y	O	335	5	2	YO-335-5, O- 335, O-335-5, O- 335-5A, O-335- 5B, O-335-6, O- 335-6B	Franklin	02A-70DB-2 (Rev.)	4/57 X

510	Y	O	335	5	3	YO-335-5, O-335, O-335-5, O-335-5A, O-335-5B, O-335-6, O-335-6B	Franklin	02A-70DB-3 (Rev.)	12/58 X
511	Y	O	335	5	4	YO-335-5, O-335, O-335-5, O-335-5A, O-335-5B, O-335-6, O-335-6B	Franklin	02A-70DB-4 (Rev.)	4/57 X
512		O	200	1	1	O-200-1 (Franklin)	Franklin	02-70AA-3 (Overhaul Man.)	1944 .
513		O	200	1	2	O-200-1 (Franklin)	Franklin	02-70A-2 (Svc. Instructions)	1944 .
514		O	200	5	2	O-200-5 (Franklin)	Franklin	02-70AB-2 (Svc. Instructions)	1944 .
515		O	200	5	3	O-200-5 (Franklin)	Franklin	02-70AB-3 (Overhaul Instructions)	1944 .
516		O	200	1		O-200-1	Franklin	00-35E-22	9/43 X
517		O	200	1	3	O-200-1	Franklin	02-70AA-3	1/44 X
518		O	200	5	2	O-200-5	Franklin	02-70AB-2	3/44 X
519		O	200	5	3	O-200-5	Franklin	02-70AB-3	1/44 X
520		O	200	5	4	O-200-5	Franklin	02-70AB-4	3/44 X
521		O	300	11	3	O-300-11, YO-300-11 (Franklin)	Franklin	02-70BA-3 (Overhaul Man.)	1945 .
522		O	300	11	4	O-300-11, YO-300-11 (Franklin)	Franklin	02-70BA-4 (I.P.B.)	1946 .
523		O	300	11	4	O-300-11, YO-300-11	Franklin	02-70BA-4	1/45 X
524		O	300	11	4	O-300-11, YO-300-11	Franklin	02-70BA-4	7/46 X

525		O	335		3	O-335 Series	Franklin	2R-0335-35	10/57X
526		O	335	1	2	O-335-1	Franklin	02-70DA-2	3/47 X
527		O	335	1	3	O-335-1	Franklin	02-70DA-3	3/47 X
528		O	335	1	4	O-335-1	Franklin	02-70DA-4	4/37 X
529		O	335	2	3	O-335-2, YO-335-5	Franklin	02A-70DB-3	3/51 X
530		O	335	2	4	O-335-2, YO-335-5	Franklin	02A-70DB-4	3/51 X
531		O	335	2	3	O-335-2, YO-335-5 (Franklin)	Franklin	02A-70DB-3 (Overhaul Instructions)	1951 .
532		O	335	2	4	O-335-2, YO-335-5 (Franklin)	Franklin	02A-70DB-4 (I.P.B.)	1951 .
533		O	335	2	2	O-335-2, YO-335-5, O-335-5, O-335-5A, O-335-6	Franklin	02A-70DB-2	6/53 X
534		O	335	2	3	O-335-2, YO-335-5, O-335-5, O-335-5A, O-335-6	Franklin	02A-70DB-3	6/53 X
535		O	335	3	2	O-335-3	Franklin	02A-70DA-2, 2R-0335-12 (Rev.)	6/49 X
536		O	335	3	3	O-335-3	Franklin	02A-70DA-3, 2R-0335-13 (Rev.)	12/50 X
537		O	335	3	4	O-335-3	Franklin	02A-70DA-4	6/49 X
538		O	335	3	4	O-335-3 (Franklin)	Franklin	1-2R-335-14 (I.P.B.)	1952 .
539		O	335	4	2	O-335-4	Franklin	02A-70DC-2	12/52 X
540		O	335	4	3	O-335-4	Franklin	02A-70DC-3	10/52 X
541		O	335	4	4	O-335-4	Franklin	02A-70DC-4 (Rev.)	1/55 X
542		O	335	4	4	O-335-4 (Franklin)	Franklin	02A-70DC-4 (I.P.B.)	1952 .

543		O	335	5	2	O-335-5, O-335-5A, O-335-6, O-335-6B, YO-335-5 (Franklin)	Franklin	1-2R-0335-2 (Svc. Instructions)	
544		O	340	G5	3	O-340-G5	Franklin	02A-15BE-3	11/60X
545		O	405	9	3	O-405-9 (Franklin)	Franklin	02-70CA-3 (Overhaul Man.)	1945 .
546		O	405	9	4	O-405-9 (Franklin)	Franklin	02-70CA-4 (I.P.B.)	1945 .
547		O	405	9		O-405-9, 6ACV-403 (Franklin)	Franklin	Eng. Specs.	1943 .
548		O	405	1	3	O-425-1 (Franklin)	Franklin	02A-70EB-3 (Overhaul Man.)	1952 .
549		O	425	9	4	O-425-9 (Franklin)	Franklin	02A-70EA-4 (I.P.B.)	1952 .
550		6	180		4	6-180, 6-220 (Franklin)	Franklin	Non-Illustrated Parts List	
551						150 HP (Franklin)	Franklin	General Specs., Description	
552					1	Sport 4, 4A, 4B (Franklin)	Franklin	Assy. Man.	
553		O	425	1	2	O-425-1	Franklin	02A-70EB-2	12/52X
554		O	425	1	3	O-425-1	Franklin	02A-70EB-3	3/54 X
555		O	425	5	3	O-425-5	Franklin	02-70EA-3	2/47 X
556		O	425	5	4	O-425-5	Franklin	02A-70EA-4	6/48 X
557		O	425	9	2	O-425-9	Franklin	02A-70EA-2	7/51 X
558		O	425	9	3	O-425-9	Franklin	02A-70EA-3	7/51 X
559		O	425	9	4	O-425-9	Franklin	02A-70EA-4	4/52 X

560		6A4	125		1	6A4-125-A3, 6A4-135-A3, 6A4-145-A3, 6A4-130-A3, 6A4-140-B3 (335)	Franklin	Operator's Instructions	
561		O	335	3	4	O-335-3	Franklin	02A-70DA-4 (Rev.)	1/49 X
562		T	76	G-10	4	T76-G-10, T76- G-12	Garrett	2J-T76-4 (Parts)	5/72 X
563	T	P	E-331	1	1-Feb	TPE331-1-101F	Garrett	2J-T331-12 (Maint. Instructions)	12/71 X
564		PT	6A	20	4	PT-6A-20, T-74- CP-700, T-74, CP-702	Garrett	55-2840-232-34P (Maint. Repair Parts)	10/72X
565		PT	6A	20	2	PT-6A-20, T-74- CP-700, T-74-CP- 702	Garrett	55-2840-232-30P	7/72 X
566		PT	6A	20	2	PT-6A-20, T-74- CP-700, T-74-CP- 702	Garrett	55-2840-232-34P	12/70X
567		MK	1	A	'2-1	MK-1A (Genet Major, Armstrong Siddeley, 7- cylinder)	Gener Major, Armstrong Siddeley	7 Cylinder, Instruction Man.	
568		BJ	805		3	CJ-805 (General Electric)	General Electric	Turbojet Overhaul Man. (Volume 2)	1966 .
569		CF	6	50C	2	CF6-50C (General Electric)	General Electric	Trouble Shooting (By Eastern Airlines, Eng. Used In Airbus A-300)	1977 .

570		CJ	610			CJ-610 (General Electric)	General Electric	Training Guide	
571		CJ	805		3, 4	CJ-805, CJ-805-3 (General Electric)	General Electric	Accessory Overhaul, Parts	
572		CJ	805	3	1	CJ-805-3 (General Electric)	General Electric	GEI 67826 (Operating Instructions)	1960 .
573		CJ	805	3	4	CJ-805-3 (General Electric)	General Electric	GEI 67801 (I.P.B.)	1960 .
574		CJ	805	3	4	CJ-805-3, CJ-805-3A (General Electric)	General Electric	GEI 67801 (I.P.B.)	1966 .
575		F	101	GE	4	F101-GE-102	General Electric	2J-F101-4	5/89 X
576		F	110	GE	4	F110-GE-129	General Electric	2J-F110-14	6/1992
577		F	110	GE	4	F110-GE-129	General Electric	2J-F110-14	6/92 X
578		F	404	GE	4	F404-GE-400	General Electric	02B-105AMB-4	5/1982
579		F	404	GE	4	F404-GE-400	General Electric	02B-105AMB-4	5/82 X
580		GEI	1002	A	1	GEI-1002A (General Electric)	General Electric	Supercharger Installation	1944 .
581	Y	J	79	GE-1		YJ79-GE-1, YJ79-GE-3	General Electric	Training Guide	4/56 X
582	Y	J	79	GE-1	4	YJ79-GE-1, J79-GE-3, J79-GE-3A	General Electric	2J-J79-4	1/59 X

583	Y	J	79	GE-1	3	YJ79-GE-1, J79-GE-3, J79-GE-3A	General Electric	2J-J79-3	2/59 X
584	Y	J	79	GE-1	2	YJ79-GE-1, J79-GE-3, J79-GE-3A (General Electric)	General Electric	2J-J79-6 (Maint., Replacement)	1959 .
585	Y	J	79	GE-1	4	YJ79-GE-1, J79-GE-3A, J79-GE-5, J79-GE-5A, J79-GE-5B, J79-GE-7	General Electric	2J-J79-4	2/61 X
586	Y	J	79	GE-1	4	YJ79-GE-1, YJ79-GE-3B, YJ79-GE-5B, YJ79-GE-7	General Electric	2J-J79-4	10/63 X
587	Y	J	79	GE-1	4	YJ79-GE-1, YJ79-GE-3B, YJ79-GE-5B, YJ79-GE-7	General Electric	2J-J79-4	7/63 X
588	Y	J	79	GE-2	4	YJ79-GE-2, J79-GE-2, J79-GE-2A	General Electric	02B-105AGA-504	7/64 X
589	Y	J	79	GE-5	4	YJ79-GE-5, J79-GE-5, YJ79-GE-7, J79-GE-7	General Electric	2J-J79-14	8/58 X
590	Y	J	79	GE-5	3	YJ79-GE-5, J79-GE-5, YJ79-GE-7, J79-GE-7, J79-GE-5A, J79-GE-5B	General Electric	2J-J79-13	3/60 X
591	Y	J	85	GE-1	2	YJ85-GE-1	General Electric	2J-J85-36	6/59 X

592	Y	J	85	GE-1	4	YJ85-GE-1	General Electric	2J-J85-34	4/61 X
593	Y	J	85	GE-1	2	YJ85-GE-1 (General Electric)	General Electric	2J-J85-36 (Field Maint.)	1959 .
594	Y	J	85	GE-1	4	YJ85-GE-1 (General Electric)	General Electric	2J-J85-34 (I.P.B.)	1959 .
595		J	35	C-3	2	J35-C-3, J35-A-5, J35-A-9, J35-A-11, J35-A-13, J35-A-15, J35-GE-7, J35-GE-9, J35-GE-11, J35-GE-13	General Electric	02B-105CA-2 (Rev.)	3/49 Y
596		J	35	C-3	2	J35-C-3, J35-A-5, J35-A-15, J35-GE-9	General Electric	02B-105CB-2 (Rev.)	3/49 Y
597		J	35	C-3	4	J35-C-3, J35-A-5, J35-A-9, J35-A-11, J35-A-13, J35-GE-9	General Electric	02B-105CB-4	11/48 Y
598		J	35	C-34C	3	J35-C-34C, J35-A-54C, J35-A-15AC, J35-GE-7	General Electric	2J-J35-23	2/50 X
599		J	35	GE-9	3	J35-GE-9, J35-A-4, J35-A-9, J35-A-11, J35-A-13AC	General Electric	2J-J35-33 (Rev.)	6/54 X
600		J	35	GE-9	3	J35-GE-9, J35-A-4, J35-A-9, J35-A-11, J35-A-13AC	General Electric	2J-J35-33B	5/54 X

601		J	47	7	3	J47-7, J47-9, J47-11, J47-13, J47-15, J47-19 (General Electric)	General Electric	02B-105EA-3 (Overhaul Man.)	1951 .
602		J	47	GE-17	2	J47-GE-17, GE-17B	General Electric	Specialists Guide	
603		J	47	GE-17	2	J47-GE-17, J47-GE-17B, J47-GE-33	General Electric	2J-J47-12 (Rev.)	5/56 X
604		J	47	GE-17	2	J47-GE-17, J47-B, J47-B-33 (General Electric)	General Electric	2J-J47-12 (Svc. Instructions)	1956 .
605		J	47	GE-17	3	J47-GE-17, J47-GE-17B, J47-GE-33 (General Electric)	General Electric	2J-J47-13 (Overhaul Instructions, Sup. 351-628)	2/76 X
606		J	47	GE-17B	2	J47-GE-17B, J47-GE-33	General Electric	2J-J47-16 (Rev.)	5/63 X
607		J	47	GE-17B	2	J47-GE-17B, J47-GE-33	General Electric	2J-J47-16 (Technical, Maint., Replace)	5/73 X
608		J	47	GE-17B	2	J47-GE-17B, J47-GE-33	General Electric	2J-J47-16 (Field Maint., Replace)	4/64 X
609		J	47	GE-17B	4	J47-GE-17B, J47-GE-33	General Electric	2J-J47-14 (Rev.)	7/69 X
610		J	47	GE-17B	4	J47-GE-17B, J47-GE-33	General Electric	2J-J47-14	8/67 X
611		J	47	GE-17B	4	J47-GE-17B, J47-GE-33	General Electric	2J-J47-14 (Rev.)	10/64 Y
612		J	47	GE-17B	3	J47-GE-17B, J47-GE-33	General Electric	2J-J47-13 (Rev.)	5/63 Y

613		J	47	GE-17B	3	J47-GE-17B, J47-GE-33	General Electric	2J-J47-13	2/76 X
614		J	47	GE-2	2	J47-GE-2	General Electric	02B-105AED-2	9/53 X
615		J	47	GE-23	3	J47-GE-23, J47-GE-25, J47-GE-27	General Electric	02B-105EC-3 (Rev.)	7/53 X
616		J	47	GE-23	4	J47-GE-23, J47-GE-25, J47-GE-27	General Electric	2J-J47-24	11/53 X
617		J	47	GE-23		J47-GE-23, J47-GE-25, J47-GE-27 (General Electric)	General Electric	GEI 41454 (Training Man.)	1953 .
618		J	47	GE-23	2	J47-GE-23, J47-GE-25, J47-A-27, J47-ST-24, J47-STA, J47-PM-25-A (General Electric)	General Electric	2J-J47-26 (Field Maint, Replacement)	1961 .
619		J	47	GE-23	2	J47-GE-23, J47-GE-25, J47-GE-25A, J47-GE-27, J47-ST-25, J47-ST-25A, J47-PM-25, J47-PM-25A	General Electric	2J-J47-26 (Rev.)	9/74 X

620		J	47	GE-23	2	J47-GE-23, J47-GE-25, J47-GE-25A, J47-GE-27, J47-ST-25, J47-ST-25A, J47-PM-25, J47-PM-25A	General Electric	2J-J47-22 (Rev., Sups.)	3/71 X
621		J	47	GE-23	4	J47-GE-23, J47-GE-25, J47-GE-25A, J47-GE-27, J47-ST-25, J47-ST-25A, J47-PM-25, J47-PM-25A	General Electric	2J-J47-24 (Rev.)	5/75 X
622		J	47	GE-23	4	J47-GE-23, J47-GE-25, J47-GE-25A, J47-GE-27, J47-ST-25, J47-ST-25A, J47-PM-25, J47-PM-25A	General Electric	2J-J47-24 (Rev.)	5/75 X
623		J	47	GE-23	2	J47-GE-23, J47-GE-25, J47-GE-25A, J47-GE-27, J47-ST-25, J47-ST-25A, J47-PM-25	General Electric	2J-J47-22 (Rev.)	5/73 X
624		J	47	GE-23	3	J47-GE-23, J47-GE-25, J47-GE-25A, J47-GE-27, J47-ST-25, J47-ST-25A, J47-PM-25	General Electric	2J-J47-23	9/76 Y

625		J	47	GE-23	2	J47-GE-23, J47-GE-25, J47-GE-27	General Electric	02B-105EC-2	7/53 X
626		J	47	GE-27	3	J47-GE-27	General Electric	2J-J47-23	7/65 Y
627		J	47	GE-7	4	J47-GE-7, J47-GE-9, J47-GE-11, J47-GE-13, J47-GE-15, J47-GE-19 (General Electric)	General Electric	2J-J47-4 (I.P.B.)	1955 .
628		J	47	GE-7	2	J47-GE-7, J47-GE-7A, J47-GE-9, J47-GE-9A, J47-GE-11, J47-GE-13, J47-GE-15, J47-GE-19	General Electric	2J-J47-36	4/57 X
629		J	47	GE-7	4	J47-GE-7, J47-GE-9, J47-GE-11, J47-GE-13, J47-GE-15, J47-GE-19	General Electric	2J-J47-4 (I.P.B.)	1/55 X
630		J	47	GE-7	4	J47-GE-7, J47-GE-9, J47-GE-11, J47-GE-13, J47-GE-15, J47-GE-19	General Electric	2J-J47-4	1/55 X

631		J	47	ST-25	3	J47-ST-25, J47-ST-25A, J47-GE-23, J47-GE-25, J47-GE-25A, J47-GE-27, J47-PM-25, J47-PM-25A	General Electric	2J-J47-23 *Technical Man., Overhaul Instructions)	5/65 X
632		J	47	ST-25	3	J47-ST-25, J47-ST-25A, J47-GE-23, J47-GE-25, J47-GE-25A, J47-GE-27, J47-PM-25, J47-PM25A	General Electric	2J-J47-23S-5 (Overhaul Instructions)	8/77 X
633		J	73	GE-3		J73-GE-3, J73-GE-3A, J73-GE-3D (General Electric)	General Electric	GEI 44512 (Training Guide)	1957 .
634		J	73	GE-3	2	J73-GE-3, J73-GE-3A, J73-GE-3D, J73-GE-3E	General Electric	2J-J73-6 (Rev.)	6/61 X
635		J	73	GE-3	3	J73-GE-3, J73-GE-3D, J73-GE-3A, J73-GE-3E	General Electric	2J-J73-3 (Rev.)	5/63 X
636		J	73	GE-3D	3	J73-GE-3D, J73-GE-3E, J73-GE-3F	General Electric	2J-J73-3	7/65 X
637		J	79		2	J79	General Electric	Turbojet Performance	9/55 X
638		J	79		4	J79	General Electric	2J-J79-36	
639		J	79		3	J79 (Series)	General Electric	2J-J79-5	9/59 X

640		J	79	36	4	J79-36	General Electric	2J-J79-36	
641		J	79	3A	2	J79-3A	General Electric	GEI67802	8/59 X
642		J	79	8	1, 2	J79-8, J79-8A (General Electric)	General Electric	GEI 67841 (Operations, Svc. Instructions)	1964 .
643		J	79	8A	1, 2	J79-8A, J79-8B (General Electric)	General Electric	GEI 67841 (Operations, Svc. Instructions)	1965 .
644		J	79	GE-10	2	J79-GE-10	General Electric	02B-105AGD-6-1	7/66 X
645		J	79	GE-11A	4	J79-GE-11A	General Electric	2J-J79-34	5/62 X
646		J	79	GE-11A	4	J79-GE-11A, J79-OEL-11A	General Electric	2J-J79-34	9/69 X
647		J	79	GE-15	4	J79-GE-15	General Electric	2J-J79-44	1/70 X
648		J	79	GE-15	2	J79-GE-15, J79-GE-15A, J79-GE-17, J79-GE-17A, J79-GE-17C	General Electric	2J-J79-86-8	12/79 X
649		J	79	GE-17	4	J79-GE-17	General Electric	2J-J79-54	2/70 X
650		J	79	GE-19	2	J79-GE-19	General Electric	2J-J79-66	9/68 X
651		J	79	GE-19	4	J79-GE-19	General Electric	2J-J79-64	8/69 X
652		J	79	GE-2	2	J79-GE-2	General Electric	02B-105AGA-502	8/64 X
653		J	79	GE-2	2	J79-GE-2 (General Electric)	General Electric	02B-105AGA-502 (Svc. Instructions)	1962 .

654		J	79	GE-2	3	J79-GE-2, J79-GE-2A	General Electric	02B-105AGA-503	12/62 X
655		J	79	GE-3	2	J79-GE-3	General Electric	Installation Man.	1/59 X
656		J	79	GE-3A	2	J79-GE-3A, J79-GE-3B, J79-GE-1	General Electric	2J-J79-6 (Rev.)	3/64 X
657		J	79	GE-3B	3	J79-GE-3B	General Electric	2J-J79-3 (Rev.)	6/70 X
658		J	79	GE-3B	4	J79-GE-3B, J79-GE-5B, J79-GE-7A	General Electric	2J-J79-4	10/67 X
659		J	79	GE-3B	4	J79-GE-3B, J79-GE-5B, J79-GE-7A	General Electric	2J-J79-4	10/65 X
660		J	79	GE-5	3	J79-GE-5, J79-GE-5A, J79-GE-7	General Electric	2J-J79-13	3/61 X
661		J	79	GE-5	2	J79-GE-5, J79-GE-5A, J79-GE-5B, J79-GE-7	General Electric	2J-J79-16	4/61 X
662		J	79	GE-5C	4	J79-GE-5C	General Electric	2J-J79-14	5/66 X
663		J	79	GE-5C	4	J79-GE-5C	General Electric	2J-J79-14	7/65 X
664		J	79	GE-7A	6	J79-GE-7A, J79-GE-7B, J79-GE-11A, J79-GE-11B, J79-DEL-11A, J79-DEL-11B, J79-GE-15, J79-GE-15A, J79-GE-17A	General Electric	2J-J79-79 (Inspection Man.)	7/75 X

665		J	79	GE-8	4	J79-GE-8 (General Electric)	General Electric	02B-105AGC-504 (I.P.B.)	1962 .
666		J	79	GE-8	2	J79-GE-8, J79- GE-8A, J79-GE- 8B	General Electric	02B-105AGC-6	4/66 X
667		J	79	GE-8	3	J79-GE-8, J79- GE-8A, J79-GE- 8B	General Electric	02B-105AGC-503	4/66 X
668		J	79	GE-8	4	J79-GE-8, J79- GE-8A, J79-GE- 8B	General Electric	02B-105AGC-504	7/66 X
669		J	79	GE-8B	4	J79-GE-8B, J79- GE-8C, J79-GE- 8D, J79-GE-10, J79-GE-10A, J79- GE-10B	General Electric	02B-105AGD-4	5/82 X
670		J	85	GE-13	4	J85-GE13	General Electric	2J-J85-64 (Rev.)	3/71 X
671		J	85	GE-13	2	J85-GE-13	General Electric	2J-J85-66-2 (Rev.)	3/71 X
672		J	85	GE-13	2	J85-GE-13	General Electric	2J-J85-66-2	9/70 X
673		J	85	GE-13	3	J85-GE-13	General Electric	2J-J85-66-2	3/72 X
674		J	85	GE-13	3	J85-GE-13	General Electric	2J-J85-66-2	9/71 X
675		J	85	GE-13	4	J85-GE-13	General Electric	2J-J85-64	5/66 X
676		J	85	GE-13	4	J85-GE-13	General Electric	2J-J85-64	9/70 X
677		J	85	GE-13	2	J85-GE-13, J85- GE-13C, J85-GE- 13D	General Electric	2J-J85-66-1	3/76 X

678		J	85	GE-13	2	J85-GE-13, J85-GE-13C, J85-GE-13D	General Electric	2J-J85-66-1	3/72 X
679		J	85	GE-13	2	J85-GE-13, J85-GE-13C, J85-GE-13D	General Electric	2J-J85-66-1	6/72 X
680		J	85	GE-13	2	J85-GE-13, J85-GE-13C, J85-GE-13D	General Electric	2J-J85-66-1	12/72 X
681		J	85	GE-13	3	J85-GE-13, J85-GE-13C, J85-GE-13D	General Electric	2J-J85-66-2	9/72 X
682		J	85	GE-13	4	J85-GE-13, J85-GE-13C, J85-GE-13D	General Electric	2J-J85-64	5/78 X
683		J	85	GE-13	4	J85-GE-13, J85-GE-13C, J85-GE-13D	General Electric	2J-J85-64 (Rev.)	12/72 X
684		J	85	GE-13	4	J85-GE-13, J85-GE-13C, J85-GE-13D	General Electric	2J-J85-64 (Rev.)	9/72 X
685		J	85	GE-13	4	J85-GE-13, J85-GE-13C, J85-GE-13D	General Electric	2J-J85-64 (Rev.)	6/72 X
686		J	85	GE-13	4	J85-GE-13, J85-GE-13C, J85-GE-13D	General Electric	2J-J85-64 (Rev.)	3/72 X
687		J	85	GE-13	2	J85-GE-13, J85-GE-13C, J85-GE-13D	General Electric	2J-J85-66-1	12/71 X
688		J	85	GE-13	3	J85-GE-13, J85-GE-13C, J85-GE-13D	General Electric	2J-J85-66-2	9/75 X

689		J	85	GE-13	3	J85-GE-13, J85-GE-13C, J85-GE-13D	General Electric	2J-J85-66-2	12/72 X
690		J	85	GE-13	3	J85-GE-13, J85-GE-13C, J85-GE-13D	General Electric	2J-J85-66-2	3/73 X
691		J	85	GE-13	4	J85-GE-13, J85-GE-13C, J85-GE-13D	General Electric	2J-J85-64 (Rev.)	12/71 X
692		J	85	GE-13C	4	J85-GE-13C, J85-GE-13D	General Electric	2J-J85-64 (Rev.)	9/71 X
693		J	85	GE-13C	4	J85-GE-13C, J85-GE-13D	General Electric	2J-J85-64 (Rev.)	6/71 X
694		J	85	GE-13C	4	J85-GE-13C, J85-GE-13D	General Electric	2J-J85-64 (Rev.)	9/71 X
695		J	85	GE-17	4	J85-GE-17, J85-GE-17A	General Electric	2J-J85-74	4/83 X
696		J	85	GE-17	3	J85-GE-17, J85-GE-17A, J85-GE-4A, J85-GE-4B	General Electric	2J-J85-76-2	9/80 Y
697		J	85	GE-21	3	J85-GE-21	General Electric	2J-J85-93	12/75 X
698		J	85	GE-21	4	J85-GE-21	General Electric	2J-J85-94	11/75 X
699		J	85	GE-21	4	J85-GE-21, J85-GE-21A, J85-GE-21B	General Electric	2J-J85-94	6/83 X
700		J	85	GE-21	2	J85-GE-21, J85-GE-21A	General Electric	2J-J85-96-1	11/76 X
701		J	85	GE-3	2	J85-GE-3	General Electric	2J-J85-16	8/61 X
702		J	85	GE-3	4	J85-GE-3	General Electric	2J-J85-14	5/60 X

703		J	85	GE-3	3	J85-GE-3 (General Electric)	General Electric	2J-J85-13 (Overhaul Man.)	1960 .
704		J	85	GE-4	2	J85-GE-4	General Electric	2J-J85-75	9/69 X
705		J	85	GE-4	3	J85-GE-4, J85-GE-4A, J85-GE-17, J85-GE-17A	General Electric	2J-J85-76-2	10/70 X
706		J	85	GE-5A	4	J85-GE-5A, J85-GE-5B	General Electric	2J-J85-54	7/65 X
707		J	85	GE-5F	4	J85-GE-5F, J85-GE-5G, J85-GE-5H, J85-GE-5J, J85-GE-5K, J85-GE-5L	General Electric	2J-J85-54	8/81 X
708		J	85	GE-7	2	J85-GE-7	General Electric	2J-J85-46	12/65 X
709		J	85	GE-7	4	J85-GE-7	General Electric	2J-J85-44	12/75 X
710		J	85	GE-7	2	J85-GE-7, J85-GE-5, YJ85-GE-5	General Electric	2J-J85-26	12/60 X
711		J	85	GE-7	4	J85-GE-7, J85-GE-5, YJ85-GE-5	General Electric	2J-J85-24	8/61 X
712	C	T	58	100	4	CT58-100, CT58-110 (GE)	General Electric	SEI-100 (Parts)	11/90X
713	C	T	58	110		CT58-110 (GE)	General Electric	Training Guide	1960 X
714	C	T	58	140	4	CT58-140 (GE)	General Electric	SEI-181GE (Parts Cat.)	10/84X
715		T	58	GE-1	3-Jan	T58-GE-1	General Electric	2J-T58-3 (Overhaul Man., w/ Revs.)	2/86 X

716		T	58	GE-1	2-Jan	T58-GE-1, GE-3	General Electric	2J-T58-6 (Intermediate Maint. Man.)	11/72X
717		T	58	GE-1	2	T58-GE-1, T58-GE-3, T58-GE-8B, T55-GE-8C	General Electric	2J-T58-2 (Svc. Instructions)	4/66 X
718		T	58	GE-1	4	T58-GE-1, T58-GE-3, T58-GE-8B, T58-GE-8C	General Electric	2J-T58-4 (Parts)	9/66 X
719		T	58	GE-1	4	T58-GE-1, T58-GE-3, T58-GE-8B, T58-GE-8E, T58-GE-8F	General Electric	2J-T58-4 (Parts)	12/69X
720		T	58	GE-10	4	T58-GE-10	General Electric	02B-105AHC-4 (Parts, Rev.)	3/66 X
721		T	58	GE-10	4	T58-GE-10	General Electric	02B-105AHC-4 (Parts)	12/65X
722		T	58	GE-10	2-Jan	T58-GE-10, T58-GE-400	General Electric	02B-105AHC-6-1 (Maint. Man., Rev.)	9/75 X
723		T	58	GE-10	2-Jan	T58-GE-10, GE-400	General Electric	02B-105AHC-6-1 (Maint. Man.)	11/74X
724		T	58	GE-5	4	T58-GE-5	General Electric	2J-T58-14 (Parts)	3/72 X
725		T	58	GE-5	2-Jan	T58-GE-5, T58-GE-10	General Electric	2J-T58-16-1 (Maint. Man.)	6/68 X
726		T	58	GE-5	2-Jan	T58-GE-5, T58-GE-10	General Electric	2J-T58-16-2 (Maint. Man., Rev.)	10/75X
727		T	58	GE-5	2-Jan	T58-GE-5, T58-GE-10	General Electric	2J-T58-16-2 (Maint. Instructions)	5/75 X
728		T	58	GE-5	4	T58-GE-5, T58-GE-10	General Electric	2J-T58-14 (Parts, Rev.)	12/66X
729		T	58	GE-5	4	T58-GE-5, T58-GE-10	General Electric	2J-T58-14 (Parts)	9/66 X

730		T	58	GE-5	4	T58-GE-5, T58-GE-100	General Electric	2J-T58-14 (Parts)	6/80 X
731		T	58	GE-5	4	T58-GE-5, T58-GE-100	General Electric	2J-T58-14 (Parts)	8/79 X
732		T	58	GE-5	4	T58-GE-5, T58-GE-100	General Electric	2J-T58-14 (Parts)	5/79 X
733		T	58	GE-6A	3	T58-GE-6A, T58-GE-6	General Electric	02B-105AHA-503 (Overhaul Instructions)	6/61 X
734		T	58	GE-8		T58-GE-8, CT58-110 (General Electric)	General Electric	SEI-106 (Training Guide)	
735		T	58	GE-8B	2	T58-GE-8B, T58-GE-8C	General Electric	02B-105AHB-2 (Svc. Instructions)	4/63 X
736		T	64	GE		T64-GE	General Electric	Brochure	1963 X
737		T	64	GE-3	4	T64-GE-3	General Electric	2J-T64-4	5/71 X
738		T	64	GE-3		T64-GE-3, T64-GE-6B	General Electric	2J-T64-6-2 (Volume 2-6, Rev.)	11/70X
739		T	64	GE-3		T-64-GE-3, T64-GE-6, T64-GE-6A, T64-GE-6B, T64-GE-6C	General Electric	2J-T64-6-1 (Volume 1, Rev.)	7/67 X
740		T	64	GE-6	2-Jan	T64-GE-6	General Electric	02B-105AJA-6 (Maint. Instructions)	1/65 X
741		T	64	GE-6	4	T64-GE-6, T64-GE-6A	General Electric	02B-105AJA-4 (Parts)	4/66 X
742		T	64	GE-6		T64-GE-6, T64-GE-6A, T64-GE-6B, T64-GE-6C	General Electric	2J-T64-6-2 (Volume 2, Rev.)	8/67 X

743		T	64	GE-6B	2-Jan	T64-GE-6B	General Electric	02B-105AJA-6-1 (Maint. Instructions)	11/71X
744		T	64	GE-6B	2-Jan	T64-GE-6B	General Electric	02B-105AFA-6-1 (Maint. Instructions)	8/70 X
745		T	64	GE-7	4	T64-GE-7	General Electric	2J-T64-14 (Rev.)	8/72 X
746		T	64	GE-7	4	T64-GE-7, T64-GE-7A	General Electric	2J-T64-14	9/81 X
747		T	64	GE-7	3	T64-GE-7, T64-GE-413, T64-GE-413A, T64-GE-415	General Electric	2J-T64-13 (Rev.)	12/75X
748		T	64	GE-7	3	T64-GE-7, T64-GE-413, T64-GE-413A, T64-GE-415	General Electric	2J-T64-13	12/73X
749		T	700	GE-700	2-Jan	T700-GE-700	General Electric	2J-T700-2 (Maint. Instructions)	4/82 X
750		T	700	GE-700	2-Jan	T700-GE-700, T700-GE-701, T700-GE-701C	General Electric	2J-T700-6, 55-2840-248-23 (Maint. Man.)	10/96X
751		T	700	GE-700	2-Jan	T700-GE-700, T700-GE-701, T700-GE-701C	General Electric	2J-T700-6, 55-2840-248-23 (Maint. Man.)	2/95 X
752		T	31		2	T-31	General Electric	02-105DA-2 (Propeller Dr., Svc. Instructions, Turbine)	10/45Y
753		T	31		4	T-31	General Electric	02-105DA-4 (Propeler Dr., Parts Cat., Turbine)	10/45X

754		T	64	S2		T64, T64-S2, T64-P2, T64-S4A, T64-P4, T64-S5A	General Electric	Brochure, Rev.	5/64 X
755		J	31	5	2	J31-5, J31-7	General Electric	02-105AA-2 (Svc. Instructions)	7/1945
756		J	31	9	4	J31-9, J-31-11	General Electric	02-105BA-4	4/45 X
757		J	47		3	J47 (Series)	General Electric	2J-J47-5 (Rev.)	6/64 X
758		J	47		3	J47 (Series)	General Electric	2J-J47-5 (Rev.)	6/62 X
759		J	31	1	10	J31-1, J31-3, J31-5, J31-7, I16-1, I16-3, I16-5, I16-7	General Electric	02-105AA-10 (Installation of Vent Line)	5/1945
760						Genet (Armstrong Siddeley, 5-cylinder)	Genet	Instructional Man.	
761					1	B2 (100 HP, 9 Cyl. Gnome & LeRhone)	Gnome & LeRhone	Monosoupape Instruction Man.	
762					2	Gnome & LeRhone (80 HP Eng.)	Gnome & LeRhone	Svc. Man.	1915 .
763					1, 3	Gnome (80 HP, Gnome & LeRhone)	Gnome & LeRhone	Operation, Overhaul	
764						Gnome (9 Cyl., Rotary)	Gnome & LeRhone		

765					1	LeRhone (80 HP, 9 Cyl., Gnome & LeRhone)	Gnome & LeRhone	Instructions	1919 .
766					2	LeRhone (Type J, 110 HP, 9 Cyl., Gnome & LeRhone)	Gnome & LeRhone	Care & Instructions	1919 .
767					2	Monocoupape (Gnome & LeRhone)	Gnome & LeRhone	Svc. Man.	
768					1	Monosoupape (Type B2, 100 HP, 9 Cyl., Gnome & LeRhone)	Gnome & LeRhone	Operation, Overhaul	
769					1	Series 3A, 150 HP (Hispano Suiza)	Hispano Suiza	Care & Operation	1917 .
770					1, 2	Series 4A, Model A-1-E, 150 HP (Hispano Suiza)	Hispano Suiza	Care & Operation	1918 .
771					1, 2	Series 6H, Model H, 300 HP (Hispano Suiza)	Hispano Suiza	Care & Operation	1918 .
772					1	Worseley Viper (W.4A Type) 180 HP (Hispano Suiza)	Hispano Suiza	# 551 (Instruction Man.)	

773		L	4		2	L-4, L-5, L-6 (Jacobs)	Jacobs	Svc. Bulletins	
774		L	4	MB	1	L-4MB (Jacobs)	Jacobs	Pilot's Instruction Chart	
775		L	4	MB	4	L-4MB (Jacobs)	Jacobs	I.P.B.	1941 .
776		L	4	MB	4	L-4MB (Jacobs)	Jacobs	Non-Illustrated Tools & Parts List	1948 .
777		L	4	MB	2	L-4MB, L-6MB (Jacobs)	Jacobs	Operations. Maint. Man.	
778		L	4	MB	3	L-4MB, L-6MB (Jacobs)	Jacobs	Factory Version Overhaul Man.	
779		L	4	MB	1	L-4MB, L-6MB, R-755A (Jacobs)	Jacobs	Operations Man.	1946 .
780		L	6	MB	1	L-6MB (Jacobs)	Jacobs	Pilot's Instruction Chart	
781		R	755		3	R-755 (Series, Jacobs)	Jacobs	SE2-2-1-15-Ignition (Overhaul Changes)	1956 .
782		R	755	9	2	R-755-9 (Jacobs)	Jacobs	02-30AC-2 (Svc. Instructions)	1944 .
783		R	755	9	3	R-755-9 (Jacobs)	Jacobs	02-30AC-3 (Overhaul Instructions)	1944 .
784		R	755	9	4	R-755-9 (Jacobs)	Jacobs	02-30AC-4 (I.P.B.)	1944 .
785		R	755	A	3	R-755-A (Series, Jacobs)	Jacobs	Overhaul, Table of Limits	
786		R	755	A		R-755-A, (300HP, Jacobs)	Jacobs	Operations, Care, Maint.	1948 .
787		R	755	A	3	R-755-A, R-755- B (Jacobs)	Jacobs	Overhaul Man.	1961 .

788		R	755	A	4	R-755-A, R-755-B (Jacobs)	Jacobs	I.P.B.	1955 .
789		R	755	A2	3	R-755-A2 (Jacobs)	Jacobs	2R-R755-3 (Overhaul Man.)	1957 .
790		R	755	A2	4	R-755-A2 (Jacobs)	Jacobs	2R-R755-4 (I.P.B.)	1958 .
791		R	755		2	R-755, R-915	Jacobs	02-30-1 (Table of Limits)	12/44X
792		R	755	3	1	R-755-3	Jacobs	02-30AA-1	12/40X
793		R	755	7	2	R-755-3, R-755-5, R-755-7, R-755-9, R-755-1	Jacobs	02-30-2 (Tools Cat.)	11/42X
794		R	755	7	3	R-755-3, R-755-5, R-755-7, R-755-9, R-755-1	Jacobs	02-30-3 (Tools Cat.)	12/42X
795		R	755	7	4	R-755-3, R-755-5, R-755-7, R-755-9, R-755-1	Jacobs	02-30-4	12/43X
796		R	755	3	2	R-755-3, R-755-5, R-755-7, R-755-9, R-830-1	Jacobs	02-30-2 (Svc., Tools Cat.)	11/42X
797		R	755	7	2	R-755-7	Jacobs	02-30AB-2 (Svc. Instructions)	12/42X
798		R	755	7	2	R-755-7	Jacobs	02-30AB-2 (Svc. Instructions)	12/42X
799		R	755	7	3	R-755-7	Jacobs	02-30AB-3 (Overhaul Instructions)	2/42 X
800		R	755	7	3	R-755-7, R-755-9, R-830-1, R-915-3	Jacobs	02-30-3 (Overhaul Tools Cat.)	12/42X
801		R	755	9	1	R-755-9	Jacobs	02-30AC-1	7/43 X
802		R	755	9	2	R-755-9	Jacobs	02-30AC-2 (Svc. Instructions)	11/44X

803		R	755	9	3	R-755-9	Jacobs	02-30AC-3 (Overhaul Instructions)	11/44X
804		R	755	A-2	3	R-755-A2	Jacobs	2R-R755-3	4/57 X
805		R	830	1	2	R-830-1	Jacobs	02-30CA-2	6/43 X
806		R	830	1	3	R-830-1	Jacobs	02-30CA-3	6/43 X
807		R	830	1	4	R-830-1	Jacobs	02-30CA-4	1/43 X
808		R	915	3	4	R-915-3	Jacobs	02-30BA-4 (Parts Cat.)	11/42X
809		R	915	3	1	R-915-3	Jacobs	02-30BA-1	6/43 X
810		R	915	3	2	R-915-3	Jacobs	02-30BA-2 (Svc. Instructions)	8/43 X
811		R	915	7	4	R-915-7	Jacobs	02-30BB-4 (Parts Cat.)	11/42X
812		R	915	7	1	R-915-7	Jacobs	02-30BB-1	7/43 X
813		R	915	7	2	R-915-7	Jacobs	02-30BB-2 (Svc. Instructions)	9/44 X
814		R	915	7	2	R-915-7	Jacobs	02-30BB-2 (Svc. Instructions)	6/43 X
815		R	915	7	3	R-915-7	Jacobs	02-30BB-3	6/43 X
816		R	915	7	4	R-915-7	Jacobs	02-30BB-4	11/42X
817		L	4		1 w/ 4	L-4, L-4M, L-4MB, L-4MA7, L-5M, L-5MB, L-5MA7, L-6, L-6M, L-6MB, L-6MA	Jacobs	Instructions w/ Parts	
818		T	40	A-10		T30-A-10	Katana	300-E (Turbo Props., Specs.)	
819		V	105	2	2 thru 4	V-105-2 (Keikhaffer)	Keikhaffer	02-125AA-1 (Svc., Overhaul, Parts)	1953 .
820		B	5		4	B-5 (Kinner, 125HP)	Kinner	I.P.B. (All Models)	

821		B	5		1, 2	B-5, B-5R (Series) 2, B-54 (Kinner)	Kinner	Operations, Maint. Instruction	
822		C	5		1, 2	C-5 (Kinner)	Kinner	Care, Operation Instructions w/ Parts	1936 .
823		K	5		1, 2	K-5 (Kinner)	Kinner	Care, Operations Instructions	
824		K	5		4	K-5, B-5 (Kinner)	Kinner	I.P.B. Catalog w/ Price	1931 .
825		R	5		2-Jan	K5 (Series 2, Kinner)	Kinner	Operations, Maint.	1940 .
826		R	5	1	4	K-5-1, R-5 (Kinner)	Kinner	I.P.B.	1942 .
827		R	52		2-Jan	R-52, R-53, R-55 (Kinner)	Kinner	Operations, Maint.	1943 .
828		R	52		3	R-52, R-53, R-55 (Kinner)	Kinner	Overhaul Man.	
829		R	56		3	R-56 (Kinner)	Kinner	Overhaul Instructions, Operations, Maint.	
830		R	56		4	R-56 (Kinner)	Kinner	I.P.B.	1944 .
831		R	440	1	3	R-440-1, R-440- 3 (Kinner)	Kinner	02-60AA-3 (Overhaul Man.)	1952 .
832		R	540	1	1	R-540-1 (Kinner)	Kinner	02-60BA-1 (Operations Instructions)	1941 .
833		R	540	1	2	R-540-1 (Kinner)	Kinner	02-60BA-2 (Svc. Instructions)	1941 .
834		R	540	1	3	R-540-1 (Kinner)	Kinner	02-60BA-3 (Overhaul Man.)	1942 .
835		R	540	1	4	R-540-1 (Kinner)	Kinner	02-60BA-4 (I.P.B.)	1942 .

836		R	540	3	1	R-540-3 (Kinner)	Kinner	02-60BB-1 (Operations Instructions)	1943 .
837		R	540	3	2	R-540-3 (Kinner)	Kinner	02-60BB-2 (Svc. Instructions)	1944 .
838		R	540	3	3	R-540-3 (Kinner)	Kinner	02-60BB-3 (Overhaul Man.)	1944 .
839		R	540	3	4	R-540-3 (Kinner)	Kinner	02-60BB-4 (I.P.B.)	1943 .
840					2	Kinner Eng.	Kinner	Svc. Bulletins	
841		R	440	3	3	R-440-3, R-440-1	Kinner	02-60AA-3	3/42 X
842		R	266		4-Feb	R-266 (Lambert)	Lambert	Overhaul, Svc., Parts	
843					2	Model 14 Eng. (Lawrence)	Lawrence	Instructions & Care (Lawrence Aero, Booklet #2)	12/22 .
844		5	E		1, 2, 3	5E, 5F, 7F, 5G, 7G (LeBlond, Ken Royce)	LeBlond, Ken Royce	Description, Installation, Operations, Overhaul, Svc.	1/41 .
845		5	E		1	5E, 5F, 5FG (90/120 HP, Ken Royce, LeBlond)	LeBlond, Ken Royce	Eng. Handbook	1941 .
846		5	E		2	5E (Type 70, Ken Royce, LeBlond & Rearwin)	LeBlond, Ken Royce	Svc. w/ Parts List	1929 .
847		5	E	1	1, 2, 3, 4	5-E-1 (70 HP, Ken Royce, LeBlond & Rearwin)	LeBlond, Ken Royce	Description, Installation, Operations, Overhaul, Svc.	

848		5	F		2	5-F (85-90 HP, Ken Royce, LeBlond & Rearwin)	LeBlond, Ken Royce	Svc. Man.	1929 .
849		5	F	1	1, 2, 3, 4	5-F-1 (90 HP, Ken Royce, LeBlond & Rearwin)	LeBlond, Ken Royce	Description, Installation, Operations, Overhaul, Parts, Svc.	
850		5	D		4	5D, 5DE, 5DF, 5E, 5F, 57D, 5F (60, 70, 85, 90, 110 HP, LeBlond, Ken Royce, Rearwin)	LeBlond, Ken Royce, Rearwin	Parts List	1937 .
851		5	DF	1	1, 2, 3, 4	5-DF-1 (85HP, LeBlond, Ken Royce, Rearwin)	LeBlond, Ken Royce, Rearwin	Description, Installation, Operations, Overhaul, Parts, Svc.	
852		5	D		4	5D, 5DE, 5DF, 5E, 5F, 7D, 7DF, 7F (All 60 to 110 HP, LeBlond, Royce, Rearwin)	LeBlond, Royce, Rearwin	Repair Parts Price List	
853					1	Papoose (50 HP, Lenape)	Lenape	Instructions, Table of Limits	1938 .
854	G	O	145		4	GO-145 (Lycoming)	Lycoming	Instructions w/ Parts	1940 .
855	G	O	145	C3		GO-145-C3 (Lycoming)	Lycoming	#1088 (Performance Data)	

856	G	O	145	C4		GO-145-C4 (Lycoming)	Lycoming	#1089 (Performance Data)	
857	G	O	435			GO-435 (Lycoming)	Lycoming	#2015 (Performance Data)	
858	G	O	435	B		GO-435-B (Lycoming)	Lycoming	#2014 (Performance Data)	
859	G	O	435	C2B	2	GO-435-C2B Convert To GO- 435-C2B1 (Lycoming)	Lycoming	Hi Speed Angle Generator (Instructions, Installetion; Hi-Speed Generator)	
860	G	O	480	B	2	GO-480-B Convert To GO- 480-B1C (Lycoming)	Lycoming	Hi Speed Angle Generator (Instructions, Installetion; Hi-Speed Generator)	
861	X	O	435	2	1	XO-435-2 (Lycoming)	Lycoming	Operations Man.	10/42X
862		O	145		4	O-145 (Lycoming)	Lycoming	Instructions, Parts	1941 .
863		O	145		4	O-145, GO-145 (Lycoming)	Lycoming	Instructions, Parts	1947 .
864		O	145	A1	4	O-145-A1 (Lycoming)	Lycoming	Instructions, Parts	1938 .
865		O	145	A3		O-145-A3 (Lycoming)	Lycoming	#1082 (Performance Data)	
866		O	145	B3		O-145-B3 (Lycoming)	Lycoming	#1084 (Performance Data)	
867		O	235	A		O-235-A (Lycoming)	Lycoming	#1081-A (Performance Data)	
868		O	235		1	O-235, O-235A (Lycoming)	Lycoming	100 (Series, Operations Handbook)	1942 .

869		O	235		3	O-235-B, O-290, O-290-B, O-290-C, O-435, O-435-B, O-435-C, O-435-T, GO-435, GO-435B	Lycoming	Lycoming Man.	1940-45
870		O	235	2	3	O-235-2	Lycoming	02-14DA-3	1/44 X
871		O	235	2	2	O-235-2 (Lycoming)	Lycoming	02-15DQ-2 (Svc. Instructions)	1943 .
872		O	235	2	3	O-235-2 (Lycoming)	Lycoming	02-15DA-3 (Overhaul Man.)	1944 .
873		O	235	2	4	O-235-2 (Lycoming)	Lycoming	02-15DA-4 (I.P.B.)	1944 .
874		O	235	B		O-235-B, O-235-BP (Lycoming)	Lycoming	#2023 (Performance Data)	
875		O	235	B	3	O-235B, O-290B, O-290C, O-435B, O-435C, O-435T, GO-435B (Lycoming)	Lycoming	Overhaul Man.	1943 .
876		O	290	A		O-290-A (Lycoming)	Lycoming	#1079-D (Performance Data)	
877		O	290	C		O-290-C (Lycoming)	Lycoming	#2012-C (Performance Data)	
878		O	290	G1	1	O-290-G1, GPU (Lycoming)	Lycoming	Conversion To Aircraft	
879		O	290	1	2	O-290-1, O-290-3 (Lycoming)	Lycoming	02-15CA-2 (Svc. Instructions)	1944 .

880		O	290	1	3	O-290-1, O-290-3 (Lycoming)	Lycoming	02-15CA-3 (Overhaul Instructions)	1945 .
881		O	290	1	4	O-290-1, O-290-3 (Lycoming)	Lycoming	02-15CA-4 (I.P.B.)	1943 .
882		O	290	11	2	O-290-11	Lycoming	02A-15CD-2	6/53 X
883		O	290	11	2	O-290-11	Lycoming	2R-0290-12	6/53 X
884		O	290	11	3	O-290-11	Lycoming	2R-0290-13	11/56 X
885		O	290	11	4	O-290-11	Lycoming	2R-0290-14	11/56 X
886		O	290	11	4	O-290-11	Lycoming	02A-15 CB-4	5/53 X
887		O	290	11	2	O-290-11 (Lycoming)	Lycoming	02A-15CB-2 (Svc. Instructions)	1953 .
888		O	290	11	4	O-290-11 (Lycoming)	Lycoming	02A-15CB-4 (Parts Cat.)	1953 .
889		O	290	G1	3	O-290-G1, O-290-G4	Lycoming	38G2-40-13	9/63 X
890		O	290	G1	3	O-290-G1, O-290-G4 (Lycoming)	Lycoming	38G2-40-13 (Overhaul Man.)	1962 .
891		O	290	G1	4	O-290-G1, O-290-G4 (Lycoming)	Lycoming	38G2-40-14 (I.P.B.)	1963 .
892		O	290	G4	3	O-290-G4 (Series)	Lycoming	02A-15CC-1	12/53 X
893		O	290	G4	4	O-290-G4 (Series)	Lycoming	02A-15CC-2	12/53 X
894		O	350			O-350 (Lycoming)	Lycoming	#1076-A-B (Performance Data)	
895		O	435	A		O-435-A (Lycoming)	Lycoming	#1075-C (Performance Data)	
896		O	435	B		O-435-B (Lycoming)	Lycoming	#2016 (Performance Data)	

897		O	435	C		O-435-C (Lycoming)	Lycoming	#2010-D (Performance Data)	
898		O	435	T		O-435-T (Lycoming)	Lycoming	#1092-B (Performance Data)	
899		O	435	1	2	O-435-1 (Lycoming)	Lycoming	02-15BA-2 (Svc. Instructions)	1944 .
900		O	435	1	3	O-435-1 (Lycoming)	Lycoming	02-15BA-3 (Overhaul Man.)	1945 .
901		O	435	1	4	O-435-1, O-435- 11 (Lycoming)	Lycoming	02A-15BA-4 (I.P.B.)	1948 .
902		O	435	11	2	O-435-11 (Lycoming)	Lycoming	02-15BC-2 (Svc. Instructions)	1947 .
903		O	435	11	3	O-435-11 (Lycoming)	Lycoming	02A-15BC-3 (Overhaul Man.)	1950 .
904		O	435	17	2	O-435-17 (Lycoming)	Lycoming	1-2R-0435-22 (Svc. Instructions)	1957 .
905		O	435	17	4	O-435-17 (Lycoming)	Lycoming	1-2R-0435-24 (I.P.B.)	1960 .
906		O	435	17	3	O-435-17 (Lycoming)	Lycoming	2R-0435-23 (Overhaul Man.)	1956 .
907		O	435	2	2	O-435-2 (Lycoming)	Lycoming	02-15BQ-2	1943 .
908		O	435	2	4	O-435-2 (Lycoming)	Lycoming	02-15BB-4 (I.P.B.)	1944 .
909		O	435	23	2	O-435-23 (Lycoming)	Lycoming	2R-0435-42 (Svc. Instructions)	1958 .
910		O	435	23	4	O-435-23 (Lycoming)	Lycoming	2R-0435-44 (I.P.B.)	1960 .
911		O	435	23	2	O-435-23 (Series, Lycoming)	Lycoming	Work Requirements, Cylinder/Piston Assy.	

912		O	435	23	2	O-435-23, O-435-23B, O-435-23C, O-435-25A, O-540-9, O-540-9A, O-540-9DS, O-540-9GS (Lycoming)	Lycoming	55-2810-221-34P (Maint. & Special Tools)	1972 .
913		O	435	23	3	O-435-23, O-435-23A, O-435-23B (Lycoming)	Lycoming	2R-0435-43 (Overhaul Man.)	1960 .
914		O	435	23	3	O-435-23, O-435-23A, O-435-23B (Lycoming)	Lycoming	2R-0435-45 (Overhaul, Changes)	1960 .
915		O	435	23A	2	O-435-23A, O-435-23B (Lycoming)	Lycoming	2R-0435-46 (Field Maint.)	1960 .
916		O	435	23B	2	O-435-23B (Lycoming)	Lycoming	55-2810-210-50 (Depot Maint.)	1962 .
917		O	435	23C	2	O-435-23C, O-435-25A (Lycoming)	Lycoming	55-2810-221-24 (Organization DS, GS, Maint.)	1971 .
918		O	435	6	4	O-435-6 (Lycoming)	Lycoming	02A-15BD-504 (I.P.B.)	1957 .
919		O	435	6	2	O-435-6, O-435-6A (Lycoming)	Lycoming	02A-15BD-502 (Svc. Instruction)	1957 .
920		O	435	6	3	O-435-6, O-435-6A (Lycoming)	Lycoming	02A-15BD-503 (Overhaul Instructions)	1957 .

921		O	480	1	3	O-480-1 (Lycoming)	Lycoming	1-2R-0480-3 (Overhaul Man.)	1958 .
922		O	480	1	4	O-480-1 (Lycoming)	Lycoming	1-2R-0480-4 (I.P.B.)	1958 .
923		O	480	1	2	O-480-1, O-480- 3 (Lycoming)	Lycoming	2R-0480-6 (Technical Man., Field Maint.	1962 .
924		O	540	9		R-540-9, R-540- 9A (Lycoming)	Lycoming	55-2810-222-20P (Maint Repair, Parts, Tools	1971 .
925		R	530		1	R-530 (Lycoming)	Lycoming	Operations Man.	1947 .
926		R	680		4	R-680 (Lycoming)	Lycoming	2/15/2004	8/43 X
927		R	680		4	R-680 (Lycoming)	Lycoming	I.P.B.	1941 .
928		R	680		1	R-680 (Lycoming)	Lycoming	Instructions, 2nd Ed.	1931 .
929		R	680		1	R-680 (Lycoming)	Lycoming	Instructions, 3rd Ed.	1934 .
930		R	680		3	R-680 (Lycoming)	Lycoming	02-15-3 (Instructions w/ Overhaul, Tools Cat.)	1941 .
931		R	680			R-680 (Lycoming)	Lycoming	02-15-1 (Table of Limits, Spec. Tools)	1941 .
932		R	680		1	R-680 (Lycoming)	Lycoming	Operations Man.)	1947 .
933		R	680		3	R-680 (Series, Lycoming)	Lycoming	Overhaul Man.	
934		R	680		4	R-680 (Series, Lycoming)	Lycoming	Parts Price List	1934 .

935		R	680		4	R-680 (Class 02-E, Lycoming)	Lycoming	02-15-4 (Interchangeable Parts List)	1943 .
936		R	680		1	R-680, R530 (Lycoming)	Lycoming	Operations Man., 2nd Ed.	1939 .
937		R	680	17	2	R-680-17 (Lycoming)	Lycoming	02-15AC-2 (Svc. Instructions)	1944 .
938		R	680	17	3	R-680-17 (Lycoming)	Lycoming	02-15AC-3 (Overhaul Instructions)	1945 .
939		R	680	17	4	R-680-17 (Lycoming)	Lycoming	02-15AC-4 (Parts Cat.)	1944 .
940		R	680	3	2	R-680-3, R-680-5, R-680-7 (Lycoming)	Lycoming	02-15A-2 (Svc. Instructions)	1934 .
941		R	680	3	1	R-680-3, R-680-5, R-680-7, R-680-11 (Lycoming)	Lycoming	02-15AA-1 (Operations, Flight Handbook)	1940 .
942		R	680	3	2	R-680-3, R-680-5, R-680-7, R-680-11 (Lycoming)	Lycoming	02-15AA-2 (Svc. Instructions)	1944 .
943		R	680	3	3	R-680-3, R-680-5, R-680-7, R-680-11 (Lycoming)	Lycoming	02-15AA-3 (Overhaul Instructions)	1944 .
944		R	680	3	4	R-680-3, R-680-5, R-680-7, R-680-11 (Lycoming)	Lycoming	02-15AA-4 (Parts Cat.)	1938 .
945		R	680	9	3	R-680-9, R-680-13 (Lycoming)	Lycoming	02-15A-3 (Overhaul Instructions)	1944 .

946		R	680	9	4	R-680-9, R-680-13 (Lycoming)	Lycoming	02-15AB-4 (Parts Cat.)	1943 .
947		R	680	9	2	R-680-9, R-680-13 (Lycoming)	Lycoming	02-15AB-2 (Svc. Instructions)	1944 .
948		R	680	D	1	R-680D (Lycoming)	Lycoming	Operations Man., 2nd Ed.	1937 .
949		R	680	D	1	R-680-D (Series, Lycoming)	Lycoming		5/37 X
950		R	680	E3		R-680-E3 (Lycoming)	Lycoming	#1023-C (Performance Data)	
951		R	680	E3A		R-680-E3A (Lycoming)	Lycoming	#1047-D (Performance Data)	
952		T	53L	11C	2	T53L-11C, T53L-11D, T53L-13B, T53L-703 (Lycoming)	Lycoming	2J-T53-16 (Maint. Man., Volume II, Section 4)	1981 .
953		T	53L	11C	2, 4	T53L-11C, T53L-11D, T53L-13B (Lycoming)	Lycoming	55-2840-229-23P (Depot Maint., Parts, Special Tools)	1981 .
954		T	53L	11C	2	T53L-11C, T53L-11D, T53L-13B, T53L-703 (Lycoming)	Lycoming	M55-2840-229-23-1, M55-2840-229-23-2 (Intermediate Maint., Man., 2 Volumes)	
955		T	53L	11C	2	T53L-11C, T53L-11D, T53L-13B, T53L-703 (Lycoming)	Lycoming	2J-T53-16 (Maint. Man., Volume I, Section I, II, IX)	1981 .
956		T	53	2-Nov	2	T53-11-2 (Lycoming)	Lycoming	Powerplant General Maint.	8/69 X

957		T	53	11A	1	T53-11A, T53-11B, T53L-11, T53L-11A, T53L-11B, T53L-11C, T53L-11D (Lycoming)	Lycoming	Gas Turbine, Operator's Man.	11/70X
958		T	53	11A	2	T53-11A, T53-11B, T53L-11, T53L-11A, T53L-11B, T53L-11C, T53L-11D (Lycoming)	Lycoming	Gas Turbine, Inspections Handbook	11/70X
959		T	53	13	3	T53-13-3 (Lycoming)	Lycoming	Overhaul Svc. Bulletins & Letters	12/82X
960		T	53	13A	2	T53-13A, T53-13B (Lycoming)	Lycoming	Data Book	6/68 X
961		T	53	13B	1	T53-13B, T53-L13B (Lycoming)	Lycoming	T5313-1 (Operator's Man.)	6/85 X
962		T	53	4	4	T53-13B, T53-L-13B (Lycoming)	Lycoming	T5313-4 (Parts Cat.)	3/83 X

963		T	53	5-Jan	1	T53-1-5, T53-1-7, T53-1-7A, T53-1-9A, T53-1-11, T53-1-11B, T53-1-11C, T53-1-11D, T53-1-13, T53-1-13A, T53-1-13B, T53-1-15, T53-1-701 (Lycoming)	Lycoming	55-2800-200-30/1 (Eng. Inspection Guide)	1969 .
964		T	55	L-5	1	T55L-5, T55L-7, T55L-7B, T55L-C, T55L-11 (Lycoming)	Lycoming	55-2800-200-30-2 (Inspection Guide)	1969 .
965		T	56	10W	4	T56-A-10W, T56-A-10WA, T56-A-14 (Lycoming)	Lycoming	02B-5DD-4 (I.P.B.)	1980 .
966		T	550	8D	4	T5508D (Lycoming)	Lycoming	T5508-4 (Parts Cat.)	8/82 X
967		201	D		1	201-D (Lycoming)	Lycoming	Specs. For Aviation Fuel	1939 .
968					2	Lycoming	Lycoming	Cylinder, Piston, Piston Ring, Gasket Set Apps.	1974 .
969					2	Reciprocating Eng. (Lycoming)	Lycoming	Trouble Shooting Man.	
970		R	680		3	R-680 (Series, Lycoming)	Lycoming	Overhaul Man., 4th Ed.	1944 .
971		O	435	1	2	O-435-1	Lycoming	02-15BA-2	11/44X
972		O	435	1	2	O-435-1	Lycoming	00-35E-25	9/43 X

973		O	435	1	4	O-435-1	Lycoming	02-15BA-4	3/45 X
974		O	435	1	4	O-435-1, O-435-11	Lycoming	02A-15BA-4	1/51 X
975		O	435	11	2	O-435-11	Lycoming	02-15BC-2	8/45 X
976		O	435	17	2	O-435-17	Lycoming	2R-0435-22	6/57 X
977		O	435	17	3	O-435-17	Lycoming	2R-0435-23	11/56X
978		O	435	17	4	O-435-17	Lycoming	2R-0435-24	10/58X
979		O	435	23	2	O-435-23	Lycoming	2R-0435-42	6/56 X
980		O	435	23	4	O-435-23	Lycoming	2R-0435-44-34P	6/58 X
981		O	435	23	4	O-435-23, O-435-23C, O-435-25, O-435-25A, O-540-9, O-540-9A	Lycoming	55-2810-221-34P	4/72 X
982		O	435	6	3	O-435-6, O-435-6A	Lycoming	02A-15BD-503	12/57X
983		O	480	1	4-Jan	O-480-1, O-480-1A, O-480-1B, O-480-3, O-480-3A	Lycoming	55-2810-216-20P	6/71 X
984		O	480	1	2	O-480-1	Lycoming	2R-0480-6	6/58 X
985		O	480	1	3	O-480-1	Lycoming	2R-0480-3 (Rev.)	4/61 X
986		O	480	1	4	O-480-1	Lycoming	2R-0480-4 (Rev.)	10/58X
987		O	480	1	2	O-480-1, O-480-3	Lycoming	2R-0480-6	5/62 X
988		O	480	1	3	O-480-1, O-480-3	Lycoming	2R-0480-3	5/62 X
989		O	480	1	4	O-480-1, O-480-3	Lycoming	2R-0480-4	5/62 X
990		O	290	1	2	O-290-1, O-290-3	Lycoming	02-15CA-2	10/44 X
991		O	290	1	4	O-290-1, O-290-3	Lycoming	02-15CA-4	11/43 X
992		T	53			T53 (Series)	Lycoming	Technical Notes	4/71 X

993		T	53	L-1	2	T53L-1, T53L-1A, T53L-1B	Lycoming	2J-T53-6 (Field Maint.)	2/63 X
994		T	53	L-1	2	T53L-1, T53L-1A, T53L-1B	Lycoming	2J-T53-6 (Field Maint.)	9/60 X
995		T	53	L-1	3	T53L-1, T53L-1A, T53L-1B	Lycoming	2J-T53-3 (Overhaul Technical Man.)	5/63 X
996		T	53	L-1	3	T53L-1, T53L-1A, T53L-1B	Lycoming	2J-T53-3 (Overhaul Technical Man.)	9/61 X
997		T	53	L-1	3	T53L-1, T53L-1A, T53L-1B	Lycoming	2J-T53-3 (Overhaul)	5/60 X
998		T	53	L-1	3	T53L-1, T53L-1A, T53L-1B	Lycoming	2J-T53-3 (Overhaul)	7/61 X
999		T	53	L-1	4	T53L-1, T53L-1A, T53L-1B	Lycoming	2J-T53-4 (Parts)	5/63 X
1000		T	53	L-1	4	T53L-1, T53L-1A, T53L-1B	Lycoming	2J-T53-4 (Parts)	4/61 X
1001		T	53	L-1	4	T53L-1, T53L-1A, T53L-1B	Lycoming	2J-T53-4 (Parts)	9/61 X
1002		T	53	L-1	2	T53L-1, T53L-1A, T53L-1B	Lycoming	2J-T53-6 (Field Maint.)	1963 .
1003		T	53	L-1	3	T53L-1, T53L-1A, T53L-1B	Lycoming	2J-T53-3 (Overhaul Man.)	1963 .
1004		T	53	L-1	4	T53L-1, T53L-1A, T53L-1B	Lycoming	2J-T53-4 (I.P.B.)	1963 .
1005		T	53	L-11	2	T53L-11	Lycoming	02B-15AB-2 (Svc. Instructions, Shaft Turbo)	2/66 X
1006		T	53	11	11	T53L-11	Lycoming	Svc. Instructions	1964 .
1007		T	53	L-11	2	T53L-11, T53L-11A	Lycoming	2J-T53-16, 02B-15AB-2 (Svc. Instructions)	9/68 X
1008		T	53	L-11C	4	T53L-11C, T53L-11D, T53L-13B	Lycoming	2J-T53-14 (Parts, Tools)	12/81X

1009		T	53	L-11C	2	T53L-11C, T53L-11D, T53L-13B, T53L-703	Lycoming	2J-T53-16 (Maint.)	3/81 X
1010		T	53	L-11C	4	T53L-11C, T53L-D, T53L-13B	Lycoming	2J-T53-14 (Repair Parts)	12/81X
1011		T	53	L-11C	4	T53L-11C, T53L-11D, T53L-13B	Lycoming	2J-T53-14 (Repair Parts)	12/81X
1012		T	53	L-11C	4	T53L-11C, T53L-11D, T53L-13B	Lycoming	2J-T53-14 (Repair Parts)	12/81X
1013		T	53	L-11C	2	T53L-11C, T53L-11D, T53L-13B, T53L-703	Lycoming	2J-T53-16, 55-2840-229-23-2	3/81 X
1014		T	53	L-13	4	T53L-13	Lycoming	Gas Turbine, Familiarization Man.	3/84 X
1015		T	53	L-13		T53L-13, T53L-15	Lycoming	Gas Turbine, Familiarization, Transportation Training	12/68X
1016		T	53	L-13	3	T53L-13, T53L-13A, T53L-13B, T53L-15, T53L-701	Lycoming	55-2840-113 (Overhaul)	11/71X
1017		T	53	L-13B	4	T53L-13B	Lycoming	2J-T53-14 (Repair Parts)	2/93 X
1018		T	53	L-15	4	T53L-15, T53L-701, T53L-701A, T53L-13B, T53L-703	Lycoming	55-2840-113-4 (Maint. Requirements)	12/88X
1019		T	53	L-15	2	T53L-15, T53L-701, T53L-701A, T53L-13B, T53L-703	Lycoming	55-2840-113-2 (Maint. Requirements)	12/86X

1020		T	53	L-15	2	T53L-15, T53L-701, T53L-701A, T53L-13B, T53L-703	Lycoming	55-2840-113-1 (Maint. Requirements)	12/86X
1021		T	53	L-1A	1	T53L-1A	Lycoming	Operations Man.	8/83 X
1022		T	53	L-1A	2	T53L-1A	Lycoming	55-2840-100-B(2) (Work Requirements)	5/64 X
1023		T	53	L-1A	4	T53L-1A, T53L-5, T53L-9A, T53L-11, T53L-11A, T53L-11SA, T53L-11B, T53L-11C, T53L-11D, T53L-13, T53L-13A, T53L-13B	Lycoming	2J-T53-14 (Repair Parts)	2/71 X
1024		T	53	L-1A	4	T53L-1A, T53L-5, T53L-9A, T53L-11, T53L-11A, T53L-11SA, T53L-11B, T53L-11C, T53L-11D, T53L-13, T53L-13A, T53L-13B	Lycoming	02B-15AC-4 (Repair Parts, Tools)	6/70 X
1025		T	53	L-1A	1	T53L-1A, T53L-1B	Lycoming	Gas Turbines, Operating Man.	2/63 X
1026		T	53	L-1B	2	T53L-1B	Lycoming	2J-T53-6 (Field Maint.)	1/67 X

1027		T	53	L-5	4	T53L-5, T53L-9A, T53L-11, T53L-11A, T53L-11SA, T53L-11B, T53L-11C, T53L-11D, T53L-13, T53L-13A, T53L-13B	Lycoming	55-2840-229-20P (Maint. Repair Parts)	1/72 X
1028		T	53	L-5	2	T53L-5, T53L-9	Lycoming	Turbine, Installation Instructions	
1029		T	53	L-7	2	T53L-7	Lycoming	55-2840-104 (Eng. Installation, Book 1)	1/72 X
1030		T	53	L-7	2	T53L-7	Lycoming	55-2840-104 (Eng. Installation, Book 2)	1/72 X
1031		T	53	L-7	24	T53L-7, T53L-7A, T53L-15, T53L-701	Lycoming	55-2840-233-24 (Maint. Man.)	7/1971
1032		T	53	L-7	4	T53L-7, T53L-7A, T53L-15, T53L-701, T53L-701A	Lycoming	55-2840-233-23P (Maint. Man.)	6/1978
1033		T	53	L-9A		T53L-9A, T53L-11, T53L-11A, T53L-11B, T53L-11C, T53L-11D, T53L-13A, T53L-13B	Lycoming	2J-T53-16 (Maint. Man.)	6/73 X
1034		T	53	L-9A	4	T53L-9A, T53L-11, T53L-11A, T53L-11SA, T53L-11B, T53L-11C, T53L-11D, T53L-13, T53L-13A, T53L-13B	Lycoming	2J-T53-14 (Repair Parts)	6/73 X

1035		T	53	L-9A	4	T53L-9A, T53L-11, T53L-11A, T53L-11SA, T53L-11B, T53L-11C, T53L-11D, T53L-13, T53L-13A, T53L-13B	Lycoming	2J-T53-14 (Repair Parts)	7/74 X
1036		T	53	L-9A	4	T53L-9A, T53L-11, T53L-11A, T53L-11SA, T53L-11B, T53L-11C, T53L-11D, T53L-13, T53L-13A, T53L-13B	Lycoming	2J-T53-14 (Repair Parts, Tools)	9/76 X
1037		T	55			T55	Lycoming	Brochure	1959 X
1038		T	55	L-11A	2	T55L-11A	Lycoming	55-2840-234-24-2 (Maint. Technical Man.)	8/71 X
1039		T	55	L-5		T55L-5, T55L-7	Lycoming	Svc. Training Technical Notes	
1040		T	55	L-5	2	T55L-5, T55L-7, T55L-7B, T55L-7C, T55L-11	Lycoming	55-2800-200-30-2 (Inspection Guide)	1/69 X
1041		T	55	L-7	4	T55L-7, T55L-7B, T55L-7C, T55L-11	Lycoming	55-2840-234-35P (Repair Parts)	1/70 X
1042		T	55	L-7		T55L-7, T55L-7B, T55L-7C	Lycoming	55-2840-234-24-1 (Maint. Man.)	8/71 X
1043		T	55	L-7	4	T55L-7, T55L-7B, T55L-7C, T55L-11A, T55L-11ASA	Lycoming	55-2840-234-23P (Repair Parts)	9/76 X

1044		T	55	L-7	4	T55L-7,L-7B,L-7C,L-11A,L-11ASA	Lycoming	55-2840-234-23P (Repair Parts, Tools)	9/76 X
1045		T	53	L-11C	4	T53L-11C, T53L-11D, T53L-13B	Lycoming	2J-T53-14 (Repair Parts)	12/81X
1046		R	680	17	2	R-680-17	Lycoming	02-15AC-2	9/44 X
1047		R	680	17	2	R-680-17	Lycoming	02-15AC-2 (Svc. Instructions)	9/44 X
1048		R	680	17	3	R-680-17	Lycoming	02-15AC-3	10/44X
1049		R	680	17	4	R-680-17	Lycoming	02-15AC-4	2/44 X
1050		R	680	17	4	R-680-17	Lycoming	00-35E-100	11/44X
1051		R	680	17	4	R-680-17	Lycoming	02-15AC-4 (Parts Cat.)	2/44 X
1052		R	680	3	4	R-680-3	Lycoming	02-15A-4	1/38 Y
1053		R	680	3	2	R-680-3, R-680-5, R-680-6, R-680-11	Lycoming	02-15AA-2	10/43X
1054		R	680	3	2	R-680-3, R-680-5, R-680-7, R-680-11	Lycoming	02-15AA-2	10/43X
1055		R	680	3	3	R-680-3, R-680-5, R-680-7, R-680-11	Lycoming	02-15AA-3	9/44 Y
1056		R	680	7	2	R-680-7	Lycoming	02-15AA-2	1/41 X
1057		R	680	9	3	R-680-9, R-680-13	Lycoming	02-15AB-3	10/44X
1058		R	680	9	3	R-680-9, R-680-13	Lycoming	02-15AB-3	12/42X
1059		R	680	9	4	R-680-9, R-680-13	Lycoming	02-15AB-4	4/42 X
1060		R	680	9	4	R-680-9, R-680-13	Lycoming	00-35E-29 (Maint., Overhaul, Parts)	8/44 X
1061		R	680	9	4	R-680-9, R-680-13	Lycoming	02-15AB-4 (Parts Cat.)	4/43 X

1062		R	680	9	2	R-680-9, R-680-13	Lycoming	02-15AB-2	7/43 X
1063		R	680	9	2	R-680-9, R-680-13	Lycoming	02-15AB-2 (Svc. Instructions)	9/44 X
1064		85	95	MARK III	2	85, 95 (Mark III)	Mark III	Maint., Notes	1931 .
1065		O	90	1	4	O-90-1, O-90-4 (McCulloch)	McCulloch	02A-120AA-4 (Parts Cat.)	1949 .
1066		O	90	4	4-Jan	O-90-4	McCulloch	AN28-10C-15	10/47 X
1067		O	100	1	2	O-100-1 (McCulloch)	McCulloch	43E6-5-3-2 (Svc. Instructions)	1953 .
1068		O	100	1	3	O-100-1 (McCulloch)	McCulloch	453E6-5-3-3 (Overhaul Instructions)	1953 .
1069		O	100	1	4	O-100-1 (McCulloch)	McCulloch	02A-120BA-4 (Parts Cat.)	1953 .
1070		O	100	1	2	O-100-1, O-100-2	McCulloch	02A-120BA-2	5/58 X
1071		O	150	4A	2	O-150-4A	McCulloch	02A-120BB-2	1/60 X
1072		C	4		3, 4	C-4 Pirate (Menasco)	Menasco	Overhaul, Parts, Instruction Handbook (w/ Carb. Magneto & Pump)	
1073		C	4		2	C-4, C-4S, C-4D4 (Menasco)	Menasco	Svc. Bulletin (Copy #301)	
1074		D	4		3	D-4 Super Pirate (Menasco)	Menasco	Eng. Handbook w/ Overhaul Instructions	
1075					1	Menasco Pirate Eng.	Menasco	Handbook	1942 .

1076		V	1650	3	4	V-1650-3, V-1650-7, V-1650-13, V-1650-17 (Merlin 68, 69)	Merlin	02-55AC-4 (Parts Cat.)	12/44Y
1077		V	1650	3	3	V-1650-3, V-1650-7 (Merlin 68, 69)	Merlin	2R-V1650-13 (Overhaul Instructions, Rev.)	6/52 Y
1078		V	1650	3	2	V-1650-3, V-1650-7 (Merlin 68, 69)	Merlin	02-55AC-2 (Svc. Instructions)	5/44 C
1079		V	1650	3	3	V-1650-3, V-1650-7 (Merlin 68, 69)	Merlin	2R-V1650-13 (Overhaul Instructions)	6/52 X
1080		V	1650	3	4	V-1650-3, V-1650-7, V-1650-13, V-1650-17 (Merlin 68, 69)	Merlin	02A-55AC-4 (Parts)	3/49 X
1081		V	1650	9	4	V-1650-9, V-1650-9A, V-1650-11, V-1650-21 (Merlin 300, 301)	Merlin	02-55AD-4 (Parts Cat., Rev.)	2/47 X
1082		V	1650			V-1650-3, V-1650-7 (Merlin 68, 69)	Merlin	2R-V 1650-13 (Overhaul Instructions)	1952 .

1083					1	Merlin Eng., Power Plants, MK 22, 24, T24	Merlin	Operators Handbook (For Transportation)	1945 .
1084		V	1650	3	2	V-1650-3, V- 1650-7 (Merlin 68,69, Rolls Royce)	Merlin, Rolls Royce	02A-55AC-2 (Svc. Instructions)	1947 .
1085		V	1650	3	3	V-1650-3, V- 1650-7 (Merlin 68,69, Rolls Royce)	Merlin, Rolls Royce	02-55AC-3 (Overhaul Man.)	1945 .
1086		V	1650	3	4	V-1650-3, V- 1650-7 (Merlin 68,69, Rolls Royce)	Merlin, Rolls Royce	02A-55AC-4 (I.P.B.)	1949 .
1087		V	1650	9	4	V-1650-9, V- 1650-9A, V- 1650-11, V- 1650-21 (Merlin 300,301, Rolls Royce)	Merlin, Rolls Royce	02-55AD-4 (I.P.B.)	
1088		2A	1		1	2A-1500, 2A- 2500 (Packard)	Packard	Eng. Handbook	1928 .
1089		2A	1500		1	2A-1500, 2A- 2500, 3A-2500 (Packard)	Packard	Eng. Handbook	
1090		V	1650	3	2, 3	V-1650-3, V- 1650-7 (Packard, Merlin)	Packard, Merlin	Repair, Overhaul Instructions	4/50 X

1091		V	1650	3	2	V-1650-3, V-1650-7 (Packard, Merlin)	Packard, Merlin	Repair, Overhaul Instructions	4/50 C
1092		V	1650	3	2	V-1650-3, V-1650-7 (Packard, Merlin)	Packard, Merlin	Repair, Overhaul Instructions	4/50 C
1093		V	1650	3	2	V-1650-3, V-1650-7 (Packard, Merlin)	Packard, Merlin	Repair, Overhaul Instructions	4/50 C
1094		V	1650	3	4	V-1650-3, V-1650-7, V-1650-1	Packard, Merlin	02-55-4 (Interchangeable Parts)	12/44Y
1095		V	1650		4	V-1650-33, V-1650-38, V-1650-224, V-1650-225	Packard, Merlin	02-55AB-4 (Parts)	7/44 X
1096	T	F	33	P3	4	TF33-P3	Pratt & Whitney	2J-TF33-4	9/1961
1097	T	F	33	P3	4	TF33-P3	Pratt & Whitney	2J-TF33-4	3/1961
1098	T	F	33	P-3	2	TF33-P-3	Pratt & Whitney	1B-52H-10	9/1979
1099	T	F	33	P-3	2	TF33-P-3	Pratt & Whitney	1B-52H-10	8/1968
1100	T	F	33	P-3	3	TF33-P-3	Pratt & Whitney	2J-TF33-3	9/1960
1101	T	F	33	P-3	4	TF33-P-3	Pratt & Whitney	2J-TF33-4	9/1960
1102	T	F	33	P-3	4	TF33-P-3, TF33-P-5, TF33-P-9	Pratt & Whitney	2J-TF33-4	5/1974

1103	T	F	33	P-3	2	TF33-P-3, TF33-P-5, TF33-P-9	Pratt & Whitney	2J-TF33-6	2/1964
1104	T	F	33	P-3	2	TF33-P-3, TF33-P-5, TF33-P-9, TF33-P-11, TF33-P-11A	Pratt & Whitney	2J-TF33-6	11/1977
1105	T	F	33	P-3	4	TF33-P-3, TF33-P-5, TF33-P-9, TF33-PW-103	Pratt & Whitney	2J-TF33-4	11/1987
1106	T	F	33	P-7	2	TF33-P-7	Pratt & Whitney	2J-TF33-16D	6/1966
1107	T	F	33	P-7	2	TF33-P-7	Pratt & Whitney	2J-TF33-13C	7/1964
1108	T	F	33	P-7	4	TF33-P-7	Pratt & Whitney	2J-TF33-14G	4/1967
1109	T	F	33	P-7	4	TF33-P-7	Pratt & Whitney	2J-TF33-14	8/1966
1110	T	F	33	P-7	4	TF33-P-7	Pratt & Whitney	2J-TF33-14	2/1964
1111	T	F	33	P-7	2	TF33-P-7, TF33-P-7A	Pratt & Whitney	2J-TF33-16	5/1980
1112	T	F	33	P-7A	4	TF33-P-7A	Pratt & Whitney	2J-TF33-14	11/1987
1113		F	100	PW	2	F100-PW-100, F100-PW-200	Pratt & Whitney	2J-F100-13-7 (Rev. Only)	11/1984
1114		F	100	PW	2	F100-PW-100, F100-PW-200	Pratt & Whitney	2J-F100-13-7 (Rev. Only)	2/1985
1115		F	100	PW	2	F100-PW-100, F100-PW-200	Pratt & Whitney	2J-F100-13-7 (Rev. Only)	5/1985
1116		F	100	PW	2	F100-PW-200	Pratt & Whitney	2J-F100-36-9	10/1981
1117		F	100	PW	2	F100-PW-200	Pratt & Whitney	2J-F100-36-7	

1118		F	100	PW	2	F100-PW-200	Pratt & Whitney	2J-F100-36-1	7/1981
1119		F	100	PW	2	F100-PW-200	Pratt & Whitney	2J-F100-36-9	10/81 X
1120		F	100	PW	2	F100-PW-200	Pratt & Whitney	2J-F100-36-7	X
1121		F	100	PW	2	F100-PW-200	Pratt & Whitney	2J-F100-36-1	7/81 X
1122		F	100	PW	4	F100-PW-200	Pratt & Whitney	2J-F100-14	7/1984
1123		F	100	PW	4	F100-PW-200	Pratt & Whitney	2J-F100-14	7/84 X
1124		J	42	P-6	2	J42-P-6, J42-P-8	Pratt & Whitney	02B-10AB-2	5/50 X
1125		J	42	P-6	3	J42-P-6, J42-P-8	Pratt & Whitney	02B-10AB-3	12/49 X
1126		J	42	P-6	4	J42-P-6, J42-P-8	Pratt & Whitney	02B-10AB-4	5/51 X
1127		J	48	P5	2	J48-P5	Pratt & Whitney	02B-10B-6	6/52 X
1128		J	48	P-6	3	J48-P-6 (Pratt & Whitney)	Pratt & Whitney	02B-10BA-3 (Overhaul Instructions)	
1129		J	48	P-6A	2	J48-P-6A	Pratt & Whitney	02B-10BA-2	8/60 X
1130		J	48	P-8	2	J48-P-8, J48-P-8A, J48-P-8B, J48-P-8C	Pratt & Whitney	02B-10ACC-2 (Rev.)	6/66 X
1131		J	48	P-8	3	J48-P-8, J48-P-8A, J48-P-8B, J48-P-8C	Pratt & Whitney	02B-10ACC-3	5/66 X
1132		J	52	D	2	J52D	Pratt & Whitney	2J-TF33-14	11/70 X

1133		J	52	P-3	2	J52-P-3	Pratt & Whitney	2J-J52-6	X
1134		J	52	P-3	3	J52-P-3	Pratt & Whitney	2J-J52-3	5/68 X
1135		J	52	P-3	3	J52-P-3	Pratt & Whitney	2J-J52-3	5/68 X
1136		J	52	P-3	4	J52-P-3	Pratt & Whitney	2J-J52-4	2/68 X
1137		J	52	P-3	4	J52-P-3	Pratt & Whitney	2J-J52-4	2/68 X
1138		J	52	P-408	2	J52-P-408	Pratt & Whitney	02B-10DAB-6-1	6/70 X
1139		J	52	P-6	2	J52-P-6, J52-P-6A, J52-P-8A	Pratt & Whitney	02B-10DAA-2 (Rev.)	4/66 X
1140		J	52	P-6	3	J52-P-6, J52-P-6A, J52-P-8A	Pratt & Whitney	02B-10DAA-3 (Rev.)	2/66 X
1141		J	52	P-6	4	J52-P-6, J52-P-6A, J52-P-8A	Pratt & Whitney	02B-10DAA-4 (Rev.)	5/66 X
1142		J	52	P-6A	2	J52-P-6A, J52-P-6B, J52-P-8B	Pratt & Whitney	02B-10DAA-6-1	12/75 X
1143		J	57			J57 (Jet Eng.)	Pratt & Whitney	Training guide	6/57 Y
1144		J	57		2	J57 (Series)	Pratt & Whitney	2J-J57-SC	12/65 X
1145		J	57	23	4	J57-23	Pratt & Whitney	02B-10ADC-503	X
1146		J	57	F-1	3	J57-F-1, J57-F-19W, J57-F-29W, J57-P-1, J57-P-6, J57-P-6A, J57-P-6B, J57-P-9, J57-P-10, J57-P-17, J57-P-19W	Pratt & Whitney		7/55 Y

1147		J	57	P-13	2	J57-P-13, J57-P-13A, J57-P-13B, J57-P-21, J57-P-21A, J57-P-21B, J57-P-23, J57-P-23A, J57-P-23B, J57-P-53, J57-P-53A, J57-F-13, J57-F-13A, J57-F-13B, J57-F-21, J57-F-21A, J57-F-21B,	Pratt & Whitney	2J-J57-23 (Overhaul Man.)	7/76 X
1148		J	57	P-13	4	J57-P-13, J57-P-13A, J57-P-53, J57-P-53A, J57-F-13, J57-F-13A	Pratt & Whitney	2J-J57-34M	3/66 X
1149		J	57	P-13B	2	J57-P-13B, J57-P-19W, J57-P-21B, J57-P-23B, J57-P-29WA, J57-P-43WB, J57-P-55, J57-P-55A, J57-P-59W	Pratt & Whitney	2J-J57-83-7 (Missing Pgs.)	10/81 X
1150		J	57	P-16	2	J57-P-16, J57-P-20, J57-P-20A	Pratt & Whitney	02B-10ADE-502 (Rev.)	6/66 X
1151		J	57	P-16	3	J57-P-16, J57-P-20, J57-P-20A	Pratt & Whitney	02B-10ADE-503 (Rev.)	10/64 X

1152		J	57	P-16	4	J57-P-16, J57-P-20, J57-P-20A	Pratt & Whitney	02B-10ADE-504	3/66 X
1153		J	57	P-19W	3	J57-P-19W, J57-P-29W, J57-P-29WA, J57-F-19W, J57-F-29W, J57-F-29WA	Pratt & Whitney	2J-J57-13	10/79 X
1154		J	57	P-1B	4	J57-P-1B, J57-P-1W, J57-P-1WB, J57-P-6B, J57-P-10, J57-P-17, J57-P-19W, J57-P-29W, J57-P-29WA	Pratt & Whitney	02B-10ADB-4	5/61 X
1155		J	57	P-1B	2	J57-P-1B, J57-P-1W, J57-P-1WB, J57-P-6B, J57-P-9, J57-P-9W, J57-P-10, J57-P-17, J57-P-19W, J57-P-29W	Pratt & Whitney	02B-10ADB-2A	11/60 X
1156		J	57	P-1B	3	J57-P-1B, J-57P-AW, J57-P-1WB, J57-P-6, J57-P-10, J57-P-17, J57-P-19W, J57-P-29W, J57-P-29WA	Pratt & Whitney	2J-J57-13 (Rev.)	7/61 Y

1157		J	57	P-1W	4	J57-P-1W, J57-P-1WB, J57-P-6B, J57-P-9W, J57-P-10, J57-P-17, J57-P-19W, J57-P-29W, J57-P-29WA	Pratt & Whitney	02B-10ADB-4 (Rev.)	1/61 X
1158		J	57	P-1WB	4	J57-P-1WB, J57-P-19W, J57-P-29W, J57-P-29WA, J57-F-1WB, J57-F-19W, J57-F-29W, J57-F-29WA	Pratt & Whitney	2J-J57-14	7/67 X
1159		J	57	P-1WB	4	J57-P-1WB, J57-P-19W, J57-P-29W, J57-P-29WA, J57-F-1WB, J57-F-19W, J57-F-29W, J57-F-29WA	Pratt & Whitney	2J-J57-14	6/71 X
1160		J	57	P-1WB	4	J57-P-1WB, J57-P-19W, J57-P-29W, J57-P-29WA, J57-F-1WB, J57-F-19W, J57-F-29W, J57-F-29WA	Pratt & Whitney	2J-J57-14S-25	8/74 X

1161		J	57	P-1WB	4	J57-P-1WB, J57-P-19W, J57-P-29W, J57-P-29WA, J57-F-1WB, J57-F-19W, J57-F-29W, J57-F-29WA	Pratt & Whitney	2J-J57-14	8/66 X
1162		J	57	P-1WB	4	J57-P-1WB, J57-P-19W, J57-P-29W, J57-P-29WA, J57-F-1WB, J57-F-19W, J57-F-29W, J57-F-29WA	Pratt & Whitney	2J-J57-14S-18	12/71 X
1163		J	57	P-1WB	4	J57-P-1WB, J57-P-19W, J57-P-29W, J57-P-29WA, J57-F-1WB, J57-F-19W, J57-F-29W, J57-F-29WA	Pratt & Whitney	2J-J57-14S-20	6/72 X
1164		J	57	P-21	4	J57-P-21, J57-P-21A, J57-P-23, J57-P-23A, J57-F-21, J57-F-21A, J57-F-23A	Pratt & Whitney	21J-J57-24AV	6/67 X
1165		J	57	P-21A	4	J57-P-21A, J57-P-21B, J57-P-23A, J57-P-23B	Pratt & Whitney	2J-J57-24	11/82 X

1166		J	57	P-21A	4	J57-P-21A, J57-P-21B, J57-P-23A, J57-P-23B, J57-F-21A, J57-F-21B, J57-F-23A, J57-F-23B	Pratt & Whitney	2J-J57-24	2/79 X
1167		J	57	P-21A	4	J57-P-21A, J57-P-21B, J57-P-23A, J57-P-23B, J57-F-21A, J57-F-21B, J57-F-23A, J57-F-23B	Pratt & Whitney	2J-J57-24	2/79 X
1168		J	57	P-21B	2	J57-P-21B, J57-P-23B	Pratt & Whitney	2J-J57-83-7	X
1169		J	57	P37	4	J57-P-37, J57-P-37A	Pratt & Whitney	2J-J57-44 (I.P.B.)	7/62 X
1170		J	57	P-37	4	J57-P-37, J57-P-37A	Pratt & Whitney	2J-J57-44 (Rev.)	7/60 X
1171		J	57	P-37A	4	J57-P-37A	Pratt & Whitney	2J-J57-44	1/68 X
1172		J	57	P-4	2	J57-P-4	Pratt & Whitney	F8U-I Aircraft	2/57 X

1173		J	57	P-4	2	J57-P-4, J57-P-4A, J57-P-7, J57-P-8, J57-P-8A, J57-P-8B, J57-P-11, J57-P-12, J57-P-13, J57-P-13A, J57-P-21, J57-P-21A, J57-P-23, J57-P-23A, J57-P-39, J57-P-41, J57-P-53, J57-P-53A, J57-F-7, J57-F-13A, J57-F-21, J57-F-21A, J57-F-23A	Pratt & Whitney	2J-J57-22 (Svc. Instructions)	1959 .
1174		J	57	P-4	3	J57-P-4, J57-P-4A, J57-P-7, J57-P-8, J57-P-8A, J57-P-13, J57-P-13A, J57-P-21, J57-P-21A, J57-P-23, J57-P-23A	Pratt & Whitney	2J-J57-23 (Rev.)	6/61 Y
1175		J	57	P-4	3	J57-P-4, J57-P-4A, J57-P-7, J57-P-8, J57-P-8B, J57-P-13, J57-P-13A, J57-P-21, J57-P-21A, J57-P-34, J57-P-23A	Pratt & Whitney	2J-J57-23 (Rev.)	6/61 Y

1176		J	57	P-43W	4	J57-P-43W, J57-P-43WB, J57-P-59W, J57-F-59W, J57-F-59WA, J57-F-59WB (Pratt & Whitney)	Pratt & Whitney	2J-J57-54 (I.P.B.)	1968 .
1177		J	57	P-43W	2	J57-P-43W, J57-P-43WA, J57-P-43WB, J57-F-43W, J57-F-43WA, J57-F-43WB	Pratt & Whitney	1B-52F-10-2 (Rev.)	8/67 X
1178		J	57	P-43W	3	J57-P-43W, J57-P-43WA, J57-P-43WB, J57-P-55, J57-P-55A, J57-P-59W, J57-F-43W, J57-F-43WA	Pratt & Whitney	2J-J57-73	8/76 X
1179		J	57	P-43W	3	J57-P-43W, J57-P-43WA, J57-P-43WB, J57-P-55, J57-P-55A, J57-P-59W, J57-F-43W, J57-F-43WA	Pratt & Whitney	2J-J57-73	12/79 X
1180		J	57	P-43W	4	J57-P-43W, J57-P-43WA, J57-P-43WB, J57-P-59W	Pratt & Whitney	2J-J57-54	8/87 X

1181		J	57	P-43W	4	J57-P43W, J57-P-43WA, J57-P-43WB, J57-P-59W, J57-F-43W, J57-F-43WA, J57-F-43WB	Pratt & Whitney	2J-J57-54AE (Sup.)	6/67 Y
1182		J	57	P43W	4	J57-P-43W, J57-P-43WA, J57-P-43WB, J57-P-59W, J57-F-43W, J57-F-43WA, J57-F-43WB	Pratt & Whitney	2J-J57-54 (Rev.)	7/63 X
1183		J	57	P-43W	3	J57-P-43W, J57-P-43WA, J57-P-43WB, J57-P-59W, J57-F-43W, J57-F-43WA, J57-F-43WB	Pratt & Whitney	2J-J57-53 (Rev.)	7/61 Y
1184		J	57	P-43W	3	J57-P-43W, J57-P-43WA, J57-P-43WB, J57-P-59W, J57-F-43W, J57-F-43WA, J57-F-43WB	Pratt & Whitney	2J-J57-53	4/68 X

1185		J	57	P-43W	4	J57-P-43W, J57-P-43WA, J57-P-43WB, J57-P-59W, J57-F-43W, J57-F-43WA, J57-F-43WB	Pratt & Whitney	2J-J57-54	10/78 X
1186		J	57	P-43W	1, 2	J57-P-43W,P-43WA,P-43WB,P-59W,F-43W,F-43WA,F-43WB,F-59W	Pratt & Whitney	2J-J57-56, 2J-J57-56S-73 (Maint. Instructions)	6/80 X
1187		J	57	P-4A	2	J57-P-4A, J57-P-8, J57-P-8B	Pratt & Whitney	02B-10ADC-502	6/66 X
1188		J	57	P-4A	3	J57-P-4A, J57-P-8, J57-P-8B	Pratt & Whitney	2J-J57-23	4/64 X
1189		J	57	P-55	4	J57-P-55, J57-F-55	Pratt & Whitney	2J-J57-74 (I.P.B.)	7/66 X
1190		J	57	P-55	3	J57-P55, J57-F-55	Pratt & Whitney	2J-J57-73 (Rev.)	7/61 Y
1191		J	57	P-55	2	J57-P-55, J57-F-55	Pratt & Whitney	2K-J57-76	6/63 X
1192		J	57	P-55	3	J57-P-55, J57-F-55	Pratt & Whitney	2J-J57-73 (Rev.)	4/63 X
1193		J	57	P-55	4	J57-P-55, J57-F-55	Pratt & Whitney	2J-J57-74 (Rev.)	1/67 X
1194		J	57	P-55	4	J57-P-55, J57-P-55A, J57-F-55, J57-F-55A	Pratt & Whitney	2J-J57-74	11/79 X
1195		J	57	P-6B	2	J57-P-6B, J57-P-10	Pratt & Whitney	02B-10ADB-2 (Rev.)	6/66 X

1196		J	57	P-7	4	J57-P-7, J57-P-21, J57-P-21A, J57-P-23, J57-P-23A, J57-P-39, J57-F-7, J57-F-21, J57-F-21A, J57-F-23A	Pratt & Whitney	2J-J57-24AC (I.P.B.)	3/66 X
1197		J	57	P-7	4	J57-P-7, J57-P-11, J57-P-21, J57-P-21A, J57-P-23, J57-P-23A, J57-P-39, J57-P-41, J57-F-7, J57-F-21, J57-F-21A	Pratt & Whitney	2J-J57-24 (Rev.)	11/60 X
1198		J	57	P-7	4	J57-P-7, J57-P-21, J57-P-21A, J57-P-23, J57-P-23A, J57-P-39, J57-F-7, J57-F-21, J57-F-21A, J57-F-23A	Pratt & Whitney	2J-J57-24	4/62 Y
1199		J	57	P-13	3	P57-P-13, P57-P-13A, P57-P-13B, P57-P-21, P57-P-21A, P57-P-21B, P57-P-23A, P57-P-23B, P57-P-53	Pratt & Whitney	2J-J47-23	7/76 X

1200		J	57	P-4A	3	P57-P-4A, P57-P-8, P8B, P57-P-13, P57-P-13A, P57-P-21, P57-P-21A, P57-P-23, P57-P-23A, P57-P-53, P57-P-53A	Pratt & Whitney	2J-J57-23	5/65 X
1201		J	60	P-3	2	J60-P-3	Pratt & Whitney	Specs.	4/70 X
1202		J	60	P-3	4	J60-P-3, J60-P-3A, J60-P-5A, J60-P-5B, J60-P-5, J60-P-9 (Pratt & Whitney)	Pratt & Whitney	2J-J60-4 (I.P.B.)	1967 .
1203		J	60	P-3	3	J60-P-3, J60-P-3A, J60-P-5A, J60-P-5B, J60-P-9 (Pratt & Whitney)	Pratt & Whitney	2J-J60-3 (Overhaul Instructions)	1967 .
1204		J	60	P-3	3	J60-P-3, J60-P-3A, J60-P-5, J60-P-5A	Pratt & Whitney	2J-J60-3	2/64 X
1205		J	60	P-3	2	J60-P-3, J60-P-3A, J60-P-5A, J60-P-5B, J60-P-9	Pratt & Whitney	2J-J60-6	1/72 X
1206		J	60	P-3	4	J60-P-3, J60-P-3A, J60-P-5A, J60-P-5B, J60-P-9, J60-P3A, J60-P-6	Pratt & Whitney	2J-J60-4	4/84 X

1207		J	60	P-3	4	J60-P-3, J60-P-3A, J60-P-5A, J60-P-5B, J60-P-9, J60-P-3A, J60-P-6	Pratt & Whitney	2J-J60-4	4/89 X
1208		J	60	P-3	4	J60-P-3, J60-P-3A, J60-P-5A, J60-P-5B, J60-P-9, J60-P-3A, J60-P-6	Pratt & Whitney	2J-J60-4	9/81 X
1209		J	60	P-3A	3	J60-P-3, J60-P-6	Pratt & Whitney	2J-J60-3	3/69 X
1210		J	60	P-3A	2	J60-P-3A, J60-P-6 (Pratt & Whitney)	Pratt & Whitney	02B-10EA-2 (Svc. Instructions)	1969 .
1211		J	60	P-3A	2	J60-P-3A, J60-P-6	Pratt & Whitney	02B-10EA-2 (Rev.)	7/65 X
1212		J	60	P-3A	4	J60-P-3A, J60-P-6	Pratt & Whitney	2J-J60-4	6/66 X
1213		J	75	P-17	4	J75-P-17, J75-P-19, J75-P-19W (Pratt & Whitney)	Pratt & Whitney	2J-J75-4 (I.P.B.)	1987 .
1214		J	75	P-17	3	J75-P-17, J75-P-19, J75-P-19W (Pratt & Whitney)	Pratt & Whitney	2J-J75-3 (Overhaul Instructions)	1966 .
1215		J	75	P-17	2	J75-P-17, J75-P-19, J75-P-19W	Pratt & Whitney	2J-J75-6	8/67 X
1216		J	75	P-17	3	J75-P-17, J75-P-19, J75-P-19W	Pratt & Whitney	2J-J75-3	9/79 X

1217		J	75	P-17	3	J75-P-17, J75-P-19, J75-P-19W	Pratt & Whitney	2J-J75-3TP-5	12/70 X
1218		J	75	P-17	4	J75-P-17, J75-P-19, J75-P-19W	Pratt & Whitney	2J-J75-4	9/71 X
1219		J	75	P-5	4	J75-P-5, J75-P-9	Pratt & Whitney	2J-J75-4	6/58 X
1220		J	75	P-5	2	J75-P-5, J75-P-9, J75-P-17, J75-P-19W	Pratt & Whitney	2J-J75-6	12/58 X
1221		R	985			R-985 (Pratt & Whitney)	Pratt & Whitney	Tools Cat.	12/42X
1222		R	985		3	R-985 (Pratt & Whitney)	Pratt & Whitney		4/43 X
1223		R	985		3	R-985 (Pratt & Whitney)	Pratt & Whitney	8E2-2-1-15 (Book 42, Overhaul Changes to Ignition)	1956 .
1224		R	985		3	R-985 (Pratt & Whitney)	Pratt & Whitney	2R-R985-5 (Overhaul Changes)	1956 .
1225		R	985		3	R-985 (Pratt & Whitney)	Pratt & Whitney	8E2-2-1-15 (Book 42, Overhaul Changes to Ignition)	1956 .
1226		R	985		1	R-985 (Series, Pratt & Whitney)	Pratt & Whitney	02-10AB-1 (Operations Instructions)	1943 .
1227		R	985		1	R-985, R-1340, R-1690, R-1830, R-2000 (Pratt & Whitney)	Pratt & Whitney	01-20-1 (Table of Limits)	

1228		R	985	1	4	R-985-1, R-985-3, R-985-6, R-985-12 (Pratt & Whitney)	Pratt & Whitney	02A-10AB-4A (I.P.B.)	1951 .
1229		R	985	14B	2	R-985-14B (Pratt & Whitney)	Pratt & Whitney	02A-10AB-2 (Svc. Instructions)	1967 .
1230		R	985	17	1	R-985-17 (Pratt & Whitney)	Pratt & Whitney	02-10AB-1 (Operations, Flight)	1941 .
1231		R	985	17	2	R-985-17 (Pratt & Whitney)	Pratt & Whitney	02-10AB-2 (Svc. Instructions)	1942 .
1232		R	985	17	4	R-985-17 (Pratt & Whitney)	Pratt & Whitney	02-10AB-4 (I.P.B.)	1942 .
1233		R	985	39A	2	R-985-39A (Pratt & Whitney)	Pratt & Whitney	55-2810-224-24 (Organization DS, GS, Maint.)	1970 .
1234		R	985	A	2	R-985-A, R-985-B, R-985-9, R-985-11, R-985-13, R-985-21, R-985-23, R-985-25, R-985-27, AN1, AN3 (Pratt & Whitney)	Pratt & Whitney	02-10AB-2 (Svc. Instructions)	1944 .
1235		R	985	A	4	R-985-A, R-985-B, R-985-B2 (Pratt & Whitney Wasp Jr.)	Pratt & Whitney	I.P.B.	1940 .

1236		R	985	AN1	4	R-985-AN1, R-985-AN-3, R-985-AN-14B, R-985-AN-39A (Pratt & Whitney)	Pratt & Whitney	02A-10AB-4A (I.P.B.)	1969 .
1237		R	985	AN1	2	R-985-AN1, R-985-3, R-985-39, R-985-39A (Pratt & Whitney)	Pratt & Whitney	1-2R-R985-2 (Svc. Instructions)	1961 .
1238		R	985	AN-1	4	R-985AN-1, R-985AN-3, R-985AN-4, R-985AN-6, R-985AN-6B, R-985AN-10, R-985AN-12, R-985AN-12B, R-985AN-14B, R-985AN-B3, R-985AN-B4, R-985AN-B5 (Pratt & Whitney)	Pratt & Whitney	Parts Cat.	2/62 X
1239		R	985	AN1	2	R-985-AN1, R-985-AN3, R-985-AN6, R-985-AN12, R-985-AN14B (Pratt & Whitney)	Pratt & Whitney	2R-R985-2 (Svc. Instructions)	1955 .

1240		R	985	AN1	4	R-985-AN1, R-985-AN3, R-985-AN6, R-985-AN12, R-985-AN14B (Pratt & Whitney)	Pratt & Whitney	2R-R985-4 (I.P.B.)	1962 .
1241		R	985	AN-1	3	R-985-AN-1, R-985-AN-3, R-985-AN-A4B, R-985-AN-39, R-985-AN-39A (Pratt & Whitney)	Pratt & Whitney	02A-10AB-3 (Overhaul)	1969 .
1242		R	985	AN5	2	R-985-AN5 (Pratt & Whitney)	Pratt & Whitney	02A-10AC-2 (Svc. Instructions)	1956 .
1243		R	985	AN5	3	R-985-AN5 (Pratt & Whitney)	Pratt & Whitney	02A-10AC-3 (Overhaul Instructions)	1957 .
1244		R	985	AN5	4	R-985-AN5 (Pratt & Whitney)	Pratt & Whitney	02A-10AC-4 (I.P.B.)	1958 .
1245		R	985	AN5	2	R-985-AN5, R-985-AN7 (Pratt & Whitney)	Pratt & Whitney	02-10AC-2 (Svc. Instructions)	1945 .
1246		R	985	AN5	3	R-985-AN5, R-985-AN7 (Pratt & Whitney)	Pratt & Whitney	02-10AC-3 (Overhaul Instructions)	1944 .

1247		R	985	AN5	4	R-985-AN5, R-985-AN7 (Pratt & Whitney)	Pratt & Whitney	02-10AC-4 (I.P.B.)	1945 .
1248		R	1340		3	R-1340 (Pratt & Whitney)	Pratt & Whitney	8E2-2-1-15 (Book 42, Overhaul Changes to Ignition)	1956 .
1249		R	1340		3	R-1340 (Pratt & Whitney)	Pratt & Whitney	8E2-2-1-15 (Book 42, Overhaul Changes to Ignition)	1956 .
1250		R	1340		3	R-1340 (Pratt & Whitney)	Pratt & Whitney	2R-R1340-5 (Overhaul Changes)	1967 .
1251		R	1340			R-1340 (Series, Pratt & Whitney)	Pratt & Whitney		4/62 X
1252		R	1340	40	2	R-1340-40, R-1340-42, R-1340-48, R-1340-57 (Pratt & Whitney)	Pratt & Whitney	2R-R1340-12 (Svc. Instructions)	1958 .
1253		R	1340	40	3	R-1340-40, R-1340-48, R-1340-52, R-1340-57 (Pratt & Whitney)	Pratt & Whitney	2R-R1340-13 (Overhaul Instructions)	1960 .
1254		R	1340	41	3	R-1340-41, R-1340-43, R-1340-45, R-1340-47 (Pratt & Whitney)	Pratt & Whitney	02-10DC-3 (Overhaul Instructions)	1939 .

1255		R	1340	41	2	R-1340-41, R-1340-43, R-1340-45, R-1340-47, R-1340-49, R-1340-51, R-1340-AN1 (Pratt & Whitney)	Pratt & Whitney	02-10DC-2 (Svc. Instructions)	1945 .
1256		R	1340	47	2	R-1340-47, R-1340-49, R-1340-51, R-1340-AN-1 (Pratt & Whitney)	Pratt & Whitney	02-10DC-6	7/43 Y
1257		R	1340	57		R-1340-57 (Pratt & Whitney)	Pratt & Whitney	Work Specs. For H-19C	1960 .
1258		R	1340	59		R-1340-59 (Pratt & Whitney)	Pratt & Whitney	U-1A (Conversion To R-1340-61)	
1259		R	1340	59	2	R-1340-59, R-1340-61 (Pratt & Whitney)	Pratt & Whitney	2R-R1340-22 (Svc. Instructions)	1960 .
1260		R	1340	59	3	R-1340-59, R-1340-61 (Pratt & Whitney)	Pratt & Whitney	2R-R1340-23 (Overhaul Instructions)	1960 .
1261		R	1340	59	4	R-1340-59, R-1340-61 (Pratt & Whitney)	Pratt & Whitney	2R-R1340-24 (I.P.B.)	1960 .
1262		R	1340	AN1		R-1340-AN1 (Pratt & Whitney)	Pratt & Whitney	02A-10DC-21 (Conversion To R-1340-AN1 Thru 57)	1950 .

1263		R	1340	AN1	3	R-1340-AN1 (Pratt & Whitney)	Pratt & Whitney	2R-R1340-3 (Overhaul Instructions)	1966 .
1264		R	1340	AN1	4	R-1340-AN1, R-1340-AN48, R-1340-AN48A, R-1340-AN52, R-1340-AN57 (Pratt & Whitney)	Pratt & Whitney	2R-R1340-4 (I.P.B.)	1967 .
1265		R	1340	AN1	4	R-1340-AN1, R-1340-AN2, R-1340-AN40, R-1340-AN46, R-1340-AN50, R-1340-AN55, R-1340-AN57 (Pratt & Whitney)	Pratt & Whitney	2R-R1340-4 (I.P.B.)	
1266		R	1535	SB4-G	3	R-1535-SB4-G (Twin Wasp Jr. B Series, Pratt & Whitney)	Pratt & Whitney	Overhaul, Maint.	1941 .

1267		R	1535	A1, 2, 4, 6, B4		R-1535, R-1535-A1, R-1535-A2, R-1535-A4, R-1535-A6, R-1535-B4, R-1830, R-1830-A1, R-1830-A2, R-1830-A4, R-1830-B, R-1830-B3 (Pratt & Whitney)	Pratt & Whitney	86014 (Spare Parts Cat.)	1937, Rev. 1940
1268		R	1830			R-1830 (Pratt & Whitney)	Pratt & Whitney	02-10C-500 (Modification Instructions)	1947 .
1269		R	1830		3	R-1830 (Series, Pratt & Whitney)	Pratt & Whitney	2R-R-1830-5 (Overhaul, Maint.)	1959 .
1270		R	1830		4	R-1830, (Model S3C4G, Pratt & Whitney)	Pratt & Whitney	02-10CZ-4 (I.P.B.)	1942 .
1271		R	1830	35	2	R-1830-35, R-1830-45, R-1830-47, R-1830-49, R-1830-51, R-1830-53, R-1830-57, R-1830-82, R-1830-92 (Pratt & Whitney)	Pratt & Whitney	02-10CC-2 (Svc. Instructions)	1944 .

1272		R	1830	43	2	R-1830-43, R-1830-65 (Pratt & Whitney)	Pratt & Whitney		1943 X
1273		R	1830	43	1	R-1830-43, R-1830-65 (Pratt & Whitney)	Pratt & Whitney	Instruction Man. (Buick Ed.)	1943 .
1274		R	1830	43	4	R-1830-43, R-1830-65 (Pratt & Whitney)	Pratt & Whitney	02-10CD-505 (Parts Reference List)	1944 .
1275		R	1830	43	3	R-1830-43, R-1830-65, R-1830-90C, R-1830-90D (Pratt & Whitney)	Pratt & Whitney	2R-R1830-3 (Overhaul Instructions)	1959 .
1276		R	1830	43	4	R-1830-43, R-1830-65, R-1830-90C, R-1830-90D, R-1830-92, R-1830-92A (Pratt & Whitney)	Pratt & Whitney	2R-R1830-4 (I.P.B.)	1960 .
1277		R	1830	75	4	R-1830-57, R-1830-98 (Pratt & Whitney)	Pratt & Whitney	02-10CG-4 (I.P.B.)	1945 .
1278		R	1830	57	4	R-1830-57, R-1830-92 (Pratt & Whitney)	Pratt & Whitney	02-10CG-4B (I.P.B.)	1942 .
1279		R	1830	75	2	R-1830-75, R-1830-98 (Pratt & Whitney)	Pratt & Whitney	02-10CG-2 (Svc. Instructions)	1945 .

1280		R	1830	82	2	R-1830-82, R-1830-92 (Pratt & Whitney)	Pratt & Whitney	02-10CC-2 (Svc. Instructions)	1947 .
1281		R	1830	90	4	R-1830-90, R-1830-90C, R-1830-D, R-1830-92, R-1830-92A (Pratt & Whitney)	Pratt & Whitney	2R-1830-4 (I.P.B.)	1974 .
1282		R	1830	90B	4	R-1830-90B, R-1830-90C (Pratt & Whitney)	Pratt & Whitney	02-10CD-4A (I.P.B.)	1945 .
1283		R	1830	90C	2	R-1830-90C, R-1830-90D, R-1830-92, R-1830-92A (Pratt & Whitney)	Pratt & Whitney	02A-10CD-2 (Svc. Instructions)	1961 .
1284		R	1830	90C	3	R-1830-90C, R-1830-90D, R-1830-92, R-1830-92A (Pratt & Whitney)	Pratt & Whitney	02-10CD-3 (Overhaul Instructions)	1973 .
1285		R	1830	92	4	R-1830-92, R-1830-92A (Pratt & Whitney)	Pratt & Whitney	02A-10CC-4 (I.P.B.)	1959 .
1286		R	1830	94	2-Jan	R-1830-94 (Pratt & Whitney)	Pratt & Whitney	02-10CE-2 (Operation, Svc.)	1946 .

1287		R	1830	94	3	R-1830-94 (Pratt & Whitney)	Pratt & Whitney	02A-10CE-3 (Overhaul Instructions)	1951 .
1288		R	1830	94	4	R-1830-94 (Pratt & Whitney)	Pratt & Whitney	02A-10CE-4 (I.P.B.)	1956 .
1289		R	1843	43	4	R-1830-43, R-1830-67 (Pratt & Whitney)	Pratt & Whitney	02-10CD-4D (I.P.B.)	1943 .
1290		R	2000		3	R-2000 (Series, Pratt & Whitney)	Pratt & Whitney	2R-R2000-5 (Overhaul Changes)	1958 .
1291		R	2000		1	R-2000, R-2000-D (Series), R-2000-3, R-2000-7 (Pratt & Whitney)	Pratt & Whitney	02-10FR-1 (#76543, 2nd Ed.)	1/44 .
1292		R	2000	11	3	R-2000-11 (Pratt & Whitney)	Pratt & Whitney	2R-R2000-3 (Overhaul Instructions)	1960 .
1293		R	2000	3	2	R-2000-3, R-2000-7, R-2000-11 (Pratt & Whitney)	Pratt & Whitney	02-10FA-2 (Svc. Instructions)	1945 .
1294		R	2000	3	3	R-2000-3, R-2000-7, R-2000-11 (Pratt & Whitney)	Pratt & Whitney	02-10FA-3 (Overhaul Instructions)	1945 .
1295		R	2000	3	4	R-2000-3, R-2000-7, R-2000-11 (Pratt & Whitney)	Pratt & Whitney	02-10FA-4 (I.P.B.)	1945 .

1296		R	2000	4	3	R-2000-4 (Pratt & Whitney)	Pratt & Whitney	2R-R2000-23 (Overhaul Man.)	1957 .
1297		R	2000	4	4	R-2000-4 (Pratt & Whitney)	Pratt & Whitney	2R-R2000-24 (I.P.B.)	1957 .
1298		R	2000	4	3	R-2000-4, R-2000-4A, R-2000-6, R-2000-6A, R-2000-9A, 7M2 (Pratt & Whitney)	Pratt & Whitney	2R-2000-23 (Overhaul Instructions)	1977 .
1299		R	2000	9	4	R-2000-9 (Pratt & Whitney)	Pratt & Whitney	2R-R2000-14 (I.P.B.)	1957 .
1300		R	2000	9		R-2000-9, R-2000-11 (Pratt & Whitney)	Pratt & Whitney	2R-R2000-208 (Conversion To R-2000-4)	1954 .
1301		R	2000	9	2	R-2000-9, R-2000-9A (Pratt & Whitney)	Pratt & Whitney	02A-10FB-2 (Svc. Instructions)	1949 .
1302		R	2000	9	3	R-2000-9, R-2000-9A (Pratt & Whitney)	Pratt & Whitney	2R-R2000-13 (Overhaul Instructions)	1960 .
1303		R	2180		1	R-2180 (Twin Wasp, E Series Pratt & Whitney)	Pratt & Whitney	Preliminary Stallation Data	

1304		R	2800	8	3	R-2800-8, R-2800-10, R-2800-8W, R-2800-10W (Double Wasp B Series, Pratt & Whitney)	Pratt & Whitney	02-10GR-3 (Overhaul)	1944 .
1305		R	2800	14	3	R-2800-14, R-2800-22, R-2800-22W, R-2800-28, R-2800-57 (Double Wasp, C Series, Pratt & Whitney)	Pratt & Whitney	#96996 (Overhaul Instructions)	
1306		R	2800		3	R-2800 (Series, Pratt & Whitney)	Pratt & Whitney	2R-R2800-5 (Overhaul Changes to 2R-R2800-5)	1/1961
1307		R	2800	14	2	R-2800-14, R-2800-22, R-2800-22W, R-2800-28, R-2800-57 (Pratt & Whitney)	Pratt & Whitney		6/44 Y
1308		R	2800	14W	4	R-2800-14W, R-2800-22, R-2800-22W, R-2800-28, R-2800-34, R-2800-34W, R-2800-36, R-2800-57 (Pratt & Whitney)	Pratt & Whitney	02-10GC-4 (I.P.B.)	1945 .

1309		R	2800	14W	2	R-2800-14W, R-2800-22, R-2800-22W, R-2800-28, R-2800-57 (Pratt & Whitney)	Pratt & Whitney	02-10GC (Svc. Instructions)	1944 .
1310		R	2800	18W	2	R-2800-18W (Pratt & Whitney)	Pratt & Whitney		8/44 X
1311		R	2800	18W	3	R-2800-18W (Pratt & Whitney)	Pratt & Whitney	02-10GD-3 (Overhaul Instructions)	1945 .
1312		R	2800	18W	4	R-2800-18W, R-2800-42W (Pratt & Whitney)	Pratt & Whitney	02A-10GD-4 (I.P.B.)	1952 .
1313		R	2800	22	4	R-2800-22, R-2800-22W, R-2800-34, R-2800-34W, R-2800-57, R-2800-73, R-2800-77, R-2800-81, R-2800-83, R-2800-85 (Pratt & Whitney)	Pratt & Whitney	02-10GC-4 (I.P.B.)	1950 .

1314		R	2800	22	3	R-2800-22, R-2800-22W, R-2800-34W, R-2800-57, R-2800-73, R-2800-77, R-2800-81, R-2800-83, R-2800-83WA, R-2800-85 (Pratt & Whitney)	Pratt & Whitney	02-10GC-3 (Overhaul Instructions)	1952 .
1315		R	2800	27	4	R-2800-27, R-2800-31, R-2800-39, R-2800-41, R-2800-43, R-2800-51 (Pratt & Whitney)	Pratt & Whitney	02-10GA-4A (I.P.B.)	1943 .
1316		R	2800	27	4	R-2800-27, R-2800-31, R-2800-43, R-2800-51, R-2800-59, R-2800-71, R-2800-75, R-2800-79 (Pratt & Whitney)	Pratt & Whitney	2R-R2800-4 (I.P.B.)	

1317		R	2800	27	2	R-2800-27, R-2800-31, R-2800-43, R-2800-51, R-2800-71, R-2800-75, R-2800-79 (Pratt & Whitney)	Pratt & Whitney	02A-10GA-2 (Svc. Instructions)	1955 .
1318		R	2800	27	3	R-2800-27, R-2800-31, R-2800-43, R-2800-51, R-2800-71, R-2800-75, R-2800-79 (Pratt & Whitney)	Pratt & Whitney	2R-R2800-3 (Overhaul Instructions)	1960 .
1319		R	2800	27	3	R-2800-27, R-2800-75, R-2800-79 (Pratt & Whitney)	Pratt & Whitney	2R-R2800-3 (Overhaul Instructions)	1962 .
1320		R	2800	34	3	R-2800-34, R-2800-57, R-2800-73, R-2800-77, R-2800-81, R-2800-83, R-2800-83A, R-2800-85 (Pratt & Whitney)	Pratt & Whitney	2R-R2800-23 (Overhaul Instructions)	1958 .

1321		R	2800	34	4	R-2800-34, R-2800-57, R-2800-73, R-2800-77, R-2800-81, R-2800-83, R-2800-83A, R-2800-85 (Pratt & Whitney)	Pratt & Whitney	2R-R2800-24 (I.P.B.)	1956 .
1322		R	2800	39	1	R-2800-39, S1A4-G, R-3800-31, R-3800-41, R-3800-43, 2SB-G (Pratt & Whitney)	Pratt & Whitney	General, Specific Operation Instructions	
1323		R	2800	44	2	R-2800-44, R-2800-48, R-2800-95, R-2800-97 (Pratt & Whitney)	Pratt & Whitney	02A-10GF-2 (Svc. Instructions)	1956 .
1324		R	2800	5	3	R-2800-5, R-2800-21, R-2800-27, R-2800-31, R-2800-35, R-2800-39, R-2800-41, R-2800-43, R-2800-51 (Pratt & Whitney)	Pratt & Whitney	02-10GA-3 (Overhaul Instructions)	1942 .

1325		R	2800	5	1	R-2800-5, R-2800-21, R-2800-27, R-2800-35, R-2800-39, R-2800-41, R-2800-43 (Pratt & Whitney)	Pratt & Whitney	02-10GA-1 (Operations, Flight)	1942 .
1326		R	2800	50	3	R-2800-50, R-2800-50A, R-2800-52W, R-2800-54, R-2800-99W (Pratt & Whitney)	Pratt & Whitney	2R-R2800-43 (Overhaul)	1961 .
1327		R	2800	50	4	R-2800-50, R-2800-50A, R-2800-52W, R-2800-54, R-2800-99W, R-2800-103W (Pratt & Whitney)	Pratt & Whitney	2R-R2800-44 (I.P.B.)	1959 .
1328		R	2800	50	2	R-2800-50, R-2800-50A, R-2800-54, R-2800-99W, R-2800-103W (Pratt & Whitney)	Pratt & Whitney	02A-10GH-2 (Svc. Instructions)	1958 .

1329		R	2800	50	3	R-2800-50, R-2800-52W, R-2800-97, R-2800-99W, R-2800-103W, CB-16 (Series, Pratt & Whitney)	Pratt & Whitney	8E2-2-1-55 (Bk #42, Overhaul Changes to Ignition)	1959 .
1330		R	2800	50	4	R-2800-50, R-2800-52W, R-2800-99W (Pratt & Whitney)	Pratt & Whitney	2R-R2800-44 (I.P.B.)	1955 .
1331		R	2800	52W	1	R-2800-52W (Pratt & Whitney)	Pratt & Whitney	2R-R2800-11 (Mobile Operations Test Instructions)	1960 .
1332		R	2800	8	2	R-2800-8, R-2800-10 (Pratt & Whitney)	Pratt & Whitney	02A-10GB-2 (Svc. Instructions)	1956 .
1333		R	2800	8	1	R-2800-8, R-2800-10 (Double Wasp "B", Pratt & Whitney)	Pratt & Whitney	02-10GR-1 (Operations Handbook)	1943 .
1334		R	2800	8	4	R-2800-8, R-2800-8W, R-2800-10, R-2800-10W, R-2800-65 (Pratt & Whitney)	Pratt & Whitney	02-10GB-4 (I.P.B.)	1946 .
1335		R	2800	97	3	R-2800-97 (Pratt & Whitney)	Pratt & Whitney	2R-R2800-33 (Overhaul Instructions)	1962 .

1336		R	2800	97	4	R-2800-97 (Pratt & Whitney)	Pratt & Whitney	2R-R2800-34 (I.P.B.)	1967 .
1337		R	2800	B		R-2800B (Series, 2-Stage Eng., Pratt & Whitney)	Pratt & Whitney	Report A-283 (Water Injection Sys.)	1944 .
1338		R	2800			R-2800-CB (Pratt & Whitney)	Pratt & Whitney		11/52X
1339		R	4360		3	R-4360 (Series, Pratt & Whitney)	Pratt & Whitney	2R-R4360-5D (Overhaul Changes)	8/62 X
1340		R	4360		3	R-4360 (Series, Pratt & Whitney)	Pratt & Whitney	2R-R4360-5 (Overhaul Changes)	1962 .
1341		R	4360	2	4	R-4360-2, R- 4360-2A, R- 4360-4, R-4360- 4A, R-4360-27, R-4360-35, R- 4360-35A (Pratt & Whitney)	Pratt & Whitney	02-10HA-4 (I.P.B.)	1947 .
1342		R	4360	2	3	R-4360-2, R- 4360-2A, R- 4360-4, R-4360- 4A, R-4360-4W (Pratt & Whitney)	Pratt & Whitney	2R-R4360-3 (Overhaul Instructions)	1949 .

1343		R	4360	2	4	R-4360-2, R-4360-2A, R-4360-4, R-4360-4A, R-4360-4W (Pratt & Whitney)	Pratt & Whitney	02A-10HA-4 (I.P.B.)	1949 .
1344		R	4360	20W	1	R-4360-20W, R-4360-35B, R-4360-59B, R-4360-63A, R-4360-65 (Pratt & Whitney)	Pratt & Whitney	2R-R4360-11 (Mobile Operations Test Instructions)	1967 .
1345		R	4360	20W	3	R-4360-20W, R-4360-WA, R-4360-WB, R-4360-WC, R-4360-WE, R-4360-35, R-4360-35B (Pratt & Whitney)	Pratt & Whitney	2R-R4360-13D (Overhaul Instructions)	1966 .
1346		R	4360	59	3	R-4360-59, R-4360-59B, R-4360-61 (Pratt & Whitney)	Pratt & Whitney	02A-10HK-3 (Overhaul Instructions)	1953 .
1347		R	4360	59	2	R-4360-59, R-4360-61 (Pratt & Whitney)	Pratt & Whitney	Svc. Instructions	1952 .
1348		R	4360	59B	3	R-4360-59B, R-4360-63A, R-4360-B, R-4360-65 (Pratt & Whitney)	Pratt & Whitney	2R-R4360-53 (Overhaul Instructions)	1963 .

1349		R	4360	59B	4	R-4360-59B, R-4360-65 (Pratt & Whitney)	Pratt & Whitney	2R-R4360-44 (I.P.B.)	1961 .
1350		R	4360	63	2	R-4360-63 (Pratt & Whitney)	Pratt & Whitney	02A-10HM-2 (Svc. Instructions)	1953 .
1351		R	4360	63A	2	R-4360-63A (Pratt & Whitney)	Pratt & Whitney	2R-R4360-52 (Svc. Instructions)	1956 .
1352		R	4360	63A	4	R-4360-63A (Pratt & Whitney)	Pratt & Whitney	2R-R4360-54 (I.P.B.)	1971 .
1353		R	1830		2	R-1830-90C, R-1830-92 (Pratt & Whitney)	Pratt & Whitney	EO 10A110CA-2 (Canadian Forces, Description & Maint. Instructions)	11/12/1957, Rev. 11/12/1969
1354	J	T	3D			JT3D (Pratt & Whitney)	Pratt & Whitney	Svc. School Man.	1960 .
1355	J	T	3D			JT3D (Pratt & Whitney)	Pratt & Whitney	Turbofan Heavy Maint. Training Workbook	1963 .
1356	J	T	3D		2	JT3D (Pratt & Whitney)	Pratt & Whitney	PN-411566 (Turbofan Maint.)	1961 .
1357	J	T	3D		2	JT3D (Pratt & Whitney)	Pratt & Whitney	PN-439417 (Thrust Reverser Maint. Man.)	1962 .
1358	J	T	3D		4	JT3D (Pratt & Whitney)	Pratt & Whitney	PN-411570 (Turbofan I.P.B.)	1962 .
1359	J	T	3D	1	2	JT3D-1 (Pratt & Whitney)	Pratt & Whitney	PW 554 (Turbofan Thrust Reverser Instructions)	

1360	J	T	3D	1	3	JT3D-1, JT3D-3, MC6, MC7 (Pratt & Whitney)	Pratt & Whitney	PN-411568 (Overhaul, Volume 1)	1962 .
1361	J	T	3D	1	3	JT3D-1, JT3D-3, MC6, MC7 (Pratt & Whitney)	Pratt & Whitney	PN-411568 (Overhaul, Volume II)	1962 .
1362	J	T	3D	1	3	JT3D-1, JT3D-3, MC6, MC7 (Pratt & Whitney)	Pratt & Whitney	PN-411568 (Overhaul, Volume III)	1962 .
1363	J	T	3D	3	1	JT3D-3, JT3D-3B (Pratt & Whitney)	Pratt & Whitney	PN-449293 (Specific Operations Instructions)	1961 .
1364	J	T	4	A	2	JT4A (Pratt & Whitney)	Pratt & Whitney	PN-385885 (Turbojet Maint. Man.)	1964 .
1365	J	T	4	A	3	JT4A (Pratt & Whitney)	Pratt & Whitney	PN-384887 (Turbojet Overhaul Man., Volume I)	1963 .
1366	J	T	4	A	3	JT4A (Pratt & Whitney)	Pratt & Whitney	PN-384887 (Turbojet Overhaul Man., Volume II)	1966 .
1367	J	T	4	A	3	JT4A (Pratt & Whitney)	Pratt & Whitney	PN-384887 (Turbojet Overhaul Man., Volume III)	1970 .
1368	J	T	8	D	3	JT8D (Pratt & Whitney)	Pratt & Whitney	PN-481672 (Overhaul Man., Volume I)	6/67 .
1369	J	T	8	D-1	2	JT8D-1,5,7,9 (Pratt & Whitney)	Pratt & Whitney	PN-481671 (Maint. Man.)	1968 .

1370	J	T			2	JT (Series, Pratt & Whitney)	Pratt & Whitney	Special Instructions for Shaft Seal Repair	1969 .
1371	P	T	6	A-20	2	PT6A-20 (Pratt & Whitney)	Pratt & Whitney	PN-3011402 (Maint. Man.)	1960 .
1372	P	T	6	A-20	2	PT6A-20, T74 (Pratt & Whitney)	Pratt & Whitney	PN-3011400 (Svc. School Notes)	7/74 .
1373	P	T	6	A-20		PT6A-20, T74 (Pratt & Whitney)	Pratt & Whitney	PN-3011400 (Descriptive Notes)	1974 .
1374	P	T	6	A-27	2	PT6A-27, PT6A-28 (Pratt & Whitney)	Pratt & Whitney	PN-3013242 (Maint. Man.)	1972 .
1375	P	T	6	A-27	2	PT6A-27, PT6A-28 (Pratt & Whitney)	Pratt & Whitney	PN-3013242 (Maint. Man.)	1969 .
1376	P	T	6	A-6	4	PT6A-6, PT6A-9, PT6A-20 (Pratt & Whitney)	Pratt & Whitney	PN-3015444 (Parts Cat.)	1969 .
1377		T	73	P-1	2	T73-P-1, T73-P-700 (Pratt & Whitney)	Pratt & Whitney	55-2840-230-241971 (Organization, Maint., DS, GS)	
1378	R-1830	94				Twin WASP, C9 (Pratt & Whitney)	Pratt & Whitney	Overhaul Man.	9/1944
1379						Axial Compressor, Turbojet, Turbofan Eng. (Pratt & Whitney)	Pratt & Whitney	Operating Instructions	1963 .

1380					3	Double Wasp A & B (Series, Pratt & Whitney)	Pratt & Whitney	#49656 (Overhaul)	1942 .
1381					1	Double Wasp A & B (Series, Pratt & Whitney)	Pratt & Whitney	#49655 (Operator's Handbook)	1943 .
1382					1	Double Wasp B (Series, Pratt & Whitney)	Pratt & Whitney	#72663 (Operator's Handbook)	
1383					1	Double Wasp CB-16 (Pratt & Whitney)	Pratt & Whitney	#166027 (Specific Operating Instructions)	1953 .
1384					1	Double Wasp CB-16, CB-17 (Pratt & Whitney)	Pratt & Whitney	P/N 174800 (Specific Operating Instructions)	1951 .
1385						Pratt & Whitney	Pratt & Whitney	Engine Trouble Shooting	
1386					1	Pratt & Whitney	Pratt & Whitney	Factors Producing Erratic Eng. Operation #240	1947 .
1387						Pratt & Whitney	Pratt & Whitney	PN-216148 (Gas Turbine Eng.)	1953 .
1388					1	Pratt & Whitney	Pratt & Whitney	Installation Handbook	1944 .
1389					4	Pratt & Whitney	Pratt & Whitney	Interchangeable Parts List	1947 .
1390					3	Pratt & Whitney	Pratt & Whitney	02-1-517 (Overhaul Plating Instructions)	1964 .

1391					3	Pratt & Whitney	Pratt & Whitney	1-2-1-111 (U.S. Army, Overhaul Plating Instructions)	1960 .
1392					3	Pratt & Whitney	Pratt & Whitney	02-10-3 (Overhaul Tools)	1944 .
1393					1	Pratt & Whitney	Pratt & Whitney	P/N 109702 (Aircraft Eng., & Operations)	1976 .
1394					1	Pratt & Whitney	Pratt & Whitney	Svc. School Handbook	1962 .
1395					3	Turbo-Jet Eng. (Pratt & Whitney)	Pratt & Whitney	PN-585005 (Overhaul Standard Practice)	1966 .
1396					3	Twin Wasp C (Series, Pratt & Whitney)	Pratt & Whitney	Overhaul Man., 3rd Ed.	7/41 .
1397					3	Twin Wasp C (Series, Pratt & Whitney)	Pratt & Whitney	#46966 (Overhaul)	1942 .
1398						Twin Wasp C-3, C-4 (Pratt & Whitney)	Pratt & Whitney	#86406 (Accessory Man.)	1944 .
1399					4	Twin Wasp (Series C3G, Pratt & Whitney)	Pratt & Whitney	Illustrated Parts Cat.	1942 .
1400						Pratt & Whitney	Pratt & Whitney	PWA-01-65 (2-Speed Supercharger & Operations)	1945 .
1401					1	Wasp C (Series, Pratt & Whitney)	Pratt & Whitney	Eng. Handbook	1929 .
1402						Wasp (Pratt & Whitney)	Pratt & Whitney	Eng. Handbook	1927 .

1403					1	Wasp & Wasp Jr. (Pratt & Whitney)	Pratt & Whitney	Operators Handbook	1937 Rev. 1939
1404					3	Wasp D-1, H-1, Hornet C-1, D, D-1, E, Wasp Jr. B	Pratt & Whitney	Overhaul Man.	1937 Rev. 1938
1405					3	Wasp Jr. B, Wasp H-1, Hornet E (Series), (Pratt & Whitney)	Pratt & Whitney	48616 (Overhaul)	1941 .
1406					3	Wasp Jr. B, Wasp H-1 Hornet (Series) (Pratt & Whitney)	Pratt & Whitney	486161 (Overhaul)	1942 .
1407					1	Wasp Jr. B, Wasp H2, Hornet E (Series) (Pratt & Whitney)	Pratt & Whitney	# 49130 (Operator's Handbook)	1941 .
1408						Wasp Major Eng. Conversion TSB3-G to B6 (Pratt & Whitney)	Pratt & Whitney	#15F-51 (Conversion Instructions)	1951 .
1409					2	Wasp Major (Models B6, CB2, Pratt & Whitney)	Pratt & Whitney	PN-182070 (Maint. Man.)	1956 .

1410					4	Wasp Major (Models B6, CB2, Pratt & Whitney)	Pratt & Whitney	PN-224400 (I.P.B.)	1953 .
1411					2	Wasp Major TSB3-G, VSB11B (115636) (Pratt & Whitney)	Pratt & Whitney	Maint. Man.	1947 .
1412					3	Wasp Major TSB3-G, TSB-13 (Pratt & Whitney)	Pratt & Whitney	PN-115637 (Overhaul Man.)	1950 .
1413					4	Wasp Major TSB3-G, VSB11G (Pratt & Whitney)	Pratt & Whitney	121-520 (I.P.B.)	1948 .
1414					4	Wasp Series C, C-1, D, Wasp Jr. A (Series), Hornet A-1, A-2, B-1, B (Pratt & Whitney)	Pratt & Whitney	Illustrated Parts List	1931 .
1415						Wasp Series C, C-1, D-1, Wasp Jr. Series A, B, Hornet Series A, B	Pratt & Whitney		
1416					1	Wasp, Hornet Eng. (Pratt & Whitney)	Pratt & Whitney	Operator's Handbook	1936 .

1417					1	Wasp, Hornet Eng. (Pratt & Whitney)	Pratt & Whitney	Operator's Handbook	1934 .
1418					4	Water Injection Regulators (Pratt & Whitney)	Pratt & Whitney	6R6-3-2-4 (Water Injection Regulators, Parts Cat., Book 24)	1959 .
1419		F	100	PW	2	F100-PW-100	Pratt & Whitney	2J-F100-6	7/1978
1420		F	100	PW	4	F100-PW-100(3)	Pratt & Whitney	2J-F100-4	8/76 X
1421		R	4360		1	R-4360 (Series)	Pratt & Whitney	2R-R4360-16 (Component I.D.)	12/63X
1422		R	4360		1	R-4360 (Series)	Pratt & Whitney	2R-R4360-16 (Component I.D., Technical Man.)	3/66 X
1423		R	4360	2	2	R-4360-2, R-4360-2A, R-4360-4, R-4360-18, R-4360-27, R-4360-35	Pratt & Whitney	02-10HA-2 (Svc. Instructions, Rev.)	7/46 X
1424		R	4360	2	4	R-4360-2, R-4360-2A, R-4360-4, R-4360-4A, R-4360-4W	Pratt & Whitney	02A-10HA-4 (Parts Cat.)	9/49 X

1425		R	4360	20	4	R-4360-20, R-4360-20A, R-4360-20B, R-4360-20C, R-4360-20T, R-4360-20AT, R-4360-20W, R-4360-20WA, R-4360-20WB, R-4360-20WC, R-4360-22W	Pratt & Whitney	2R-R4360-14 (Parts, Rev.)	4/62 X
1426		R	4360	20	4	R-4360-20, R-4360-20A, R-4360-20B, R-4360-20C, R-4360-20T, R-4360-20AT, R-4360-20W, R-4360-20WA, R-4360-20WB, R-4360-20WC, R-4360-22W	Pratt & Whitney	2R-R4360-14D (Parts Cat.)	1/61 X
1427		R	4360	20	4	R-4360-20, R-4360-20A, R-4360-20B, R-4360-20C, R-4360-20T, R-4360-20AT, R-4360-20W, R-4360-20WA, R-4360-20WB, R-4360-20WC, R-4360-22W	Pratt & Whitney	2R-R4360-14 (Parts, Rev.)	4/62 X

1428		R	4360	20	4	R-4360-20, R-4360-20A, R-4360-20B, R-4360-20C, R-4360-20T, R-4360-20AT, R-4360-20W, R-4360-20WA, R-4360-20WB, R-4360-20WC, R-4360-22W	Pratt & Whitney	2R-R4360-14 (Parts Cat., Rev.)	10/59X
1429		R	4360	20	3	R-4360-20, R-4360-20A, R-4360-20W, R-4360-20WA, R-4360-22W, R-4360-35, R-4360-35A, R-4360-35B, R-4360-35C, R-4360-49, R-4360-49A	Pratt & Whitney	2R-R4360-13 (Overhaul Rev.)	1/57 X
1430		R	4360	20	3	R-4360-20, R-4360-20A, R-4360-20W, R-4360-20WA, R-4360-22W, R-4360-35, R-4360-35A, R-4360-35B, R-4360-35C, R-4360-49, R-4360-49A	Pratt & Whitney	2R-R4360-13 (Overhaul Instructions)	6/51 X

1431		R	4360	20WA	3	R-4360-20WA, R-4360-35B	Pratt & Whitney	2R-R4360-13 (Overhaul Instructions)	4/66 X
1432		R	4360	20WA	4	R-4360-20WA, R-4360-35B	Pratt & Whitney	2R-R4360-14 (Parts)	3/66 X
1433		R	4360	4	4	R-4360-4, R- 4360-4W, R- 4360-4T, R- 4360-4WT	Pratt & Whitney	02A-10HA-4 (Parts Cat.)	10/52X
1434		R	4360	41	4	R-4360-41, R- 4360-41A	Pratt & Whitney	2R-R4360-24 (Parts Cat., Rev.)	4/54 X
1435		R	4360	41	4	R-4360-41, R- 4360-41A	Pratt & Whitney	02A-10HF-4 (Parts Cat.)	4/52 X
1436		R	4360	4T	4	R-4360-4T	Pratt & Whitney	02A-10HA-4 (Parts Cat., Rev.)	3/56 X
1437		R	4360	53	4	R-4360-53	Pratt & Whitney	02A-10HJ-4 (Parts Cat.)	8/51 X
1438		R	4360	59	4	R-4360-59, R- 4360-59B, R- 4360-61, R- 4360-63, R- 4360-63A	Pratt & Whitney	2R-R4360-44 (Parts Cat.)	5/53 X
1439		R	4360	59	3	R-4360-59, R- 4360-63	Pratt & Whitney	8E-4-3-103, (Ignition Com., Overhaul Instructions, Rev.)	7/72 X
1440		R	4360	59	3	R-4360-59, R- 4360-63, R- 4360-65	Pratt & Whitney	8E-4-3-113, (Igniton Harnes, Overhaul, Rev.)	2/74 X
1441		R	4360	59B	4	R-4360-59B	Pratt & Whitney	2R-R4360-44 (Parts, Rev.)	4/72 X
1442		R	4360	59B	3	R-4360-59B, R- 4360-63	Pratt & Whitney	8E2-2-7-3, (Ignition Sys., Overhaul Technical Man.)	5/74 X

1443		R	4360	59B	3	R-4360-59B, R-4360-63A	Pratt & Whitney	2R-R4360-53 (Overhaul Instructions)	8/76 X
1444		R	4360	59B	3	R-4360-59B, R-4360-63A, R-4360-63B, R-4360-65	Pratt & Whitney	2R-R4360-53 (Overhaul, Rev.)	4/70 X
1445		R	4360	63	4	R-4360-63, R-4360-63A	Pratt & Whitney	2R-R4360-54 (Parts Cat.)	1/59 X
1446		R	4360	63	4	R-4360-63, R-4360-63A	Pratt & Whitney	2R-R4360-54 (Parts Cat.)	4/57 X
1447		R	4360	63	4	R-4360-63, R-4360-63A	Pratt & Whitney	2R-R4360-44 (Parts Cat., Rev.)	12/53X
1448		R	4360	63A	4	R4360-63A	Pratt & Whitney	2R-R4360-54 (Parts)	3/66 X
1449		R	4360	63A	3	R-4360-63A	Pratt & Whitney	2R-R4360-53 (Overhaul Instructions, Rev.)	5/58 X
1450		R	1340		3	R-1340 (Series)	Pratt & Whitney	2R-R1340-5 (Rev.)	4/56 X
1451		R	1340	AN-1	4	R-1340-1N-1, R-1340-AN-2, R-1340-AN-40, R-1340-AN-42, R-1340-AN-46, R-1340-AN-48, R-1340-AN-50, R-1340-AN-55, R-1340-AN-57	Pratt & Whitney	02A-10DC-4B	3/61 X
1452		R	1340	36	4	R-1340-36	Pratt & Whitney	02-10DW-4	4/41 X
1453		R	1340	40	3	R-1340-40, R-1340-57	Pratt & Whitney	2R-R1340-13 (Rev.)	7/54 X

1454		R	1340	40	2	R-1340-40, R-1340-48, R-1340-52, R-1340-57	Pratt & Whitney	2R-R1340-12	7/58 X
1455		R	1340	40	2	R-1340-40, R-1340-48, R-1340-57	Pratt & Whitney	2R-R1340-12	7/55 X
1456		R	1340	41	1	R-1340-41, R-1340-43, R-1340-45, R-1340-47, R-1340-49, R-1340-51, R-1340-AN-1	Pratt & Whitney	02-10DC-1	5/43 X
1457		R	1340	41	2	R-1340-41, R-1340-43, R-1340-45, R-1340-47, R-1340-49, R-1340-51, R-1340-AN-1	Pratt & Whitney	02-10DC-2	11/44X
1458		R	1340	46		R-1340-46, R-1340-50	Pratt & Whitney	02A-10DE-502	4/56 X
1459		R	1340	47	4	R-1340-47	Pratt & Whitney	02-10DC-4	3/41 X
1460		R	1340	47	1	R-1340-47	Pratt & Whitney	02-10DC-1	8/40 X
1461		R	1340	47	2	R-1340-47	Pratt & Whitney	02-10DC-2	11/41X
1462		R	1340	48	3	R-1340-48, R-1340-52, R-1340-57	Pratt & Whitney	2R-R1340-13 (Rev.)	10/62X

1463		R	1340	40	3	R-1340-48, R-1340-52, R-1340-57	Pratt & Whitney	2R-R1340-13 (Rev.)	10/60X
1464		R	1340	48	3	R-1340-48, R-1340-52, R-1340-57	Pratt & Whitney	2R-R1340-13 (Rev.)	10/62X
1465		R	1340	48A	3	R-1340-48A, R-1340-52, R-1340-57	Pratt & Whitney	2R-R1340-13 (Rev.)	11/68X
1466		R	1340	59	2	R-1340-59	Pratt & Whitney	2R-R1340-22	5/57 X
1467		R	1340	59	2	R-1340-59	Pratt & Whitney	2R-R1340-22	5/57 X
1468		R	1340	59	4	R-1340-59	Pratt & Whitney	2R-R1340-24	5/57 X
1469		R	1340	59		R-1340-59, R-1340-61	Pratt & Whitney	2R-R1340-22 (Rev.)	1/60 X
1470		R	1340	59		R-1340-59, R-1340-61	Pratt & Whitney	55-2810-223-34P	9/70 X
1471		R	1340	59	2	R-1340-59, R-1340-61	Pratt & Whitney	55-2810-223-24	7/70 X
1472		R	1340	59	3	R-1340-59, R-1340-61	Pratt & Whitney	2R-R1340-23 (Rev.)	12/60X
1473		R	1340	AN1	4	R-1340-AN1	Pratt & Whitney	02-10DC-4B	12/41X
1474		R	1340	AN-1	4	R-1340-AN-1	Pratt & Whitney	02-10DC-4B (Rev.)	6/46 X
1475		R	1340	AN-1	4	R-1340-AN-1	Pratt & Whitney	02-10DC-4B	5/45 X
1476		R	1340	AN-1	2	R-1340-AN-1	Pratt & Whitney	02A-10DC-2 (Rev.)	12/48Y
1477		R	1340	AN-1	3	R-1340-AN-1	Pratt & Whitney	02-10DC-3 (Rev.)	6/46 X

1478		R	1340	AN-1	4	R-1340-AN-1	Pratt & Whitney	02A-10DC-4B	10/47X
1479		R	1340	AN-1	4	R-1340-AN-1	Pratt & Whitney	02A-10DC-4B (Rev.)	9/49 X
1480		R	1340	AN-1	4	R-1340-AN-1	Pratt & Whitney	02A-10DC-4B (Rev.)	3/49 X
1481		R	1340	AN-1	4	R-1340-AN-1, R-1340-AN-2, R-1340-AN-40, R-1340-AN-42, R-1340-AN-46, R-1340-AN-48, R-1340-AN-50, R-1340-AN-52, R-1340-AN-55, R-1340-AN-57	Pratt & Whitney	2R-R1340-4	3/60 X
1482		R	1340	AN-1	4	R-1340-AN-1, R-1340-48, R-1340-57	Pratt & Whitney	2R-R1340-4	8/67 X
1483		R	1340	AN-1	4	R-1340-AN-1, S1H2, S3H1, S3H1, SQ, S1H1-G	Pratt & Whitney	10A-10BA-4	10/56X
1484		R	1340	AN-1	4	R-1340-AN-1, R-1340-AN-40, R-1340-AN-55, R-1340-AN-57	Pratt & Whitney	02A-10DC-4B	
1485		R	1340	AN-1	4	R-1340-AN-1, R-1340-AN-48, R-1340-AN-57, R-1340-AN-48A, R-1340-AN-52	Pratt & Whitney	2R-R1340-4	8/67 X

1486		R	1340	AN-1	2	R-1340-AN-1, R-1340-AN-55, R-1340-AN-57	Pratt & Whitney	2R-R1340-501	3/59 X
1487		R	1340	AN-1	4	R-1340-AN-1, R-1340-AN-2, R-1340-AN-40, R-1340-AN-42, R-1340-AN-46, R-1340-AN-48, R-1340-AN-50, R-1340-AN-55, R-1340-AN-57	Pratt & Whitney	2R-R1340-4 (Rev.)	3/56 X
1488		R	1340	AN-1	4	R-1340-AN-1, R-1340-AN-2, R-1340-AN-40, R-1340-AN-42, R-1340-AN-46, R-1340-AN-48, R-1340-AN-50, R-1340-AN-55, R-1340-AN-57	Pratt & Whitney	2R-R1340-4	12/57X
1489		R	1340	AN-1	4	R-1340-AN-1, R-1340-AN-2, R-1340-AN-40, R-1340-AN-42, R-1340-AN-46, R-1340-AN-48, R-1340-AN-50, R-1340-AN-55, R-1340-AN-57	Pratt & Whitney	2R-R1340-4 (Rev.)	3/61 X
1490		R	1340	AN-2	2	R-1340-AN-2, R-1340-AN-46, R-1340-AN-50	Pratt & Whitney	02A-10DE-502	4/56 X

1491		R	1830		4	R-1830	Pratt & Whitney	02-10CZ-4	7/42 X
1492		R	1830		'2-1	R-1830 (SIC3G Eng.)	Pratt & Whitney	Maint. Man.	5/66 X
1493		R	1830		3	R-1830 (Series)	Pratt & Whitney	2R-R1830-5 (Rev.)	10/59X
1494		R	1830		3	R-1830 (Series)	Pratt & Whitney	Progressive Overhaul	3/44 Y
1495		R	1830	17	3	R-1830-17	Pratt & Whitney	02-10CB-3	7/42 X
1496		R	1830	17	4	R-1830-17	Pratt & Whitney	02-10CB-4	2/41 Y
1497		R	1830	17	2	R-1830-17, R-1830-21	Pratt & Whitney	02-10CB-2	5/44 X
1498		R	1830	17	3	R-1830-17, R-1830-21	Pratt & Whitney	02-10CB-3	8/44 X
1499		R	1830	33	2	R-1830-33, R-1830-41, R-1830-43, R-1830-43A, R-1830-55, R-1830-61, R-1830-63, R-1830-65, R-1830-65A, R-1830-67, R-1830-90, R-1830-90B, R-1830-90C	Pratt & Whitney	02-10CD-2	6/45 X

1500		R	1830	33	3	R-1830-33, R-1830-41, R-1830-43, R-1830-43A, R-1830-55, R-1830-61, R-1830-63, R-1830-65, R-1830-65A, R-1830-67, R-1830-90, R-1830-90B, R-1830-90C	Pratt & Whitney	02-10CD-3	8/45 X
1501		R	1830	33	3	R-1830-33, R-1830-41, R-1830-45, R-1830-47, R-1830-49, R-1830-51, R-1830-53, R-1830-57, R-1830-61, R-1830-63, R-1830-65, R-1830-67, R-1830-82, R-1830-90, R-1830-90B, R-1830-92	Pratt & Whitney	02-10CW-3	10/43Y

1502		R	1830	35	2	R-1830-35, R-1830-45, R-1830-47, R-1830-49, R-1830-51, R-1830-53, R-1830-57, R-1830-82, R-1830-92	Pratt & Whitney	02-10CC-2	6/45 X
1503		R	1830	35	3	R-1830-35, R-1830-45, R-1830-47, R-1830-49, R-1830-51, R-1830-53, R-1830-57, R-1830-82, R-1830-92	Pratt & Whitney	02-10CC-3	6/45 X
1504		R	1830	35	1	R-1830-35, R-1830-47, R-1830-49, R-1830-57	Pratt & Whitney	02-10CB-1B	2/43 X
1505		R	1830	35	1	R-1830-35, R-1830-47, R-1830-49, R-1830-57	Pratt & Whitney	02-10CB-1B	2/43 X
1506		R	1830	43	3	R-1830-43 (Pratt & Whitney)	Pratt & Whitney	Disassemble, Reassemble, Inspection (Photos)	
1507		R	1830	43	4	R-1830-43, R-1830-43A, R-1830-65, R-1830-65A	Pratt & Whitney	02-10CD-4	9/44 X

1508		R	1830	43	4	R-1830-43, R-1830-43A, R-1830-65, R-1830-65A, R-1830-67	Pratt & Whitney	02-10CD-4 (Rev.)	6/46 X
1509		R	1830	43	4	R-1830-43, R-1830-43A, R-1830-65, R-1830-65A, R-1830-67, R-1830-90B, R-1830-90C, R-1830-90D	Pratt & Whitney	02A-10CD-4	4/49 X
1510		R	1830	43	2	R-1830-43, R-1830-43A, R-1830-65, R-1830-65A, R-1830-90C, R-1830-90D	Pratt & Whitney	02A-10CD-2 (Rev.)	9/48 X
1511		R	1830	43	3	R-1830-43, R-1830-43A, R-1830-65, R-1830-65A, R-1830-90C, R-1830-90D	Pratt & Whitney	02A-10CD-3 (Rev.)	8/52 X
1512		R	1830	43	2	R-1830-43, R-1830-65, R-1830-90C, R-1830-90D	Pratt & Whitney	02A-10CD-2	9/50 X
1513		R	1830	43	4	R-1830-43, R-1830-65, R-1830-90C, R-1830-90D	Pratt & Whitney	2R-R1830-4	1/57 X

1514		R	1830	43	4	R-1830-43, R-1830-65, R-1830-90C, R-1830-90D, R-1830-92, R-1830-92A	Pratt & Whitney	2R-R1830-4 (Rev.)	1/60 X
1515		R	1830	43	4	R-1830-43, R-1830-43A, R-1830-65A, R-1830-67	Pratt & Whitney	02-10CD-4	6/45 X
1516		R	1830	45	4	R-1830-45	Pratt & Whitney	02-10CB-4C	6/42 X
1517		R	1830	51	1	R-1830-51, R-1830-53, R-1830-92	Pratt & Whitney	02-10CB-1D	1/43 X
1518		R	1830	51	1	R-1830-51, R-1830-53, R-1830-92	Pratt & Whitney	02-10CB-1D	1/43 X
1519		R	1830	61	4	R-1830-61	Pratt & Whitney	02-10CB-4F	11/42X
1520		R	1830	75	4	R-1830-75, R-1830-98	Pratt & Whitney	02-10CG-4	7/45 X
1521		R	1830	75	2	R-1830-75, R-1830-98	Pratt & Whitney	02-10CG-2	8/45 X
1522		R	1830	75	2	R-1830-75, R-1830-98	Pratt & Whitney	02-10CG-2 (Rev.)	6/46 X
1523		R	1830	75	2	R-1830-75, R-1830-98	Pratt & Whitney	02-1000-2	8/45 C
1524		R	1830	82	2	R-1830-82, R-1830-92	Pratt & Whitney	02A-10CC-2	10/48Y
1525		R	1830	82	2	R-1830-82, R-1830-92	Pratt & Whitney	02-10CC-2 (Rev.)	8/47 Y
1526		R	1830	82	2	R-1830-82, R-1830-92	Pratt & Whitney	02-10CC-2	3/47 X

1527		R	1830	82	3	R-1830-82, R-1830-92	Pratt & Whitney	02-10CC-3 (Rev.)	5/46 Y
1528		R	1830	90B	4	R-1830-90B, R-1830-90C	Pratt & Whitney	02-10CD-4A	7/45 X
1529		R	1830	90B	4	R-1830-90B, R-1830-90C	Pratt & Whitney	02-10CD-4A	7/45 X
1530		R	1830	90B	4	R-1830-90B, R-1830-90C	Pratt & Whitney	02-10CD-4A	10/44X
1531		R	1830	90C	3	R-1830-90C, R-1830-90D, R-1830-92, R-1830-92A	Pratt & Whitney	02A-10CD-3 (Rev.)	7/67 X
1532		R	1830	90C	4	R-1830-90C, R-1830-90D, R-1830-92A	Pratt & Whitney	02A-10CD-4	7/67 C
1533		R	1830	90C	3	R-1830-90C, R-1830-90D, R-1830-92	Pratt & Whitney	2R-R1830-3	7/67 X
1534		R	1830	90C	3	R-1830-90C, R-1830-90D, R-1830-92, R-1830-92A	Pratt & Whitney	2R-1830-3 (Rev.)	2/73 X
1535		R	1830	90C	4	R-1830-90C, R-1830-90D, R-1830-92, R-1830-92A	Pratt & Whitney	2B-R1830-4	8/82 X
1536		R	1830	92	3	R-1830-92	Pratt & Whitney	02-10CC-3	8/47 X
1537		R	1830	92	4	R-1830-92	Pratt & Whitney	10A-10CA-4 (Rev.)	3/55 X
1538		R	1830	92	4	R-1830-92	Pratt & Whitney	02A-10CC-4	9/51 X
1539		R	1830	92	3	R-1830-92, R-1830-92A	Pratt & Whitney	2R-R1830-23 (Rev.)	1/59 X

1540		R	1830	92	3	R-1830-92, R-1830-92A	Pratt & Whitney	2R-R1830-23 (Rev.)	11/55X
1541		R	1830	92	4	R-1830-92, R-1830-92A	Pratt & Whitney	2R-R1830-24 (Rev.)	1/58 X
1542		R	1830	94	2-Jan	R-1830-94	Pratt & Whitney	02-10CE-2	4/46 X
1543		R	1830	94	2	R-1830-94	Pratt & Whitney	02-10CE-2	11/48X
1544		R	1830	94	2	R-1830-94	Pratt & Whitney	02-10CE-2	1/56 X
1545		R	1830	94	3	R-1830-94	Pratt & Whitney	02A-10CE-3 (Rev.)	6/52 X
1546		R	1830	94	3	R-1830-94	Pratt & Whitney	02A-10CE-3	5/48 X
1547		R	1830	94	3	R-1830-94	Pratt & Whitney	02A-10CE-3	2/56 X
1548		R	1830	94	3	R-1830-94	Pratt & Whitney	02A-10CE-3 (Rev.)	5/51 X
1549		R	1830	94	3	R-1830-94	Pratt & Whitney	02A-10CE-3 (Rev.)	2/56 C
1550		R	1830	94	4	R-1830-94	Pratt & Whitney	02A-10CE-4	7/52 X
1551		R	1830	94	4	R-1830-94	Pratt & Whitney	02A-10CE-4	12/56X
1552		R	1830	94	4	R-1830-94	Pratt & Whitney	02A-10CE-4 (Rev.)	12/56X
1553		R	1830	94	4	R-1830-94	Pratt & Whitney	02A-10CE-4	7/52 Y
1554		R	1830	94	4	R-1830-94	Pratt & Whitney	02A-10CE-4 (Rev.)	12/55Y
1555		R	1830	94	4	R-1830-94	Pratt & Whitney	02A-10CE-4 (Rev.)	12/56X

1556		R	1830		4	R-1830, R-1830-43, R-1830-65, R-1830-90C, R-1830-90D, R-1830-92, R-1830-92A	Pratt & Whitney	02A-10CD-4 (Parts Cat.)	1/1960
1557		R	2000		3	R-2000 (Series)	Pratt & Whitney	2R-R2000-5 (Rev.)	2/58 X
1558		R	2000	11	2	R-2000-11	Pratt & Whitney	02A-10FA-2 (Rev.)	3/51 X
1559		R	2000	11	3	R-2000-11	Pratt & Whitney	02A-10FA-3 (Rev.)	4/52 X
1560		R	2000	3	2	R-2000-3, R-2000-7, R-2000-11	Pratt & Whitney	02-10FA-2	3/45 X
1561		R	2000	3	3	R-2000-3, R-2000-7, R-2000-11	Pratt & Whitney	02-10FA-3 (Rev.)	6/46 X
1562		R	2000	3	4	R-2000-3, R-2000-7, R-2000-11	Pratt & Whitney	02-10FA-4	1/45 X
1563		R	2000	4	4	R-2000-4	Pratt & Whitney	2R-R2000-24 (Rev.)	10/57X
1564		R	2000	4	4	R-2000-4	Pratt & Whitney	2R-R2000-24 (Rev.)	3/55 X
1565		R	2000	4	4	R-2000-4	Pratt & Whitney	2R-2000-24 (Rev.)	7/57 X
1566		R	2000	4	3	R-2000-4	Pratt & Whitney	2R-R2000-23	5/57 X
1567		R	2000	4	3	R-2000-4, R-2000-4A	Pratt & Whitney	2R-R2000-23 (Rev.)	11/60X

1568		R	2000	4	2	R-2000-4, R-2000-4A, R-2000-6, R-2000-6A, R-2000-9A	Pratt & Whitney	02A-10FC-2	12/64X
1569		R	2000	4	3	R-2000-4, R-2000-4A, R-2000-6, R-2000-6A, R-2000-9A	Pratt & Whitney	02A-10FC-3 (Rev.)	7/67 X
1570		R	2000	4	3	R-2000-4, R-2000-4A, R-2000-6, R-2000-6A, R-2000-9A	Pratt & Whitney	2R-R2000-23 (Rev.)	8/66 X
1571		R	2000	4	4	R-2000-4, R-2000-4A, R-2000-6, R-2000-6A, R-2000-9A	Pratt & Whitney	2R-R2000-24 (Rev.)	7/62 X
1572		R	2000	4	4	R-2000-4, R-2000-4A, R-2000-6, R-2000-6A, R-2000-9A, 7M2	Pratt & Whitney	2R-R2000-24 (Rev.)	7/74 X
1573		R	2000	4	4	R-2000-4, R-2000-4A, R-2000-6, R-2000-6A, R-2000-9A, 7M2	Pratt & Whitney	2R-R2000-24 (Rev.)	12/74X
1574		R	2000	4	3	R-2000-4, R-2000-4A, R-2000-6, R-2000-6A, R-2000-9A, 7M2	Pratt & Whitney	2R-2000-23 (Overhaul Instructions)	1977 .

1575		R	2000	4	4	R-2000-4, R-2000-4A, R-2000-6, R-2000-6A, R-2000-9A, 7M2	Pratt & Whitney	2R-R2000-24 (I.P.B.)	1974 .
1576		R	2000	4	3	R-2000-4, R-2000-4A, R-2000-9, R-2000-9A, R-2000-11	Pratt & Whitney	2R-R2000-23 (Rev.)	11/62X
1577		R	2000	4	4	R-2000-4, R-2000-4A, R-2000-9, R-2000-9A, R-2000-11	Pratt & Whitney	2R-R2000-24	7/61 X
1578		R	2000	4	4	R-2000-4, R-2000-4A, R-2000-9, R-2000-9A, R-2000-11	Pratt & Whitney	2R-R2000-24	7/61 X
1579		R	2000	4	4	R-2000-4, R-2000-4A, R-2000-9, R-2000-9A, R-2000-11	Pratt & Whitney	2R-R2000-24 (I.P.B.)	1961 .
1580		R	2000	4	3	R-2000-4, R-2000-6, R-2000-6A, R-2000-9A	Pratt & Whitney	2R-R2000-23	3/78 X
1581		R	2000	7	4	R-2000-7, R-2000-9, R-2000-11	Pratt & Whitney	02A-10FA-4	4/48 X
1582		R	2000	9	2	R-2000-9	Pratt & Whitney	02-10FB-2	5/45 X
1583		R	2000	9	4	R-2000-9	Pratt & Whitney	2R-R2000-14 (Rev.)	11/57X
1584		R	2000	9	4	R-2000-9	Pratt & Whitney	2R-R2000-14 (Rev.)	11/56X

1585		R	2000	9	4	R-2000-9	Pratt & Whitney	02-10FB-4	5/46 X
1586		R	2000	9	2	R-2000-9, R-2000-9A	Pratt & Whitney	02A-10FB-2	3/58 X
1587		R	2000	9	3	R-2000-9, R-2000-9A	Pratt & Whitney	2R-R2000-13 (Rev.)	3/57 X
1588		R	2000	9	4	R-2000-9, R-2000-9B	Pratt & Whitney	02A-10FB-4	7/50 X
1589		R	2000	9A	4	R-2000-9A, R-2000-11	Pratt & Whitney	2R-R2000-4 (Rev.)	9/57 X
1590		R	2000	9A	4	R-2000-9A, R-2000-11	Pratt & Whitney	2R-R2000-4 (Rev.)	9/57 X
1591		R	2000	9A	4	R-2000-9A, R-2000-11	Pratt & Whitney	2R-R2000-4	9/56 X
1592		R	2000	9A	4	R-2000-9A, R-2000-11	Pratt & Whitney	2R-R2000-4 (I.P.B.)	1957 .
1593		R	2600	29	4	R-2800-29, R-2800-31	Pratt & Whitney	02-35HB-4C	6/44 Y
1594		R	2600	8A	4	R-2800-8, R-2800-8A, R-2800-12, R-2800-13, R-2800-20, R-2800-22, R-2800-29, R-2800-31	Pratt & Whitney	02A-35H-4 (Rev.)	9/51 X
1595		R	2800		2	R-2800	Pratt & Whitney	2R-R2800-502	3/55 X
1596		R	2800		2	R-2800, R-2800-18W, R-2800-18WA, R-2800-38W	Pratt & Whitney	02-10GD-2 (Svc. Instructions)	4/1945

1597		R	2800		2	R-2800	Pratt & Whitney	2R-1-20 (Eng. Improvement Digest for Propulsion Sys.)	1960 .
1598		R	2800		3	R-2800 (Series)	Pratt & Whitney	2R-R2800-5	1/61 X
1599		R	2800	27	4	R-2800, R-2800-27, R-2800-31, R-2800-43, R-2800-51, R-2800-59, R-2800-71, R-2800-75, R-2800-79	Pratt & Whitney	2R-R2800-4 (Rev.)	7/58 X
1600		R	2800	10	2	R-2800-10	Pratt & Whitney	02-10GB-2	3/43 X
1601		R	2800	10	3	R-2800-10	Pratt & Whitney	02-10GB-3	2/43 X
1602		R	2800	14W	4	R-2800-14W, R-2800-22, R-2800-22W, R-2800-34, R-2800-34W, R-2800-57, R-2800-73, R-2800-77, R-2800-81, R-2800-83, R-2800-85	Pratt & Whitney	02-10GC-4 (Rev.)	6/47 Y

1603		R	2800	14W	2	R-2800-14W, R-2800-22, R-2800-22W, R-2800-28, R-2800-34, R-2800-34W, R-2800-34WA, R-2800-36, R-2800-40, R-2800-40W, R-2800-57, R-2800-73, R-2800-77, R-2800-81	Pratt & Whitney	02-10GC-2 (Svc. Instructions)	1945 .
1604		R	2800	14W	3	R-2800-14W, R-2800-22, R-2800-22W, R-2800-28, R-2800-34, R-2800-34W, R-2800-36, R-2800-57, R-2800-73, R-2800-77, R-2800-81, R-2800-83, R-2800-85	Pratt & Whitney	02-10GC-3 (Overhaul Instructions)	1945 .

1605		R	2800	14W	2	R-2800-14W, R-2800-22, R-2800-22W, R-2800-34, R-2800-34W, R-2800-57, R-2800-73, R-2800-77, R-2800-81, R-2800-83, R-2800-85	Pratt & Whitney	02-10GC-2 (Rev.)	4/47 X
1606		R	2800	14W	3	R-2800-14W, R-2800-22, R-2800-22W, R-2800-34, R-2800-34W, R-2800-57, R-2800-73, R-2800-77, R-2800-81, R-2800-83, R-2800-85	Pratt & Whitney	02-10GC-3	11/46X
1607		R	2800	14W	3	R-2800-14W, R-2800-22, R-2800-22W, R-2800-34, R-2800-34W, R-2800-57, R-2800-73, R-2800-77, R-2800-81, R-2800-83, R-2800-85	Pratt & Whitney	02-10GC-3 (Rev.)	5/47 C

1608		R	2800	18	4	R-2800-18, R-2800-42	Pratt & Whitney	02A-10GD-4	7/54 X
1609		R	2800	18	4	R-2800-18W, R-2800-18WA, R-2800-42W	Pratt & Whitney	02A-10GD-4 (Parts Cat.)	1/1950
1610		R	2800	18W	3	R-2800-18W, R-2800-42W	Pratt & Whitney	02A-10GD-3 (Rev.)	1/56 X
1611		R	2800	21	2	R-2800-21, R-2800-27, R-2800-31, R-2800-41, R-2800-43, R-2800-47, R-2800-51, R-2800-59, R-2800-63, R-2800-71, R-2800-75, R-2800-79	Pratt & Whitney	02-10GA-2	5/44 Y
1612		R	2800	21	3	R-2800-21, R-2800-27, R-2800-31, R-2800-43, R-2800-51, R-2800-59, R-2800-63, R-2800-71, R-2800-75, R-2800-79	Pratt & Whitney	2R-R2800-3	1/49 X

1613		R	2800	21	3	R-2800-21, R-2800-27, R-2800-31, R-2800-43, R-2800-51, R-2800-59, R-2800-63, R-2800-71, R-2800-75, R-2800-79	Pratt & Whitney	02-10GA-3 (Rev.)	12/46X
1614		R	2800	21	4	R-2800-21, R-2800-27, R-2800-31, R-2800-43, R-2800-51, R-2800-59, R-2800-63, R-2800-71, R-2800-75, R-2800-79	Pratt & Whitney	02A-10GA-4C (Rev.)	2/48 X
1615		R	2800	21	4	R-2800-21, R-2800-27, R-2800-31, R-2800-43, R-2800-51, R-2800-59, R-2800-63, R-2800-71, R-2800-79	Pratt & Whitney	02-10GA-4C (Rev.)	10/46X

1616		R	2800	22	3	R-2800-22, R-2800-22W, R-2800-34, R-2800-34W, R-2800-57, R-2800-73, R-2800-77, R-2800-81, R-2800-83, R-2800-85	Pratt & Whitney	02A-10GC-3 (Rev.)	11/49Y
1617		R	2800	22	4	R-2800-22, R-2800-22W, R-2800-34, R-2800-34W, R-2800-57, R-2800-73, R-2800-77, R-2800-81, R-2800-83, R-2800-85	Pratt & Whitney	02A-10GC-4	4/50 Y
1618		R	2800	22	4	R-2800-22, R-2800-22W, R-2800-34, R-2800-34W, R-2800-57, R-2800-73, R-2800-77, R-2800-81, R-2800-85	Pratt & Whitney	02A-10GC-4	4/50 X

1619		R	2800	27	4	R-2800-27, R-2800-31, R-2800-43, R-2800-51, R-2800-59, R-2800-71, R-2800-75, R-2800-79	Pratt & Whitney	2R-R2800-4	4/59 X
1620		R	2800	27	3	R-2800-27, R-2800-31, R-2800-43, R-2800-51, R-2800-59, R-2800-71, R-2800-75, R-2800-79	Pratt & Whitney	02A-10GA-3 (Rev.)	1/51 X
1621		R	2800	27	4	R-2800-27, R-2800-31, R-2800-43, R-2800-51, R-2800-59, R-2800-71, R-2800-75, R-2800-79	Pratt & Whitney	2R-R2800-4 (Rev.)	4/59 X
1622		R	2800	27	4	R-2800-27, R-2800-31, R-2800-43, R-2800-51, R-2800-59, R-2800-71, R-2800-75, R-2800-79	Pratt & Whitney	02A-10GA-4C (Rev.)	12/52Y

1623		R	2800	27	2	R-2800-27, R-2800-31, R-2800-43, R-2800-51, R-2800-71, R-2800-75, R-2800-79	Pratt & Whitney	02A-10GA-2 (Rev.)	7/48 X
1624		R	2800	27	3	R-2800-27, R-2800-31, R-2800-43, R-2800-51, R-2800-71, R-2800-75, R-2800-79	Pratt & Whitney	2R-R2800-3 (Rev.)	6/57 X
1625		R	2800	27	3	R-2800-27, R-2800-31, R-2800-43, R-2800-51, R-2800-71, R-2800-75, R-2800-79	Pratt & Whitney	2R-R2800-3 (Rev.)	9/60 X
1626		R	2800	27	3	R-2800-27, R-2800-31, R-2800-43, R-2800-51, R-2800-71, R-2800-75, R-2800-79	Pratt & Whitney	2R-R2800-3 (Rev.)	9/60 X

1627		R	2800	27	3	R-2800-27, R-2800-31, R-2800-43, R-2800-51, R-2800-71, R-2800-75, R-2800-79	Pratt & Whitney	2R-R2800-3 (Rev.)	12/55X
1628		R	2800	27	3	R-2800-27, R-2800-75, R-2800-79	Pratt & Whitney	2R-R2800-3 (Rev.)	9/69 X
1629		R	2800	27	4	R-2800-27, R-2800-75, R-2800-79	Pratt & Whitney	2R-R2800-4	2/66 X
1630		R	2800	30	4	R-2800-30, R-2800-32	Pratt & Whitney	02A-10GE-4 (Rev.)	11/56X
1631		R	2800	30W	4	R-2800-30W, R-2800-32W	Pratt & Whitney	02A-10GE-4	8/51 X
1632		R	2800	30W	2	R-2800-30W, R-2800-32W	Pratt & Whitney	02A-10GE-2 (Rev.)	1/56 X
1633		R	2800	30W	2	R-2800-30W, R-2800-32W	Pratt & Whitney	02A-10GE-2 (Rev.)	1/56 X
1634		R	2800	30W	3	R-2800-30W, R-2800-32W	Pratt & Whitney	02A-10GE-3	1/52 X
1635		R	2800	30W	3	R-2800-30W, R-2800-32W	Pratt & Whitney	02A-10GE-3 (Rev.)	6/52 X
1636		R	2800	30W	4	R-2800-30W, R-2800-32W	Pratt & Whitney	02A-10GE-4	11/49X
1637		R	2800	30W	4	R-2800-30W, R-2800-32W	Pratt & Whitney	02A-10GE-4 (I.P.B.)	1949 .

1638		R	2800	34	3	R-2800-34, R-2800-57, R-2800-73, R-2800-77, R-2800-81, R-2800-83, R-2800-83A, R-2800-85	Pratt & Whitney	2R-R2800-23 (Rev.)	3/58 X
1639		R	2800	34	4	R-2800-34, R-2800-57, R-2800-73, R-2800-77, R-2800-81, R-2800-83, R-2800-83A, R-2800-85	Pratt & Whitney	2R-R2800-24 (Rev.)	11/56X
1640		R	2800	44	2	R-2800-44, R-2800-48, R-2800-97	Pratt & Whitney	02A-10GF-2 (Rev.)	1/56 Y
1641		R	2800	44	3	R-2800-44, R-2800-48, R-2800-97	Pratt & Whitney	2R-R2800-33G (Sup.)	3/61 X
1642		R	2800	44	3	R-2800-44, R-2800-48, R-2800-97	Pratt & Whitney	2R-R2800-33 (Rev.)	1/61 X
1643		R	2800	44	4	R-2800-44, R-2800-48, R-2800-97	Pratt & Whitney	2R-R2800-34 (Rev.)	3/61 X
1644		R	2800	44W	2	R-2800-44W, R-2800-48, R-2800-95, R-2800-97	Pratt & Whitney	02A-10GF-2 (Rev.)	1/56 X

1645		R	2800	44W	2	R-2800-44W, R-2800-48, R-2800-95, R-2800-97	Pratt & Whitney	02A-10GF-2 (Rev.)	12/52X
1646		R	2800	44W	3	R-2800-44W, R-2800-48, R-2800-95, R-2800-97	Pratt & Whitney	2R-R2800-33 (Rev.)	7/53 X
1647		R	2800	44W	4	R-2800-44W, R-2800-48, R-2800-95, R-2800-97	Pratt & Whitney	02A-10GF-4 (Rev.)	11/52X
1648		R	2800	44W	2	R-2800-44W, R-2800-48, R-2800-97	Pratt & Whitney	02A-10GF-2 (Rev.)	8/54 X
1649		R	2800	5	2	R-2800-5	Pratt & Whitney	02-A0GA-2	6/42 X
1650		R	2800	5	3	R-2800-5, R-2800-21, R-2800-27, R-2800-31, R-2800-35, R-2800-39, R-2800-41, R-2800-43, R-2800-51	Pratt & Whitney	02-10GA-3	2/43 X
1651		R	2800	5	4	R-2800-5, R-2800-21, R-2800-35	Pratt & Whitney	02-10GA-4	11/43X

1652		R	2800	5	2	R-2800-5, R-2800-6, R-2800-21, R-2800-27, R-2800-31, R-2800-35, R-2800-39, R-2800-41, R-2800-43, R-2800-47, R-2800-51, R-2800-59, R-2800-63	Pratt & Whitney	02-10GA-2	6/45 X
1653		R	2800	5	3	R-2800-5, R-2800-6, R-2800-21, R-2800-27, R-2800-31, R-2800-35, R-2800-39, R-2800-41, R-2800-43, R-2800-47, R-2800-59, R-2800-63	Pratt & Whitney	02-10GA-3	8/44 X
1654		R	2800	50	2	R-2800-50, R-2800-50A, R-2800-52W, R-2800-54, R-2800-99W, R-2800-103W	Pratt & Whitney	02A-10GH-2 (Rev.)	8/59 X

1655		R	2800	50	3	R-2800-50, R-2800-50A, R-2800-52W, R-2800-54, R-2800-99W, R-2800-103W	Pratt & Whitney	2R-R2800-43 (Rev.)	4/59 X
1656		R	2800	50	3	R-2800-50, R-2800-50A, R-2800-52W, R-2800-54, R-2800-99W, R-2800-103W	Pratt & Whitney	2R-R2800-43	1/57 X
1657		R	2800	50	3	R-2800-50, R-2800-50A, R-2800-52W, R-2800-54, R-2800-99W, R-2800-103W	Pratt & Whitney	2R-R2800-43 (Rev.)	1/61 X
1658		R	2800	50	4	R-2800-50, R-2800-50A, R-2800-52W, R-2800-54, R-2800-99W, R-2800-103W	Pratt & Whitney	2R-R2800-44 (Rev.)	3/59 X
1659		R	2800	52W	3	R-2800-52W	Pratt & Whitney	02A-10GH-6-3 (Cards)	9/73 X
1660		R	2800	52W	2	R-2800-52W, R-2800-54	Pratt & Whitney	02A-10GH-2	4/69 X
1661		R	2800	52W	3	R2800-52W, R-2800-54	Pratt & Whitney	2R-R2800-43 (Overhaul Instructions)	11/83X
1662		R	2800	52W	2	R2800-52W, R-2800-54	Pratt & Whitney	02A-10GH-2	2/66 X

1663		R	2800	52W	3	R2800-52W, R-2800-54	Pratt & Whitney	2R-R2800-43	2/65 X
1664		R	2800	52W	3	R-2800-52W, R-2800-54, R-2800-97, R-2800-99W, R-2800-103W	Pratt & Whitney	2R-R2800-43	6/75 X
1665		R	2800	52W	4	R-2800-52W, R-2800-54, R-2800-97, R-2800-99W, R-2800-103W	Pratt & Whitney	2R-R2800-44	1/83 X
1666		R	2800	52W	1	R-2800-52W, R-2800-97, R-2800-99W, R-2800-103W	Pratt & Whitney	2R-R2800-1 (Rev.)	2/67 X
1667		R	2800	52W	2	R-2800-52W, R-2800-99W, R-2800-103W	Pratt & Whitney	02A-10GH-4	
1668		R	2800	75	3	R-2800-75	Pratt & Whitney	2R-R2800-3D	2/67 X
1669		R	2800	8	4	R-2800-8, R-2800-10	Pratt & Whitney	02A-10GB-4	5/58 X
1670		R	2800	8	2	R-2800-8, R-2800-10	Pratt & Whitney	02A-10GB-2 (Rev.)	12/56X
1671		R	2800	8	2	R-2800-8, R-2800-10, R-2800-10W, R-2800-65	Pratt & Whitney	02-10GB-2	6/45 X
1672		R	2800	8	3	R-2800-8, R-2800-10W	Pratt & Whitney	02A-10GB-3 (Rev.)	5/52 X
1673		R	2800	8	3	R-2800-8, R-2800-10W, R-2800-65	Pratt & Whitney	02A-10GB-3 (Rev.)	5/50 X

1674		R	2800	8	3	R-2800-8, R-2800-8W, R-2800-10, R-2800-10W, R-2800-65	Pratt & Whitney	02-10GB-3 (Rev.)	9/45 X
1675		R	2800	8	4	R-2800-8, R-2800-8W, R-2800-10, R-2800-10W, R-2800-65	Pratt & Whitney	02A-10GB-4 (Rev.)	2/48 X
1676		R	2800	97	3	R-2800-97	Pratt & Whitney	2R-R2800-33 (Rev.)	7/62 X
1677		R	2800	97	4	R-2800-97	Pratt & Whitney	2R-R2800-34	2/62 X
1678		R	2800	B	1 thru 4	R-2800B (Series, 18 Cylinder High Tension Ignition System)	Pratt & Whitney	03-5DD-1 (Operations, Svc., Overhaul, I.P.B.)	
1679		R	2800	B	1	R-2800B (Series, Turbocharged Eng. w/ Water Injection)	Pratt & Whitney	01-45 (Preliminary Operations Instructions)	1944 .
1680		R	2800		3	R-2800-CA, R-2800-CB, R-2800-97, R-2800-99	Pratt & Whitney		11/83X
1681		T	73	P-1	4	T73-P-1, T-73-P-700	Pratt & Whitney	55-2840-230-34P	6/72 X
1682		T	400	CP-400	4	T400-CP-400	Pratt & Whitney	2J-T400-4 (Parts)	8/72 X

1683		T	400	CP-400	2-Jan	T400-CP-400, T400-WV-402	Pratt & Whitney	2J-T400-6-2 (Turboshaft, Maint. Man.)	12/77Y
1684	X	J	57	P-13	4	XJ57-P-13, YJ57- P-13, J57-F-13, J57-P-13, J57-P- 25, J57-P-53	Pratt & Whitney	2J-J57-34	8/57 X
1685	Y	J	57	P-3	3	YJ57-P-3	Pratt & Whitney	2J-J57-3	5/52 X
1686		J	75			J-75	Pratt & Whitney	JP43250-S9 (Training)	4/59 X
1687		J	75		2	J-75	Pratt & Whitney	Maint. Man.	6/57 X
1688		R	985		1	R-985	Pratt & Whitney	02-10AB-1	3/43 X
1689		R	985		3	R-985 (Series)	Pratt & Whitney	02A-10A-500	9/48 X
1690		R	985		3	R-985 (Series)	Pratt & Whitney	02A-10A-5	6/54 X
1691		R	985		3	R-985 (Series)	Pratt & Whitney	02A-10A-5 (Rev.)	6/56 X
1692		R	985	39A	2	R-985-39A	Pratt & Whitney	55-2810-224-24	10/70X
1693		R	985	AN1	3	R-985-AN1	Pratt & Whitney	02A-10A-5	6/56 X
1694		R	985	AN1	3	R-985-AN1	Pratt & Whitney	02A-10AB-3	5/72 Y
1695		R	985	AN-1	3	R-985-AN1, R- 985-AN3, R-985- AN14B, R-985- AN39, R-985- AN39A	Pratt & Whitney	02A-10AB-3	6/62 X

1696		R	985	AN-1	4	R-985-AN-1, R-985-AN-2, R-985-AN-3, R-985-AN-4, R-985-AN-6, R-985-AN-6B, R-985-AN-8, R-985-AN-10, R-985-AN-12, R-985-AN-12B, R-985-AN-14B	Pratt & Whitney		4/47 X
1697		R	985	AN1	2	R-985-AN-1, R-985-AN-2, R-985-AN-3, R-985-AN-4, R-985-AN-6, R-985-AN-6B, R-985-AN-8, R-985-AN-10, R-985-AN-12, R-985-AN-14B	Pratt & Whitney	02-10AB-2 (Svc.)	1945 .
1698		R	985	AN-1	2	R-985-AN-1, R-985-AN-3, R-985-AN-14B, R-985-AN-39, R-985-AN-39A	Pratt & Whitney	02A-10AB-2	12/65 X
1699		R	985	AN-1	2	R-985-AN-1, R-985-AN-3, R-985-AN-14B, R-985-AN-39, R-985-AN-39A	Pratt & Whitney	02A-10AB-2	12/65X

1700		R	985	AN-1	3	R-985-AN-1, R-985-AN-3, R-985-AN-14B, R-985-AN-39, R-985-AN-39A	Pratt & Whitney	02A-10AB-3	10/65X
1701		R	985	AN-1	2	R-985-AN-1, R-985-3, R-985-39, R-985-39A	Pratt & Whitney	2R-R985-2	2/61 X
1702		R	985	AN-1	3	R-985-AN-1, R-985-AN-3, R-985-AN-6	Pratt & Whitney	02A-10AB-3 (Rev.)	5/51 X
1703		R	985	AN-1	2	R-985-AN-1, R-985-AN-3, R-985-AN-6, R-985-AN-12	Pratt & Whitney	02A-10AB-2 (Rev.)	7/54 X
1704		R	985	AN-1	3	R-985-AN-1, R-985-AN-3, R-985-AN-6, R-985-AN-12	Pratt & Whitney	02A-10AB-3 (Rev.)	12/51X
1705		R	985	AN-1	4	R-985-AN-1, R-985-AN-3, R-985-AN-6, R-985-AN-12	Pratt & Whitney	02A-10AB-4A (Rev.)	3/52 X
1706		R	985	AN-1	4	R-985AN-1, R-985-AN-3, R-985-AN-6, R-985-AN-12, R-985-AN-14B	Pratt & Whitney	02A-10AB-4A (Rev.)	1/57 X
1707		R	985	AN-1	3	R-985-AN-1, R-985-AN-3, R-985-AN-6, R-985-AN-12, R-985-AN-14B	Pratt & Whitney	02A-10AB-3 (Rev.)	12/54X

1708		R	985	AN-1	4	R-985-AN-1, R-985-AN-3, R-985-AN-6, R-985-AN-12, R-985-AN-14B	Pratt & Whitney	EO-10A-10AA-4	10/53X
1709		R	985	AN-1	4	R-985AN-1, R-985AN-3, R-985AN-6, R-985AN-12, R-985AN-14B, R-985AN-39, R-985AN-39A	Pratt & Whitney	2R-R985-4 (Parts Cat.)	5/62 C
1710		R	985	AN-1	4	R-985AN-1, R-985AN-3, R-985AN-6, R-985AN-12, R-985AN-14B, R-985AN-39, R-985AN-39A	Pratt & Whitney	02A-10AB-4A (Rev.)	3/61 X
1711		R	985	AN-1	4	R-985AN-1, R-985AN-3, R-985AN-6, R-985AN-12, R-985AN-14B, R-985AN-39, R-985AN-39A	Pratt & Whitney	02A-10AB-4A (Rev.)	3/61 X
1712		R	985	AN-1	2	R-985AN-1, R-985AN-3, R-985AN-6, R-985AN-12, R-985AN-14B, R-985AN-39, R-985AN-39A	Pratt & Whitney	02A-10AB-2 (Rev.)	10/55X

1713		R	985	AN-1	2	R-985AN-1, R-985AN-3, R-985AN-6, R-985AN-12, R-985AN-14B, R-985AN-39, R-985AN-39A	Pratt & Whitney	02A-10AB-2 (Rev.)	10/55X
1714		R	985	AN-1	2	R-985-AN-1, R-985-AN-2, R-985-AN-3, R-985-AN-4, R-985-AN-6, R-985-AN-6B, R-985-AN-8, R-985-AN-10, R-985-AN-12	Pratt & Whitney	02-10AB-2	2/45 X
1715		R	985	AN-1	2	R-985-AN-1, R-985-AN-2, R-985-AN-3, R-985-AN-4, R-985-AN-6, R-985-AN-8, R-985-AN-12	Pratt & Whitney	02-10AB-2 (Rev.)	7/47 X
1716		R	985	AN1	4	R-985-AN1, R-985-AN3	Pratt & Whitney	02-10AB-4A	5/44 X
1717		R	985	AN-1	3	R-985-AN-1, R-985-AN-3, R-985-AN-14B, R-985-AN-39, R-985-AN-39A	Pratt & Whitney	02A-10AB-3	12/62C

1718		R	985	AN-1	4	R-985-AN-1, R-985-AN-3, R-985-AN-14B, R-985-AN-39, R-985-AN-39A	Pratt & Whitney	02A-10AB-4A	7/67 X
1719		R	985	AN-1	3	R-985-AN-1, R-985-AN-3, R-985-AN-6, R-985-AN-12, R-985-AN-14B, R-985-AN-39, R-985-AN-39A	Pratt & Whitney	02A-10AB-3 (Rev.)	3/61 X
1720		R	985	AN39	4-Jan	R-985AN39	Pratt & Whitney	55-2810-224-34P	9/70 X
1721		R	985	AN39	4-Jan	R-985-AN39, R-985-AN39A	Pratt & Whitney	55-2810-224-20P	9/70 X
1722		R	985	AN39	4	R-985-AN39, R-985-AN39A	Pratt & Whitney	55-2810-224-20P	9/70 X
1723		R	985	AN-5	4	R-985-AN-5	Pratt & Whitney	02A-10AC-4 (Rev.)	12/58X
1724		R	985	AN-5	4	R-985-AN-5	Pratt & Whitney	02A-10AC-4	9/56 X
1725		R	985	AN-5	4	R-985-AN-5	Pratt & Whitney	02A-10AC-4 (Rev.)	9/54 X
1726		R	985	AN-5	2	R-985-AN-5	Pratt & Whitney	02A-10AC-2	1/56 X
1727		R	985	AN-5	2	R-985-AN-5	Pratt & Whitney	02A-10AC-2	1/56 X
1728		R	985	AN-5	2	R-985-AN-5	Pratt & Whitney	02A-10AC-2 (Rev.)	7/55 X
1729		R	985	AN-5	3	R-985-AN-5	Pratt & Whitney	02A-10AC-3 (Rev.)	11/57X
1730		R	985	AN-5	3	R-985-AN-5	Pratt & Whitney	02A-10AC-3	5/54 X

1731		R	985	AN-5	3	R-985-AN-5	Pratt & Whitney	02A-10AC-3 (Rev.)	5/54 X
1732		R	985	AN-5	4	R-985-AN-5	Pratt & Whitney	02A-10AC-4	12/58X
1733		R	985	AN-5	4	R-985-AN-5, R-985-AN-7	Pratt & Whitney	02A-10AC-4 (Rev.)	10/53X
1734		R	985	AN-5	2	R-985-AN-5, R-985-AN-7	Pratt & Whitney	02A-10AC-2	5/48 X
1735		T	34	P-3	4	T34-P-3, T34-P-3A, T34-P-6, YT34-P-5	Pratt & Whitney	2J-T34-4 (Parts)	3/57 X
1736		T	34	P-3	2	T34-P3, T34-P-3A, T-34P-6, T34-P-7W, T34-P-7WA, YT34-P-5	Pratt & Whitney	2J-T34-2 (Svc. Instruction, Rev.)	8/58 X
1737		T	34	P-3	3	T34-P3, T34-P-3A, T34-P-6, T34-P-7W, YT34-P-5	Pratt & Whitney	2J-T34-3 (Overhaul Instruction, Rev.)	11/57X
1738		T	34	P-3	3	T34-P-3, T34-P-6, YT34-P-5	Pratt & Whitney	Overhaul Instructions	8/55 X
1739		T	34	P-7W	3	T34-P-7W, T34-P-7WA, T34-P-9W, YT34-P-5	Pratt & Whitney	2J-T34-3 (Overhaul Instruction, Rev.)	4/61 X
1740		T	34	P-7WA	3	T34-P-7WA	Pratt & Whitney	2J-T34-3 (Overhaul Instruction)	12/70X
1741		T	34	P-7WA	4	T34-P-7WA, T34-P-9W	Pratt & Whitney	2J-T34-4 (Parts)	10/70X
1742		R	1690	23	2	R-1690-23	Pratt & Whitney	02-10EB-2	2/41 X

1743		R	1830	94		R-1830-94 (Pratt & Whitney, Twin Wasp)	Pratt & Whitney, Twin Wasp	Part 97761 (Overhaul Man.)	9/1944
1744			240	BHP	1-Feb	240 BHP (Puma, Armstrong Siddeley)	Puma, Armstrong Siddeley	Instructions Man.	1917 .
1745		L	440	1	1	L-440-1, L-440-3 (Ranger)	Ranger	02-50AA-1 (Operation Instructions)	1943 .
1746		L	440	1	2	L-440-1,3,5 (Ranger)	Ranger	02-50AA-2 (Svc. Instruction)	1943 .
1747		L	440	1	4	L-440-1, L-440-3, L-440-5, L-440-7 (Ranger)	Ranger	02-50AA-4 (Parts Cat.)	1943 .
1748		L	440	1	4	L-440-1, L-440-3, L-440-5, L-440-7, V-770-11, V-770-15	Ranger	02-50-4	12/44 X
1749		L	440	1	3	L-440-1, L-440-3, L-440-5, L-440-7, L-440-9, L-440-11	Ranger	02-50AA-3	10/44 X
1750		L	440	1	3	L-440-1, L-440-3, L-440-5, L-440-7, L-440-9, L-440-11 (Ranger)	Ranger	02-50AA-3 (Overhaul Instructions)	1943 .
1751		SGV	770	C	3	SGV-770C, V-770-6, V-770-8 (Ranger)	Ranger	Overhaul Man.	

1752		SGV	770	C-1	1	SGV-770C-1 (Ranger)	Ranger	Instructions Man.	1942 .
1753		SGV	770	C-2	4	SGV-770C-2 (Ranger)	Ranger	I.P.B.	1943 .
1754		6	390	B	4	6-390-B, 6-390- C (Ranger)	Ranger	Non-Illustrated Parts Price List	
1755		6	390	B	4	6-390-B, 6-390- D, 6-410B-1, 6- 410B-2, 6-410B- 3 (Ranger)	Ranger	I.P.B.	1941 .
1756		6	390	B	2	6-390-B, 6-390- D, 6-410B-1, 6- 410B-2, 6-410B- 3 (Ranger)	Ranger	Svc., Maint., Operations	
1757		6	440	C	1	6-440C (Ranger)	Ranger	Operating Man.	1941 .
1758		6	440	C	3	6-440C (Ranger)	Ranger	Overhaul Man.	
1759		6	440	C-2	2	6-440C-2, 6- 440C-3, 6-440C- 4, 6-440C-5 (Ranger)	Ranger	Inspection, Instruction, Svc.	1941 .
1760		6	440	C-2	2	6-440C-2, 6- 440C-3, 6-440C- 4, 6-440C-5 (Ranger)	Ranger	Svc. Bulletins	

1761		6	440	C-2	4	6-440C-2, 6-440C-3, 6-440C-4, 6-440C-5 (Ranger)	Ranger	I.P.B.	1944 .
1762		L	440	1	2	L-440-1	Ranger	00-35E-26	8/44 X
1763		L	440	1	2	L-440-1, L-440-3, L-440-5	Ranger	02-50AA-2	10/43 X
1764		L	440	1	4	L-440-1, L-440-3, L-440-5, L-440-7	Ranger	02-50AA-4	2/43 X
1765					1	Renault (All 40 HP to 420 HP Eng.)	Renault	Inline & Radial Eng. Svc. Man.	
1766		RAF	1A		3	RAF-1A, RAF-1B (92-115 HP, 8 cyl., Includes Carburetor & Magneto TS1401)	Renault	Disassembly, Reassembly Overhaul	
1767		RAF	1A			RAF-1A (90 HP) (R.A.F. Eng.)	Renault	Description, Svc. (Technical Notes 8 Cyl., Series 1)	
1768		RAF	4A		2	RAF-4A, RAF-5A (160 HP, 12 Cyl.)	Renault	Svc., Maint, Repair	1917 .
1769		V	1650	1	3	V-1650-1 (Rolls Royce)	Rolls Royce	USA Air Depot (Progressive Overhaul Man.)	1943 .
1770		V	1650	1	3	V-1650-1 (Merlin 28, 29, 31, Rolls Royce)	Rolls Royce	02-55AA-3 (Overhaul Man.)	1942 .

1771		V	1650	3	1	V-1650-3 (Rolls Royce)	Rolls Royce	Description, Operations Instructions	
1772		V	1650	3	4	V-1650-3 (Merlin 68, 69, Rolls Royce)	Rolls Royce	02-55AC-4 (I.P.B.)	1943 .
1773		V	1650	3	2	V-1650-3, V-1650-7 (Rolls Royce)	Rolls Royce	Svc. Bulletins	
1774		V	1650	9	3	V-1650-9 (Rolls Royce)	Rolls Royce	02-55AD-3 (Overhaul Man.)	1945 .
1775					1	Eagle Series I to VIII, Falcon Series I to III (Rolls Royce)	Rolls Royce	Instructions	1917 .
1776					1	Griffon MK 88 Aero Eng. (Rolls Royce)	Rolls Royce	RAF A.P. 4045B (Volume I)	1949 .
1777					2	Merlin 22, 23, 24, 25 (Rolls Royce)	Rolls Royce	Publication #85 (Maint. Man., T.S.D.)	
1778					1	Merlin II Eng. (Rolls Royce)	Rolls Royce	Eng. Handbook	1942 .
1779					2	Merlin-Packard Aero Eng. (Rolls Royce)	Rolls Royce	RAF Air, Svc. Bulletins, Pub. 2308	1945 .
1780					1	Sprey Eng. Controls (Rolls Royce)	Rolls Royce	Operating, Trouble Shooting	
1781		V	1650	9	2	V-1650-9	Rolls Royce, Packard	02A-55AD-2 (Svc. Instructions, Rev.)	1/50 X
1782		V	1650	9	2	V-1650-9	Rolls Royce, Packard	02A-55AD-2 (Svc. Instructions, Rev.)	1/50 X

1783		V	1650	9	3	V-1650-9	Rolls Royce, Packard	2R-V1650-23 (Overhaul Instructions, Rev.)	1/53 C
1784		SH	10		2	SH-10 (60/70 HP), SH-11 (84/96 HP), SH- 12 (108/125 HP) (Siemens)	Siemens	Description, Svc. Installation)	
1785		T	62T	27	4	T62T-27	Solar	2G-T62T-34 (Gas Turbine, Rev.)	12/72X
1786		T	62T	29A	1, 2	T62T-29A	Solar	Solar Turbine (Installation, Operations, Maint., Overhaul)	2/66 X
1787		SS	50		1	SS-50, SS-50A (Super Scarab, Warner)	Super Scarab, Warner	Eng. Handbook	1945 .
1788		SR	3		1	SR-3 (Models L, O, SZEKELY)	Szekely	Instructions Man.	
1789		SR	3		4	SR-3 (Models L, O, SZEKELY)	Szekely	Non-Illustrated Parts	
1790		SR	3	35	1	SR-3-35, SR-3-0 (Szekely)	Szekely	Instructions Man.	
1791		O	405	9	2	O-405-9	Tiara, Continental	02-70CA-2	6/45 X
1792		O	405	9	2	O-405-9	Tiara, Continental	02-70CA-2	12/44X
1793		O	405	9	3	O-405-9	Tiara, Continental	02-70CA-3	3/45 X
1794		O	405	9	3	O-405-9	Tiara, Continental	02-70CA-3	3/45 X

1795		R	1830	33	3	R-1830-33, R-1830-41, R-1830-43, R-1830-45, R-1830-47, R-1830-49, R-1830-51, R-1830-53, R-1830-57, R-1830-61, R-1830-63, R-1830-65, R-1830-67, C-3, C-4 (Twin Wasp)	Twin Wasp	02-10CW-3, 02-10CW-43 (Overhaul)	
1796		R	1830		1	R-1830, C-1 (Twin Wasp, Pratt & Whitney)	Twin Wasp, Pratt & Whitney	Operator's Handbook	1939 .
1797		R	1830		1	R-1830, C-3 (Twin Wasp, Pratt & Whitney)	Twin Wasp, Pratt & Whitney	#48678 (Operator's Handbook, 4th Ed.)	7/42 .
1798		R	1830		1	R-1830, C-3 (Twin Wasp, Pratt & Whitney)	Twin Wasp, Pratt & Whitney	Model S1C3G (Operator's Handbook, 3rd Ed.)	11/41 .
1799		R	1830		1	R-1830, C-4 (Twin Wasp, Models S3C4-G, S4C4-8, Pratt & Whitney)	Twin Wasp, Pratt & Whitney	#51548 (Operator's Handbook, 3rd Ed.)	1942 .

1800		R	1830		1	R-1830, C7G (Twin Wasp, Pratt & Whitney)	Twin Wasp, Pratt & Whitney	#50661 (Operator's Handbook, 1st Ed.)	1942 .
1801		R	2000		1	R-2000 (Twin Wasp, D Series, Pratt & Whitney)	Twin Wasp, Pratt & Whitney	#76543 (Operations Handbook, 1st Ed.)	1943 .
1802					1	Liberty 12, (Vee Type)	Vee Type	General Construction	
1803		M	5		1	M-5 (Velie)	Velie	Installation, Svc.	1928 .
1804		SS	165		2	SS-165 (Warner)	Warner	Eng. Handbook	1940 .
1805		SS	165		4	SS-165 (Warner)	Warner	I.P.B.	1942 .
1806		SS	165		1	SS-165, SS-185 (Warner)	Warner	Eng. Handbook	1946 ,
1807					4	Scarab (Warner)	Warner	Non-Illustrated Parts List	1947 .
1808					1	Scarab, Scarab Jr. Super Scarab (Warner)	Warner	Eng. Handbook	1935 .
1809					4	Scarab, Scarab Jr. Super Scarab (Warner)	Warner	I.P.B., Price List	1938 .
1810					2	Warner	Warner	Svc. Letters	
1811		R	500		3	R-500	Warner, Scarab	00-35E-27	9/43 X
1812		R	500	1	3	R-500-1	Warner, Scarab	02-75-3 (Tool Cat.)	1/43 X
1813		R	500	1		R-500-1, R-500- 7	Warner, Scarab	02-76-2 (Tool Cat.)	9/42 x

1814		R	500	1	4	R-500-1, R-500-7	Warner, Scarab	02-75AA-4	10/43X
1815		R	500	1	3	R-500-1, R-500-7, R-500-3	Warner, Scarab	02-75-5	12/44X
1816		R	550	1	4	R-550-1	Warner, Scarab	02-75BA-4	4/45 X
1817		R	550	1	4	R-550-1	Warner, Scarab	02-75A-1	6/44 X
1818		R	550	1	2	R-550-1, R-550-3	Warner, Scarab	02-75BA-2	11/44X
1819		R	550	1	3	R-550-1, R-550-3	Warner, Scarab	02-75BA-3	5/44 X
1820		R	550	3	2	R-550-3	Warner, Scarab	02-75BA-8	12/45X
1821		R	550	3	4	R-550-3	Warner, Scarab	02-75BB-4	4/45 X
1822		J	30	P-20	2	J30-P-20, J30-WE-20	Westinghouse	02B-110AA-2	3/51 X
1823		J	30	P-20	3	J30-P-20, J30-WE-20	Westinghouse	02B-110AA-3 (Rev.)	7/50 X
1824		J	30	P-20	4	J30-P-20, J30-WE-20	Westinghouse	02B-110AA-4 (Rev.)	11/52Y
1825		J	34	WE-22	2	J34-WE-22, J34-WE-30, J34-WE-34	Westinghouse	02B-110BA-2	1/51 Y
1826		J	34	WE-22	4	J34-WE-22, J34-WE-30, J34-WE-34	Westinghouse	02BN-110BA-4 (Rev.)	2/57 Y
1827		J	34	WE-22	4	J34-WE-22, J34-WE-30, J34-WE-30A, J34-WE-34 (Westinghouse)	Westinghouse	02B-110BA-4 (I.P.B.)	1950 .

1828		J	34	WE-30		J34-WE-30	Westinghouse	Flight Training Man.	Y
1829		J	34	WE-34	2	J34-WE-34	Westinghouse	02B-110BA-2 (Rev.)	10/63 X
1830		J	34	WE-34	2	J34-WE-34	Westinghouse	02B-110BA-2	3/63 X
1831		J	34	WE-34	2	J34-WE-34	Westinghouse	02B-110BA-2 (Rev.)	6/60 Y
1832		J	34	WE-34	3	J34-WE-34	Westinghouse	02B-110BA-3 (Rev.)	3/63 x
1833		J	34	WE-34	3	J34-WE-34	Westinghouse	02B-110BA-3	2/60 X
1834		J	34	WE-34	3	J34-WE-34	Westinghouse		3/49 Y
1835		J	34	WE-34	4	J34-WE-34	Westinghouse	02B-110BA-4 (Rev.)	7/63 X
1836		J	34	WE-34	2	J34-WE-34, J34-WE-34A	Westinghouse	02B-110BA-2	3/72 X
1837		J	34	WE-34	3	J34-WE-34, J34-WE-34A	Westinghouse	02B-110BA-3	2/60 X
1838		J	34	WE-34	4	J34-WE-34, J34-WE-34A	Westinghouse	02B-110BA-4 (Rev.)	7/65 X
1839		J	34	WE-34	4	J34-WE-34, J34-WE-34A	Westinghouse	02B-110BA-4	5/72 X
1840		J	34	WE-34	3	J34-WE-34, J34-WE-34A (Westinghouse)	Westinghouse	02B-110BA-3 (Overhaul Instructions)	1975 .
1841		J	34	WE-34A		J34-WE-34A	Westinghouse	Svc. Records	1/76 Y
1842		J	34	WE-36		J34-WE-36	Westinghouse	Spec. (Rev.)	10/56 Y
1843		J	34	WE-36	2	J34-WE-36	Westinghouse	A-1850 WE	3/55 Y

1844		J	34	WE-36	2	J34-WE-36	Westinghouse	02B-110BC-2 (Rev.)	7/61 X
1845		J	34	WE-36	2	J34-WE-36	Westinghouse	02B-110BC-2	2/60 Y
1846		J	34	WE-36	4	J34-WE-36	Westinghouse	02B-110BC-4 (Rev.)	7/61 x
1847		J	34	WE-36	2	J34-WE-36	Westinghouse	Installation Man.	11/55 X
1848		J	34	WE-36	3	J34-WE-36, J34-WE-36A	Westinghouse	02B-110BC-3	9/69 X
1849		J	34	WE-36	3	J34-WE-36, J34-WE-36A	Westinghouse	02B-110BC-3 (Rev.)	12/74 X
1850		J	34	WE-36	3	J34-WE-36, J34-WE-36A	Westinghouse	02B-110BC-3 (Rev.)	3/72 X
1851		J	34	WE-36	4	J34-WE-36, J34-WE-36A	Westinghouse	02B-110BC-4 (Rev.)	5/72 X
1852		J	34	WE-42	4	J34-WE-42	Westinghouse	02B-110BB-4	9/52 X
1853		J	34	WE-46	2	J34-WE-46	Westinghouse	02B-110BD-502 (Rev.)	10/61 X
1854		J	34	WE-46	3	J34-WE-46	Westinghouse	02B-110BD-503	11/58 Y
1855		J	34	WE-46	3	J34-WE-46	Westinghouse	02B-110BD-503 (Rev.)	10/61 X
1856		J	34	WE-46	4	J34-WE-46	Westinghouse	02B-110BD-504	12/58 X
1857		J	34	WE-46	2	J34-WE-46	Westinghouse	Installation, Operating Man.	5/57 X
1858		J	34	WE-48	2	J34-WE-48	Westinghouse	02B-110BE-2	10/59 X
1859		J	34	WE-48	3	J34-WE-48	Westinghouse	02B-110BE-3	11/59 X
1860		J	34	WE-48	3	J34-WE-48	Westinghouse	02B-110BE-3 (Rev.)	7/61 X

1861		J	34	WE-48	4	J34-WE-48	Westinghouse	02B-110BE-4 (Rev.)	9/75 X
1862		J	34	WE-48	4	J34-WE-48 (Westinghouse)	Westinghouse	02B-110BE-4 (I.P.B.)	1965 .
1863		J	34	WE-7	2	J34-WE-7, J34-WE-9, J34-WE-22, J34-WE-24, J34-WE-26, J34-WE-30	Westinghouse	02B-110BA-2	10/48 X
1864		J	34	WE-7	3	J34-WE-7, J34-WE-9, J34-WE-22, J34-WE-24, J34-WE-26, J34-WE-30, J34-WE-30A, J34-WE-34	Westinghouse	02B-110BA-3	7/49 X
1865		J	34	WE-7	2	J34-WE-7, J34-WE-9, J34-WE-22, J34-WE-24, J34-WE-26, J34-WE-30, J34-WE-30A, J34-WE-34, J34-WE-40	Westinghouse	Operating Rec.	12/49 X
1866		J	34	WE-7	3	J34-WE-7, J34-WE-9, J34-WE-22, J34-WE-34	Westinghouse	Installation Man.	X
1867	X	J	30	WE	3	XJ30-WE, X19XB-28, X19XB-3, 8X19XB-4	Westinghouse	Installation	6/47 X
1868	X	J	32	WE-4		XJ32-WE-4(X9.5B)	Westinghouse	02B-110-502	5/48 X

1869		J	34	17		J34	Westinghouse	Misc.Bltns	10/64 X
1870		J	46	WE-8		J46-WE-8	Westinghouse	Spec.	6/54 X
1871		J	4A		2	J-4A, J-4B, J-5 (Whirlwind)	Whirlwind	Installation, Inspection, Maint.	1927 .
1872		J	4B		2	J-4B, J-5A, J-5C, J-5C-A, J-5B (Whirlwind)	Whirlwind	Installation, Inspection, Maint.	1927 .
1873		J	6E		4	J-6E (Series), 420, 365, 330, 320, 285, 250, 235 (Whirlwind)	Whirlwind	I.P.B.	1938 .
1874		J	5		4	J-5 (Whirlwind)	Whirlwind	I.P.B.	1933 .
1875		J	6			J-6 (Series), 420, 365, 330, 320, 285, 250, 235, 175 (Whirlwind)	Whirlwind	Eng. w/o Internal Valve (I.P.B.)	1936 .
1876		J	6		4	J-6 (Wright, Whirlwind)	Whirlwind	I.P.B.	1930 .
1877					2	Whirlwind Series	Whirlwind	Svc. Bulletins	1948 .
1878		J	5A		2	J-5A, J-5B (A- Series), J-5A (B- Series)	Whirlwind	Installation, Maint.	1928 .
1879		F	50	C9GA	1, 2	Cyclone 9, C9GA, C9GB	Wright	Installation, Operations, Maint.	1940 .
1880		F	50	9	1, 2	Cyclone 9, C9GA, C9GB, C9GC	Wright	Operations, Svc. (1st Ed.)	1944 .

1881		F	50	9	3	Cyclone 9, F-50, F-60, F-60GA, F-60GB	Wright	Overhaul	1942 .
1882		F	50	9GC	2	Cyclone 9GC	Wright	#854795 (Inspection, Svc.)	1944 .
1883		F	50	9GC	2	Cyclone 9GC	Wright	#111722-N3 (Svc.)	1944 .
1884		F	50	9GC	3	Cyclone 9GC	Wright	#114323-N3 (Overhaul)	1943 .
1885		F	50	9GCA	1, 2	Cyclone 9GCA, C9GB, C9GC	Wright	#853749 (Operation, Svc.)	1943 .
1886		F	50	C9GC	4	Cyclone C9GC	Wright	#852515 (Tool Cat.)	1941 .
1887		F	50	C9GC	4	Cyclone C9GC	Wright	Parts	1953 .
1888		F	50		1	F, F-50, F-50G, F-50G-100, J-6 (Cylcone Eng., E Series)	Wright	#851445 (Whirlwind Tools Cat.)	1940 .
1889		F	50		4	F-50 (Cyclone)	Wright	I.P.B	1937 .
1890	Y	J	65	W-1	4	YJ65-W-1, YJ65-W-1A (Wright)	Wright	2J-J65-14 (I.P.B.)	1957 .
1891	Y	J	65	W-1	3	YJ65-W-1, YJ65-W-1A, YJ65-W-1B (Wright)	Wright	2J-J65-13 (Overhaul Instruction Handbook)	1957 .
1892		J	65		3	J65 (Series)	Wright	2J-J65-5	11/54 X
1893		J	65		3	J65 (Series)	Wright	2J-J65-5 (Rev.)	10/59 X
1894		J	65	3	2	J65-3, J65-5, J65-7	Wright	2J-J65-2N	2/63 X
1895		J	65	W-16A	2	J65-W-16A	Wright	02B-35AAC-2	5/64 X
1896		J	65	W-16A	3	J65-W-16A	Wright	02B-35AAC-3	6/64 X
1897		J	65	W-16A	3	J65-W-16A	Wright	02B-35AAC-3	3/63 X
1898		J	65	W-16A	4	J65-W-16A	Wright	02B-35AAC-4	3/66 X

1899		J	65	W-1GA	3	J65-W-16A, J65-W-20, 420	Wright	02B-35AAC-3 (Rev.)	9/75 Z
1900		J	65	W-18	2	J65-W-18	Wright	02B-35AAD-502	7/61 X
1901		J	65	W-18	3	J65-W-18	Wright	02B-35AAD-503	10/63 X
1902		J	65	W-18	4	J65-W-18	Wright	02B-35AAD-504	10/64 X
1903		J	65	W-3	2	J65-W-3, J65-B-3, J65-W-5, J65-W-7, J65-BW-5, J65-B-7 (Wright)	Wright	2J-J65-2 (Svc. Instructions)	1956 .
1904		J	65	W-3	2	J65-W-3, J65-W-3A, J65-W-5, J65-W-5B, J65-W-7, J65-W-7C, J65-B-3, J65-B-3A, J65-B-7, J65-B-7C, J65-BW-5, J65-BW-5B (Wright)	Wright	2J-J65-6 (Field Maint., Replacement Components)	1960 .
1905		J	65	W-3	4	J65-W-3, J65-W-3A, J65-W-5, J65-W-5B, J65-W-7, J65-W-7C, J65-W-7D, J65-B-3, J65-B-3A, J65-B-7, J65-B-7C, J76-BW-5, J76-BW-5B (Wright)	Wright	2J-J65-4 (I.P.B.)	1967 .
1906		J	65	W-3	4	J65-W-3, J65-B-3, J65-W-5	Wright	2J-J65-4 (Rev.)	2/55 X

1907		J	65	W-3	3	J65-W-3, J65-B-3, J65-W-5, J65-BW-5	Wright	2J-J65-3 (Rev.)	8/54 X
1908		J	65	W-3	2	J65-W-3, J65-B-3, J65-W-5, J65-BW-5, J65-W-7, J65-B-7	Wright	2J-J65-2 (Rev.)	8/57 X
1909		J	65	W-3	4	J65-W-3, J65-W-3A, J65-B-3, J65-B-3A, J65-W-5, J65-W-5B, J65-BW-5, J65-BW-5B, J65-W-7, J65-W-7C	Wright	2J-J65-4 (Rev.)	5/64 X
1910		J	65	W-3	2	J65-W-3, J65-W-3A, J65-B-3, J65-B-3A, J65-W-5, J65-W-5B, J65-BW-5, J65-BW-5B, J65-W-7, J65-W-7C, J65-B-7	Wright	2J-J65-2 (Rev.)	5/61 X
1911		J	65	W-3	2	J65-W-3, J65-W-3A, J65-B-3, J65-B-3A, J65-W-5, J65-W-5B, J65-BW-5, J65-BW-5B, J65-W-7, J65-W-7C, J65-B-7	Wright	2J-J65-6 (Rev.)	10/59 X

1912		J	65	W-3	3	J65-W-3, J65-W-3A, J65-B-3, J65-B-3A, J65-W-5, J65-W-5B, J65-BW-5, J65-BW-5B, J65-W-7, J65-W-7C, J65-B-7	Wright	2J-J65-3 (Rev.)	5/61 X
1913		J	65	W-3	3	J65-W-3, J65-W-3A, J65-B-3, J65-B-3A, J65-W-5, J65-W-5B, J65-BW-5, J65-BW-5B, J65-W-7, J65-W-7C, J65-B-7	Wright	2J-J65-3 (Rev.)	4/61 X
1914		J	65	W-4	2	J65-W-4, J65-W-4B, J65-W-16, J65-W-16A	Wright	02B-35AAC-2 (Rev.)	8/56 X
1915		J	65	W-4	4	J65-W-4, J65-W-4B, J65-W-16, J65-W-16A	Wright	02B-35AAC-4	7/56 X
1916		J	65	W-4B	2	J65-W-4B, J65-W-16A	Wright	02B-35AAC-2	10/60 X
1917		J	65	W-4B	3	J65-W-4B, J65-W-16A	Wright	02B-35AAC-3	3/62 X
1918	G	R	1820	G-200	4	GR-1820-G-200 (Wright)	Wright	I.P.B.	1940 .
1919		R	760E		2-Jan	R-760E, R-975E (Wright)	Wright	#111429N11 (Installation, Operations Man.)	1942 .
1920		R	89		4	R-89, R-89A, R-89B, R-93, R-95W (Wright)	Wright	2R-R3350-54 (I.P.B.)	1974 .

1921		R	760	1	4	R-760-1 (Wright)	Wright	02-35DA-4 (Non- Illustrated Preliminary Parts Cat.)	1943 .
1922		R	760	8	4	R-760-8, R975- 28 (Wright)	Wright	#852694 (Parts List Cat.)	1942 .
1923		R	975		3	R-975 (Wright)	Wright	8E2-2-1-15 (Book 42, Overhaul Changes to Ignition)	1956 .
1924		R	975	46	2	R-975-46 (Wright)	Wright	2R-R975-2 (Svc. Instructions)	1954 .
1925		R	975	46	3	R-975-46 (Wright)	Wright	2R-R975-3 (Overhaul Instructions)	1960 .
1926		R	975	46	4	R-975-46 (Wright)	Wright	2R-R075-4 (I.P.B.)	1959 .
1927		R	975	7	1	R-975-7, R-975- 11 (Wright)	Wright	02-35A-1 (Operations Instructions)	1943 .
1928		R	975	7	3	R-975-7, R-975- 11 (Wright)	Wright	02-35A-3 (Overhaul Man.)	1944 .
1929		R	975	7	4	R-975-7, R-975- 11 (Wright)	Wright	02-35A-4 (I.P.B.)	1943 .
1930		R	975	7	2	R-975-7, R-975- 11, R-975-28 (Wright)	Wright	02-35A-2 (Svc. Instructions)	1943 .
1931		R	1300		3	R-1300 (Series, Wright)	Wright	2R-R1300-5 (Overhaul Changes)	1960 .
1932		R	1820		2	R-1820, R-2600 (Wright)	Wright	02-35-2 (Tools Cat.)	1943 .
1933		R	1820	103	2	R-1820-103 (Wright)	Wright	2R-R1820-32 (Svc. Instructions)	1960 .

1934		R	1820	103	3	R-1820-103 (Wright)	Wright	2R-R1820-33 (Overhaul Instructions)	1960 .
1935		R	1820	103	4	R-1820-103 (Wright)	Wright	2R-R1820-34 (I.P.B.)	1959 .
1936		R	1820	40	3	R-1820-40, R- 1820-40B, R- 1820-54, R- 1820-60, R- 1820-65, R- 1820-71, R- 1820-73, R- 1820-87, R- 1820-97 (Wright)	Wright	2R-R1820-3 (Overhaul Instructions)	1958 .
1937		R	1820	40	4	R-1820-40, R- 1820-40B, R- 1820-54, R- 1820-60, R- 1820-65, R- 1820-71, R- 1820-73, R- 1820-87, R- 1820-95, R- 1820-97 (Wright)	Wright	02-35GC-4 (I.P.B.)	1946 .

1938		R	1820	40	2	R-1820-40, R-1820-40B, R-1820-54, R-1820-60, R-1820-65, R-1820-71, R-1820-73, R-1820-87, R-1820-97 (Wright)	Wright	02-35GC-2 (Svc. Instructions)	1944 .
1939		R	1820	40	3	R-1820-40, R-1820-40B, R-1820-54, R-1820-60, R-1820-65, R-1820-71, R-1820-73, R-1820-87, R-1820-97 (Wright)	Wright	2R-R1820-3 (Overhaul Instructions)	1958 .
1940		R	1820	52	4	R-1820-52 (Wright)	Wright	02-35GA-4B (I.P.B.)	1942 .
1941		R	1820	56	3	R-1820-56, R-1820-W, R-1820-WA, R-1820-62, R-1820-62A, R-1820-66, R-1820-72W, R-1820-74, R-1820-76 (Wright)	Wright	02A-35GD-3 (Overhaul Instructions)	1951 .

1942		R	1820	57	3	R-1820-57, R-1820-79, R-1820-81, R-1820-83, R-1820-85 (Wright)	Wright	02-35GB-3 (Overhaul Instructions)	1944 .
1943		R	1820	57	2	R-1820-57, R-1820-79, R-1820-81, R-1820-83, R-1820-85, R-1820-89, G105-A (Wright)	Wright	02-35GB-2 (Svc. Instructions)	
1944		R	1820	65	3	R-1820-65, R-1820-71, R-1820-73, R-1820-87 (Wright)	Wright	02-35GC-3 (Overhaul Instructions)	1942 .
1945		R	1820	74 W	4	R-1820-74W, R-1820-76 (Wright)	Wright	02-35GC-4 (I.P.B.)	1946 .
1946		R	1820	76	3	R-1820-76, R-1820-76A, R-1820-76B, R-1820-86, R-1820-101 (Wright)	Wright	2R-R1820-23 (Overhaul Instructions)	1960 .
1947		R	1820	76A	2	R-1820-76A, R-1820-76B, R-1820-86, R-1820-101 (Wright)	Wright	2R-R1820-22 (Svc. Instructions)	1959 .
1948		R	1820	76B	2	R-1820-76B (Wright)	Wright	2R-R1820-30 (Eng. Performance)	1953 .

1949		R	1820	76B	3	R-1820-76B, R-1820-103A (Wright)	Wright	2R-R1820-33 (Overhaul Instructions)	1962 .
1950		R	1820	82	4	R-1820-82, R-1820-82 (Wright)	Wright	2R-R1820-54 (I.P.B.)	1955 .
1951		R	1820	82	3	R-1820-82, R-1820-82A, R-1820-82WA, R-1820-88 (Wright)	Wright	02A-35GN-503 (Overhaul Instructions)	1960 .
1952		R	1820	82A	3	R-1820-82A, R-1820-82B, R-1820-82D, R-1820-82C, R-1820-8290 (Wright)	Wright	02A-35GN-503 (Overhaul Instructions)	1971 .
1953		R	1820	84	2	R-1820-84 (Wright)	Wright	2R-R1820-42 (Svc. Instructions)	1955 .
1954		R	1820	84	4	R-1820-84 (Wright)	Wright	2R-R1820-44-20P (Repair Parts, Tools)	1958 .
1955		R	1820	F	3	R-1820-F, GR-1820-F (Wright)	Wright	Overhaul (Direct & Geared Drive)	1934 .
1956		R	1820	G		R-1820-G, GR-1820-G, GR-1820-G100 (Wright)	Wright	Installation, Inspection, Maint.	1940 .
1957		R	2600			R-2600 (Series, Wright)	Wright	03-75-1 (Instructions, Parts, Radio Shielded Ignition Manifold Assy.)	1942 .

1958		R	2600	19	4	R-2600-19, R-2600-23 (Wright)	Wright	02-35HA-4A (Parts Cat.)	
1959		R	2600	20	4	R-2600-20 (Wright)	Wright	Aviation Supply Office Version (I.P.B.)	1948 .
1960		R	2600	20	2	R-2600-20, R-2600-22 (Wright)	Wright	02-35HC-2 (Svc. Instructions)	1944 .
1961		R	2600	20	3	R-2600-20, R-2600-22 (Wright)	Wright	02-35HC-3 (Overhaul Instructions)	1944 .
1962		R	2600	20	4	R-2600-20, R-2600-22 (Wright)	Wright	02-35HC-4 (I.P.B.)	1944 .
1963		R	2600	3	1	R-2600-3, R-2600-11, R-2600-19, R-2600-23, R-2600-25 (Wright)	Wright	02-35HA-1 (Operations Instructions)	1942 .
1964		R	2600	3	3	R-2600-3, R-2600-3AA, R-2600-19, R-2600-23, R-2600-25 (Wright)	Wright	02-35HA-3 (Overhaul Instructions)	1942 .
1965		R	2600	7	2	R-2600-7, R-2600-8, R-2600-9, R-2600-13 (Wright)	Wright	02-35HB-2 (Svc. Instructions)	1942 .
1966		R	2600	7	4	R-2600-7, R-2600-9 (Wright)	Wright	02-35HB-4 (I.P.B.)	1943 .

1967		R	2600	8	3	R-2600-8, R-2600-12, R-2600-13, R-2600-29, R-2600-31 (Wright)	Wright	02A-35HB-3 (Overhaul Instructions)	1951 .
1968		R	2600	8	2	R-2600-8, R-2600-9, R-2600-13 (Wright)	Wright	02-35HB-1 (Operation Instructions)	1942 .
1969		R	2600	8	4	R-2600-8, R-2600-8A, R-2600-12, R-2600-13, R-2600-20, R-2600-22, R-2600-29, R-2600-31 (Wright)	Wright	2R-R2600-4 (Parts Cat.)	1951 .
1970		R	2600	8	3	R-2600-8, R-2600-8A, R-2600-12, R-2600-13, R-2600-29, R-2600-31, R-2600-35 (Wright)	Wright	2R-R2600-3 (Overhaul Instructions)	1955 .
1971		R	2600		5	R-2600 (Series, Wright)	Wright	2R-R2600-5	17/15/1952, Rev. 2/15/1957
1972		R	3350	10	4	R-3350-10, R-3350-14 (Wright)	Wright	02-35JD-4 (I.P.B.)	1944 .

1973		R	3350	13	4	R-3350-13	Wright	02-35JA-4	8/42 X
1974		R	3350	13	2	R-3350-13, R-3350-18, R-3350-19, R-3350-21, R-3350-23, R-3350-35, R-3350-41 (Wright)	Wright	02-35JA-2 (Svc. Instructions)	1944 .
1975		R	3350	13	3	R-3350-13, R-3350-18, R-3350-21, R-3350-23, R-3350-33, R-3350-35 (Wright)	Wright	02-35JA-3 (Overhaul Instructions)	1943 .
1976		R	3350	19	4	R-3350-19, R-3350-41, R-3350-57, R-3350-57DW, R-3350-59 (Wright)	Wright	#855870 (I.P.B.)	1945 .
1977		R	3350	26	3	R-3350-26, R-3350-WA, R-3350-WB, R-3350-WC, R-3350-WD (Wright)	Wright	02A-35JF-503 (Overhaul Instruction)	1973 .
1978		R	3350	30W	3	R-3350-30W (Wright)	Wright	02A-35JJ-3 (Overhaul Instructions)	1951 .

1979		R	3350	30W	2	R-3350-30W, R-3350-WA, R-3350-WB, R-3350-89A (Wright)	Wright	2R-R3350-12 (Svc. Instructions)	1957 .
1980		R	3350	30W	4	R-3350-30W, R-3350-WA, R-3350-WB, R-3350-89A (Wright)	Wright	2R-R-3350-14 (I.P.B.)	1958 .
1981		R	3350	32W	2	R-3350-32W (Wright)	Wright		
1982		R	3350	34	4	R-3350-34 (Wright)	Wright	2R-R3350-54 (I.P.B.)	1955 .
1983		R	3350	57M	3	R-3350-57M, R-3350-57AM, R-3350-83 (Wright)	Wright	2R-R3350-3 (Overhaul Instructions)	1955 .
1984		R	3350	57M	4	R-3350-57M, R-3350-57AM, R-3350-83 (Wright)	Wright	2R-R3350-4 (I.P.B.)	1952 .
1985		R	3350	8	4	R-3350-8 (Wright)	Wright	02-35JB-4 (Non-Illustrated Parts)	1945 .
1986		R	3350	8	2	R-3350-8, R-3350-14, R-3350-24 (Wright)	Wright	02-35JB-2 (Svc. Instructions)	1945 .
1987		R	3350	8	4	R-3350-8, R-3350-24W, R-3350-26W (Wright)	Wright		5/46 X

1988		R	3350	89	1	R-3350-89, R-3350-89A (Wright)	Wright	2R-R3350-11 (Mobile Operations Test)	1956 .
1989		R	3350	89A	4	R-3350-89A (Wright)	Wright	2R-3350-14 (I.P.B.)	1962 .
1990		R	3350	89A	3	R-3350-89A, R-3350-89B, R-3350-93, R-3350-95W (Wright)	Wright	2R-R3350-53 (Overhaul Instructions)	1974 .
1991		R	3350	91A	3	R-3350-91A, R-3350-93 (Wright)	Wright	2R-R3350-2 (Overhaul Instructions)	1967 .
1992		R	3350	93	4	R-3350-93 (Wright)	Wright	2R-R3350-54 (I.P.B.)	1962 .
1993		R	3350	93	1	R-3350-93 (Wright)	Wright	2R-R3350-51 (Mobile Operations Test)	1963 .
1994					1, 2	Cyclone 14A	Wright	Installation, Operations, Maint.	1940 .
1995					2	Cyclone 14BA	Wright	#113110-N3 (Svc. Man.)	1944 .
1996					3	Cyclone 14BA	Wright	#118596-N1 (Overhaul Man.)	
1997					2	Cyclone 14BB	Wright	#120512-N2 (Svc. Man.)	1944 .
1998					3	Cyclone 18BA	Wright	#114685-N1 (Overhaul Man.)	1943 .
1999					2	Cyclone 18BD	Wright	#857015 (Svc. Man.)	1946 .
2000					3	Cyclone 18BD	Wright	#857113 (Overhaul Man.)	1947 .
2001					2	Cyclone 14 (Series)	Wright	Svc. Bulletins	

2002					3	Cyclone 14 (Series A)	Wright	#112424-N2 (Overhaul)	1943 .
2003					2	Cyclone 18 (Series)	Wright	Svc. Bulletins	
2004					1	Turbo- Compound Eng. (Wright)	Wright	Basic Theory of Operation	1957 .
2005						Turbo- Compound Eng. (Wright)	Wright	Facts about Eng.	1953 .
2006						Wright	Wright	Eng. Testing	1941 .
2007					2	Wright Aircraft Eng.	Wright	Lubrication & Fuel Requirements	1930 .
2008					2	Wright Cyclone Eng. (Series 9)	Wright	Svc. Bulletins	
2009						Wright Eng.	Wright	Specs.	1936-46
2010						Wright Eng.	Wright	02-35-1 (Table of Limits)	1942 .
2011					4	Wright Eng. (Class 02-D, 02- 35-4)	Wright	Interchangable Parts List	1943 .
2012					3	Reciprocating Eng. (Wright)	Wright	8E2-1-45 (Overhaul Changes to Ignition Equipment, Book 42)	1959 .
2013					2	Wright (All Series)	Wright	Svc. Bulletins 399 to 595	4/41 TO 5/43
2014		R	3350		5	R-3350	Wright	2R-R3350-5 (Applicable Overhaul Changes)	6/1955
2015		R	3350		3	R-3350 (Series)	Wright	2R-R3350-5 (Overhaul Rev.)	3/67 X

2016		R	3350		3	R-3350 (Series)	Wright	2R-R3350-5 (Overhaul Rev.)	3/66 X
2017		R	3350		3	R-3350 (Series)	Wright	2R-R3350-5 (Overhaul Rev.)	8/62 X
2018		R	3350		3	R-3350 (Series)	Wright	2R-R3350-5 (Overhaul Rev.)	11/61X
2019		R	3350		3	R-3350 (Series)	Wright	2R-R3350-5 (Overhaul Rev.)	3/67 X
2020		R	3350		3	R-3350 (Series)	Wright	2R-R3350-5 (Overhaul Rev.)	1/60 X
2021		R	3350		3	R-3350 (Series, Wright)	Wright	2R-R3350-5 (Overhaul Changes)	1966 .
2022		R	3350	13	4	R-3350-13, R-3350-21, R-3350-23, R-3350-34DW, R-3350-23A, R-3350-35, R-3350-37	Wright	02-35JA-4	6/45 X
2023		R	3350	19	4	R-3350-19, R-3350-41, R-3350-57, R-3350-57A, R-3350-57DW, R-3350-57ADW, R-3350-59, R-3350-59A	Wright	02-35JA-4D	3/47 X
2024		R	3350	19	4	R-3350-19, R-3350-41, R-3350-57, R-3350-57DW, R-3350-59	Wright	02-35JA-4D	2/45 X
2025		R	3350	21	4	R-3350-21	Wright	02-35JA-4A	8/42 X

2026		R	3350	23	4	R-3350-23	Wright	02-35JA-4B	8/42 X
2027		R	3350	26W	3	R-3350-26W, R-3350-26WA	Wright	02A-35JG-3 (Overhaul Instructions)	11/1952
2028		R	3350	26W	2	R-3350-26W, R-3350-26WA	Wright	02A-35IG-2 (Overhaul Instructions)	10/52X
2029		R	3350	26W	4	R-3350-26W, R-3350-26WA	Wright	2R-R3350-74 (Parts Cat.)	7/54 X
2030		R	3350	26WA	3	R-3350-26WA, R-3350-WB, R-3350-WC, R-3350-WD	Wright	02A-35JP-503 (Rev.)	5/66 X
2031		R	3350	26WB	4	R-3350-26WB	Wright	02A-35JP-504	12/57X
2032		R	3350	30W	3	R-3350-30W, R-3350-30WA, R-3350-30WB, R-3350-32W, R-3350-34, R-3350-36W, R-3350-89A, R-3350-91	Wright	2R-R3350-83 (Rev.)	3/61 X
2033		R	3350	30W	3	R-3350-30W, R-3350-30WA, R-3350-30WB, R-3350-36W, R-3350-89A	Wright	2R-R3350-13 (Rev.)	8/59 X
2034		R	3350	30W	2	R-3350-30W, R-3350-30WA, R-3350-30WB, R-3350-36WB, R-3350-85, R-3350-89, R-3350-89A	Wright	2R-R3350-12 (Rev.)	6/61 X

2035		R	3350	30W	4	R-3350-30W, R-3350-30WA, R-3350-30WB, R-3350-89A	Wright	2R-R3550-14	3/57 X
2036		R	3350	30W	4	R-3350-30W, R-3350-30WA, R-3350-85	Wright	2R-R3350-14	4/54 X
2037		R	3350	30WB	4	R-3350-30WB, R-3350-34, R-3350-57M, R-3350-57AM, R-3350-83, R-3350-85, R-3350-89A, R-3350-91	Wright	00-25-113-R-3350 (Parts List)	5/57 X
2038		R	3350	32W	3	R-3350-32W, R-3350-32A, R-3350-34, R-3350-36W, R-3350-36WA, R-3350-42	Wright	02A-35JR-3 (Rev.)	5/72 X
2039		R	3350	32W	4	R-3350-32W, R-3350-32WA, R-3350-34, R-3350-36, R-3350-36W, R-3350-36WA, R-3350-42	Wright	02A-35JR-4	9/72 X
2040		R	3350	32W	2	R-3350-32W, R-3350-32WA, R-3350-34, R-3350-36W, R-3350-36WA, R-3350-42	Wright	02A-35JR-2	5/70 X

2041		R	3350	32W	3	R-3350-32W, R-3350-32WA, R-3350-34, R-3350-36W, R-3350-36WA, R-3350-42	Wright	02A-35JL-501 (Rev.)	5/70 X
2042		R	3350	32W	3	R-3350-32W, R-3350-32WA, R-3350-34, R-3350-36W, R-3350-36WA, R-3350-42	Wright	02A-35JR-3 (Rev.)	12/70X
2043		R	3350	32W	2	R-3350-32W, R-3350-32WA, R-3350-34, R-3350-36W, R-3350-36WA, R-3350-42	Wright	02A-35JR-2	5/70 X
2044		R	3350	32W	3	R-3350-32W, R-3350-32WA, R-3350-34, R-3350-36W, R-3350-36WA, R-3350-42	Wright	02A-35JR-3	8/63 X
2045		R	3350	32WA	2	R-3350-32WA, R-3350-36WA, R-3350-42	Wright	02A-35JR-6-3	8/73 X
2046		R	3350	34	2	R-3350-34, R-3350-42	Wright	02A-35JL-2 (Rev.)	7/62 X
2047		R	3350	34	2	R-3350-34, R-3350-42	Wright	02A-35JL-2 (Rev.)	2/62 X
2048		R	3350	34	2	R-3350-34, R-3350-42	Wright	02A-35JL-2 (Rev.)	5/61 X

2049		R	3350	34	2	R-3350-34, R-3350-42	Wright	02A-35JL-2	12/58X
2050		R	3350	34	2	R-3350-34, R-3350-91	Wright	2R-R3350-52 (Rev.)	1/58 X
2051		R	3350	34	2	R-3350-34, R-3350-91	Wright	2R-R3350-52 (Rev.)	11/60X
2052		R	3350	34	3	R-3350-34, R-3350-91	Wright	2R-R3350-53 (Rev.)	12/60X
2053		R	3350	34	4	R-3350-34, R-3350-91	Wright	2R-R3350-54	1/58 X
2054		R	3350	34	4	R-3350-34, R-3350-91	Wright	2R-R3350-54 (Rev.)	7/60 X
2055		R	3350	44	4	R-3350-44 (861C8CA2)	Wright	02A-35JK-4, 2R-3350-44 (Parts Cat.)	3/51 X
2056		R	3350	53	2	R-3350-53	Wright	2R-R3350-53	1/58 X
2057		R	3350	75	4	R-3350-75 (749C18BD1)	Wright	2R-R3350-34 (Parts Cat.)	8/50 X
2058		R	3350	8	2	R-3350-8, R-3350-14, R-3350-17, R-3350-31, R-3350-43	Wright	02-35JB-2	11/43X
2059		R	3350	8	3	R-3350-8, R-3350-14, R-3350-24	Wright	02-35JB-3	1/46 X
2060		R	3350	8	2	R-3350-8, R-3350-24W	Wright	02A-35JB-2	8/48 X
2061		R	3350	8	3	R-3350-8, R-3350-24W	Wright	02A-35JB-3	3/52 X
2062		R	3350	8	4	R-3350-8, R-3350-8A, R-3350-24W, R-3350-24WA	Wright	02A-35JB-4	5/51 X

2063		R	3350	8	4	R-3350-8, R-3350-8A, R-3350-24W, R-3350-24WA	Wright	O2A-35JB-4	5/51 x
2064		R	3350	85	11	R-3350-85, R-3350-89, R-3350-89A	Wright	2R-R3350-11 (Test Instructions)	11/56X
2065		R	3350	89A	4	R3350-89A	Wright	2R-R3350-14 (Parts)	5/61 X
2066		R	3350	89A	3	R-3350-89A, R-3350-89B, R-3350-93	Wright	2R-R3350-53	7/73 X
2067		R	3350	89A	4	R-3350-89A, R-3350-89B, R-3350-93	Wright	2R-R3350-54 (Parts)	10/71X
2068		R	3350	89A	4	R-3350-89A, R-3350-89B, R-3350-93, R-3350-95W	Wright	2R-R3350-54 (Parts)	7/74 X
2069		R	3350	-89	14	R3350-89B	Wright	2R-R3350-14 (I.P.B.)	3/1966
2070		R	3350	91A	4	R-3350-91A, R-3350-93	Wright	2R-R3350-54 (Parts)	7/61 X
2071		R	1750		2	Cyclone R-1750-A, R-1750-B, R-1750-C, R-1750-CE, R-1750-D, R-1750-E, R-1820-E	Wright	Installation, Inspection, Maint.	1930 .
2072		R	1820		3	R-1820 (Series)	Wright	2R-R1820-5 (Rev.)	1/63 X
2073		R	1820		3	R-1820 (Series)	Wright	2R-R1820-5	9/52 X

2074		R	1820		3	R-1820 (Series)	Wright	2R-R1820-5 (Overhaul Changes)	1963 .
2075		R	1820	103		R-1820, R-1820-103	Wright	Inspection Updates	3/63 C
2076		R	1820	103	2	R-1820-103	Wright	2R-R1820-32 (Rev.)	4/60 X
2077		R	1820	103	2	R-1820-103	Wright	2R-R1820-32	3/55 X
2078		R	1820	103	3	R-1820-103	Wright	2R-R1820-33 (Rev.)	6/62 X
2079		R	1820	103	3	R-1820-103	Wright	2R-R1820-33 (Rev.)	10/54X
2080		R	1820	103	4	R-1820-103	Wright	2R-R1820-34 (Rev.)	6/59 X
2081		R	1820	17		R-1820-17	Wright	02-35F	4/34 X
2082		R	1820	39	2	R-1820-39, R-1820-45, R-1820-47, R-1820-49, R-1820-51, R-1820-52, R-1820-53, R-1820-55, R-1820-77	Wright	02-35GA-2	2/43 X
2083		R	1820	39	2	R-1820-39, R-1820-45, R-1820-47, R-1820-49, R-1820-51, R-1820-52, R-1820-53, R-1820-55, R-1820-77	Wright	02-35GA-2	2/43 X

2084		R	1820	40	4	R-1820-40, R-1820-40B, R-1820-54, R-1820-60, R-1820-65, R-1820-71, R-1820-73, R-1820-87, R-1820-95, R-1820-97	Wright	2R-R1820-4	4/46 X
2085		R	1820	40	4	R-1820-40, R-1820-40B, R-1820-54, R-1820-60, R-1820-65, R-1820-71, R-1820-73, R-1820-87, R-1820-95, R-1820-97	Wright	02-35GC-4	4/46 X
2086		R	1820	40	3	R-1820-40, R-1820-40B, R-1820-54, R-1820-60, R-1820-65, R-1820-71, R-1820-73, R-1820-87, R-1820-97	Wright	2R-R1820-3 (Rev.)	12/58X

2087		R	1820	40	1	R-1820-40, R-1820-60, R-1820-65, R-1820-71, R-1820-73, R-1820-87, R-1820-97	Wright	02-35GC-1	5/43 X
2088		R	1820	40	2	R-1820-40, R-1820-60, R-1820-65, R-1820-71, R-1820-73, R-1820-87, R-1820-97	Wright	02-35GC-2	6/43 X
2089		R	1820	40	2	R-1820-40, R-1820-60, R-1820-65, R-1820-71, R-1820-73, R-1820-87, R-1820-97	Wright	02-35GC-2	6/43 X
2090		R	1820	52	4	R-1820-52	Wright	02-35GA-4B	3/42 Y
2091		R	1820	56	3	R-1820-56, R-1820-56W, R-1820-56WA, R-1820-62, R-1820-62A, R-1820-66, R-1820-72W, R-1820-72WA, R-1820-74, R-1820-76	Wright	02A-35GD-3	7/47 C

2092		R	1820	56	3	R-1820-56, R-1820-56W, R-1820-56WA, R-1820-62, R-1820-62A, R-1820-66, R-1820-72W, R-1820-72WA, R-1820-74, R-1820-76	Wright	02A-35GD-3	8/51 X
2093		R	1820	56	3	R-1820-56, R-1820-56W, R-1820-56WA, R-1820-62, R-1820-62A, R-1820-66, R-1820-72W, R-1820-72WA, R-1820-74, R-1820-76	Wright	02A-35GD-3	8/51 C
2094		R	1820	56	2	R-1820-56, R-1820-56W, R-1820-56WA, R-1820-62, R-1820-62A, R-1820-66, R-1820-72W, R-1820-72WA, R-1820-74W, R-1820-76	Wright	02-35GD-2	2/46 C

2095		R	1820	56	4	R-1820-56, R-1820-56W, R-1820-56WA, R-1820-62, R-1820-62A, R-1820-66, R-1820-72W, R-1820-72WA, R-1820-93	Wright	02-35GD-4	4/46 X
2096		R	1820	56	4	R-1820-56, R-1820-56W, R-1820-56WA, R-1820-62, R-1820-62A, R-1820-66, R-1820-72W, R-1820-72WA, R-1820-93	Wright	02-35GD-4	9/45 C
2097		R	1820	56S	3	R-1820-56S	Wright	2R-R1820-73	2/63 X
2098		R	1820	56S	3	R-1820-56S	Wright	2R-R1820-73 (Overhaul Man.)	1963 .
2099		R	1820	56S	4	R-1820-56S	Wright	2R-R1820-74 (Rev.)	3/63 X
2100		R	1820	56S	4	R-1820-56S	Wright	2R-R1820-74 (I.P.B.)	1963 .
2101		R	1820	57	4	R-1820-57	Wright	02-35GB-4	2/41 X
2102		R	1820	57	2	R-1820-57, R-1820-79, R-1820-81, R-1820-83, R-1820-85, R-1820-89, G105-A	Wright	02-35GB-2	4/43 X
2103		R	1820	60	4	R-1820-60, R-1820-87	Wright	02-35GC-4B	10/43X
2104		R	1820	65	4	R-1820-65	Wright	02-35GC-4	5/41 X

2105		R	1820	65	4	R-1820-65, R-1820-97	Wright	02-35GC-4	11/43X
2106		R	1820	71	4	R-1820-71, R-1820-73	Wright	02-35GC-4A	9/43 X
2107		R	1820	74	4	R-1820-74	Wright	2R-R1820-74	
2108		R	1820	74W		R-1820-74W, R-1820-76	Wright	2R-R1820-14	5/46 X
2109		R	1820	74W	4	R-1820-74W, R-1820-76	Wright	02-35GG-4	5/46 X
2110		R	1820	76A	3	R-1820-76A, R-1820-76A, R-1820-76C, R-1820-76D, R-1820-80, R-1820-80A, R-1820-80B, R-1820-86A, R-1820-86B	Wright	02A-4\35GH-3	9/80 X
2111		R	1820	76A	4	R-1820-76A, R-1820-76B, R-1820-76C, R-1820-76D, R-1820-80, R-1820-80A, R-1820-80B, R-1820-86A	Wright	02A-35GH-4 (Rev.)	3/66 X

2112		R	1820	76A		R1820-76A, R-1820-76B, R-1820-76C, R-1820-76D, R-1820-80, R-1820-80A, R-1820-80B, R-1820-86A, R-1820-86B	Wright	02A-35GH-502	10/79X
2113		R	1820	76A	3	R-1820-76A, R-1820-76B, R-1820-76C, R-1820-76D, R-1820-80, R-1820-80A, R-1820-80B, R-1820-86A, R-1820-86B	Wright	02A-35GH-3 (Overhaul Instructions)	10/64X
2114		R	1820	76A	3	R-1820-76A, R-1820-76B, R-1820-76C, R-1820-76D, R-1820-80, R-1820-80A, R-1820-80B, R-1820-86A, R-1820-86B	Wright	02A-35GH-3	10/64 X

2115		R	1820	76A	4	R-1820-76A, R-1820-76B, R-1820-76C, R-1820-76D, R-1820-80, R-1820-80A, R-1820-80B, R-1820-86A, R-1820-86B	Wright	02A-35GH-4	1/77 X
2116		R	1820	76A	4	R-1820-76A, R-1820-76B, R-1820-76C, R-1820-76D, R-1820-80, R-1820-80A, R-1820-80B, R-1820-86A, R-1820-86B	Wright	02A-35GH-4	3/79 X
2117		R	1820	76A	4	R-1820-76A, R-1820-76B, R-1820-76C, R-1820-76D, R-1820-80, R-1820-80A, R-1820-86A	Wright	02A-35GH-4	3/65 X
2118		R	1820	76A	2	R-1820-76A, R-1820-76B, R-1820-86, R-1820-101	Wright	2R-R1820-22 (Rev.)	7/59 X
2119		R	1820	76A	2	R-1820-76A, R-1820-76B, R-1820-86, R-1820-101	Wright	2R-1820-22 (Rev.)	7/59 X

2120		R	1820	76A	3	R-1820-76A, R-1820-76B, R-1820-86, R-1820-101	Wright	02A-35GH-3 (Rev.)	10/60Y
2121		R	1820	76A	3	R-1820-76A, R-1820-76B, R-1820-86, R-1820-101	Wright	2R-R1820-23 (Rev.)	10/60X
2122		R	1820	76A	4	R-1820-76A, R-1820-76B, R-1820-86, R-1820-101	Wright	2R-R1820-24 (Rev.)	11/59X
2123		R	1820	76A	4	R-1820-76A, R-1820-76B, R-1820-86, R-1820-101	Wright	2R-R1820-24 (Rev.)	3/58 X
2124		R	1820	76A	4	R-1820-76A, R-1820-76B, R-1820-86, R-1820-101	Wright	2R-R1820-24 (Rev.)	11/55Y
2125		R	1820	76A	4	R-1820-76A, R-1820-76B, R-1820-86, R-1820-101	Wright	2R-R1820-24 (Rev.)	11/59X
2126		R	1820	76A	2	R-1820-76A, R-1820-76B, R-1820-86, R-1820-86A	Wright	02A-35GH-502 (Rev.)	5/61 X
2127		R	1820	76A	3	R-1820-76A, R-1820-76B, R-1820-86, R-1820-86A	Wright	02A-35GH-3 (Rev.)	3/62 X

2128		R	1820	76A	4	R-1820-76A, R-1820-76B, R-1820-86, R-1820-86A	Wright	02A-35GH-4 (Rev.)	2/62 X
2129		R	1820	76B	2	R-1820-76B	Wright	2R-R1820-30	9/53 X
2130		R	1820	76B	3	R-1820-76B, R-1820-103A	Wright	2R-R1820-33	7/62 X
2131		R	1820	76B	4	R-1820-76B, R-1820-76D, R-1820-86A, R-1820-103A	Wright	2R-R1820-34 (Rev.)	1/71 X
2132		R	1820	80	4	R-1820-80	Wright	02A-35GK-4 (Rev.)	8/52 X
2133		R	1820	80	3	R-1820-80	Wright	02A-35GK-3	9/55 X
2134		R	1820	82	4	R-1820-82	Wright	02A-35GL-4	12/52C
2135		R	1820	82	3	R-1820-82	Wright	02A-35GL-3	1/57 Y
2136		R	1820	82	3	R-1820-82, R-1820-82A, R-1820-82B, R-1820-82C	Wright	02A-35GN-503	9/77 X
2137		R	1820	82	3	R-1820-82, R-1820-82A, R-1820-82B, R-1820-82C	Wright	02A-35GN-503	9/77 X
2138		R	1820	82	4	R-1820-82, R-1820-82A, R-1820-82B, R-1820-82C	Wright	02A-35GN-504	1/77 X

2139		R	1820	82	2	R-1820-82, R-1820-82A, R-1820-82B, R-1820-82C, R-1820-84A, R-1820-84B, R-1820-84C, R-1820-84D	Wright	02A-35GN-502	1/77 X
2140		R	1820	82	3	R-1820-82, R-1820-82A, R-1820-82B, R-1820-82C, R-1820-84A, R-1820-84B, R-1820-84C, R-1820-84D	Wright	02A-35GN-503	5/65 X
2141		R	1820	82	2	R-1820-82, R-1820-82A, R-1820-82B, R-1820-83C	Wright	02A-35GN-502	3/81 X
2142		R	1820	82	3	R-1820-82, R-1820-82A, R-1820-82WA, R-1820-88	Wright	02A-35GN-503 (Rev.)	8/61 X
2143		R	1820	82	4	R-1820-82, R-1820-82A, R-1820-82WA, R-1820-88	Wright	02A-35GN-504 (Rev.)	4/64 X
2144		R	1820	82	2	R-1820-82, R-1820-82A, R-1820-83B, R-1820-84C, R-1820-84D, R-1820-90	Wright	2R-R1820-82	9/73 X

2145		R	1820	82	4	R-1820-82, R-1820-82A, R-1820-84, R-1820-84B, R-1820-84C, R-1820-84D, R-1820-90	Wright	02A-35GN-504	10/74X
2146		R	1820	82	2	R-1820-82, R-1820-82A, R-1820-84A, R-1820-84B, R-1820-84C, R-1820-84D, R-1820-90	Wright	02A-35GN-503	5/67 Y
2147		R	1820	82	3	R-1820-82, R-1820-82A, R-1820-84A, R-1820-84B, R-1820-84C, R-1820-84D, R-1820-90	Wright	02A-35GN-503	5/65 X
2148		R	1820	82	4	R-1820-82, R-1820-82A, R-1820-84A, R-1820-84B, R-1820-84C, R-1820-84D, R-1820-90	Wright	02A-35GN-504	7/68 X

2149		R	1820	82	2	R-1820-82, R-1820-82A, R-1820-84A, R-1820-84B, R-1820-84C, R-1820-84D, R-1820-90 (Wright)	Wright	02A-35GN-502 (Svc. Instructions)	1970 .
2150		R	1820	82	3	R-1820-82, R-1820-82A, R-1820-84B, R-1820-84C, R-1820-84D, R-1820-90	Wright	02A-35GN-503	9/73 X
2151		R	1820	82	3	R-1820-82, R-1820-84	Wright	NAVAIR 03-5J-17	1/75 X
2152		R	1820	82	2	R-1820-82, R-1820-84A, R-1820-84B, R-1820-84C, R-1820-84D, R-1820-90	Wright	02A-35GN-502 (Rev.)	8/72 X
2153		R	1820	82	2	R-1820-82, R-1820-82A, R-1820-82B, R-1820-82C	Wright	02A-35GN-6-3	3/77 X
2154		R	1820	84	4	R-1820-84	Wright	2R-R1820-44	7/56 Y
2155		R	1820	84	4	R-1820-84	Wright	2R-R1820-44 (Rev.)	3/55 X
2156		R	1820	84	2	R-1820-84, R-1820-84A, R-1820-84B	Wright	02A-35GM-502	3/61 X
2157		R	1820	84	2	R-1820-84, R-1820-84A, R-1820-84B	Wright	02A-35GM-502 (Rev.)	12/61X

2158		R	1820	84	2	R-1820-84, R-1820-84A, R-1820-84B	Wright	2R-R1820-42 (Rev.)	12/58Y
2159		R	1820	84	3	R-1820-84, R-1820-84A, R-1820-84B	Wright	02A-35GM-503	10/61X
2160		R	1820	84	3	R-1820-84, R-1820-84A, R-1820-84B	Wright	2R-R1820-43 (Rev.)	12/58X
2161		R	1820	84	3	R-1820-84, R-1820-84A, R-1820-84B	Wright	2R-R1820-43 (Rev.)	12/58X
2162		R	1820	84	4	R-1820-84, R-1820-84A, R-1820-84B	Wright	02A-35GM-504 (Rev.)	4/61 X
2163		R	1820	84	4	R-1820-84, R-1820-84A, R-1820-84B	Wright	2R-R1820-44 (Rev.)	10/58X
2164		R	1820	84	3	R-1820-84, R-1820-84A, R-1820-84B	Wright	2R-R1820-43 (Overhaul Man.)	1958 .
2165		R	1820	84	4	R-1820-84, R-1820-84A, R-1820-84B	Wright	2R-R1820-44 (I.P.B.)	1958 .
2166		R	1820	84A	4	R-1820-84A, R-1820-84B, R-1820-84C, R-1820-84D	Wright	02A-35GM-504	10/61Y
2167		R	1820	84A	2	R-1820-84A, R-1820-84B, R-1820-84C, R-1820-84D	Wright	44-2810-209-50	10/63X
2168		R	1820	F	4	R-1820-F	Wright	Parts Cat.	1935 .

2169		R	1820	F	4	R-1820-F, R-1820-13	Wright	02-35F	8/35 Y
2170		R	1820	G		R-1820-G	Wright	Wright Aero Corp	
2171		R	1820	82	4	R-1820-82	Wright		10/79X
2172		R	1820	82	4	R-1820-82	Wright	02A-35GN-504	7/83 X
2173		R	2600		4	R-2600, R-2600-29A, R-2600-3, R-2600-5	Wright	2R-R2600-4 (Parts Breakdown)	1/15/56 x
2174		R	2600		4	R-2600	Wright	02-35HA-6A (Parts Cat.)	
2175		R	2600		2	R-2600, R-2600-29A, R-2600-3, R-2600-5	Wright	2R-R2600-2 (Svc. Instructions)	10/1958
2176		R	2600		3	R-2600, R-2600-8, R-2600-8A, R-2600-12, R-2600-13, R-2600-29, R-2600-31, R-2600-35	Wright	2R-R2600-3 (Overhaul Instructions)	3/1955
2177		R	2600		3	R-2600 (Series)	Wright	02A-35H-5 (Rev.)	5/54 Y
2178		R	2600		3	R-2600 (Series)	Wright	2R-R2600-5 (Rev.)	8/56 Y
2179		R	2600	13	4	R-2600-13	Wright	02-35HB-4A	1/44 Y
2180		R	2600	20	4	R-2600-20	Wright	Wright Eng. Parts	11/48Y
2181		R	2600	29	2	R-2600-29, R-2600-29A	Wright	02A-35H-5 (Change Requests)	11/52X
2182		R	2600	29A	2	R-2600-29A, R-2600-35	Wright	2R-2600-2 (Rev.)	10/58X
2183		R	2600	29A	4	R-2600-29A, R-2600-35	Wright	2R-R2600-4 (Rev.)	4/58 X

2184		R	2600	3	2	R-2600-3, R-2600-6, R-2600-6A, R-2600-11, R-2600-19, R-2600-23	Wright	02-35HA-2	9/44 X
2185		R	2600	7	2	R-2600-7, R-2600-8, R-2600-8A, R-2600-9, R-2600-12, R-2600-13, R-2600-29, R-2600-31	Wright	02-35HB-2	9/44 X
2186		R	2600	7	3	R-2600-7, R-2600-8, R-2600-9, R-2600-13	Wright	02-35HB-3	12/42X
2187		R	2600	7	4	R-2600-7, R-2600-9	Wright	2R-R2600-14	4/43 X
2188		R	2600	8	3	R-2600-8	Wright	2R-R2600-3	3/55 X
2189		R	2600	8	4	R-2600-8	Wright	02-35HB-4B	2/42 X
2190		R	2600	8	2	R-2600-8, R-2600-12, R-2600-13, R-2600-29, R-2600-31	Wright	02-35HB-2	11/45X
2191		R	2600	8	4	R-2600-8, R-2600-8A, R-2600-12, R-2600-13, R-2600-20, R-2600-22, R-2600-29, R-2600-31	Wright	2R-R2600-4 (Rev.)	9/51 Y

2192		R	2600	8	2	R-2600-8, R-2600-8A, R-2600-12, R-2600-13, R-2600-29, R-2600-31, R-2600-35, R-2600-29A, R-2600-35, DC4-ME2	Wright	2R-R2600-2	2/68 X
2193		R	2600	8	3	R-2600-8, R-2600-8A, R-2600-9, R-2600-12, R-2600-13, R-2600-29, R-2600-31	Wright	02-35HB-3	7/45 C
2194		R	2600	8	3	R-2600-8, R-2600-8Z, R-2600-12, R-2600-13, R-2600-29, R-2600-31, R-2600-35	Wright	2R-R2600-3 (Rev.)	4/58 X
2195	Y	J	65	W-1	4	YJ65-W-1	Wright	2J-J65-14	8/52 X
2196	Y	J	65	W-1	2	YJ65-W-1, YJ65-W-1A	Wright	2J-J65-12 (Rev.)	7/57 X
2197		R	1300		3	R-1300	Wright	2R-R1300-5	6/61 X
2198		R	1300		3	R-1300 (Series)	Wright	02A-35K-5, 2R-R1300-5 (Rev.)	6/61 X
2199		R	1300			R-1300, R-1820, R-3350	Wright	00-35F-1-02D2	12/57X

2200		R	1300	1	4	R-1300-1, R-1300-1A, R-1300-2, R-1300-2A	Wright	2R-R1300-4	12/52X
2201		R	1300	1	3	R-1300-1, R-1300-1A, R-1300-2, R-1300-2A	Wright	2R-R1300-3 (Rev.)	5/56 X
2202		R	1300	1	4	R-1300-1, R-1300-1A, R-1300-2, R-1300-2A	Wright	2R-R1300-4 (Rev.)	7/55 X
2203		R	1300	1	2	R-1300-1, R-1300-1A, R-1300-2, R-1300-2A, R-1300-2B	Wright	02A-35KA-502 (Rev.)	4/60 X
2204		R	1300	1	2	R-1300-1, R-1300-1A, R-1300-2, R-1300-2A, R-1300-2B	Wright	2R-R1300-2 (Svc. Instructions)	1960 .
2205		R	1300	1	3	R-1300-1, R-1300-1A, R-1300-2, R-1300-2A, R-1300-2B	Wright	2R-R1300-3 (Rev.)	5/60 X
2206		R	1300	1	3	R-1300-1, R-1300-1A, R-1300-2, R-1300-2A, R-1300-2B	Wright	2R-R1300-3 (Overhaul Instructions)	1960 .
2207		R	1300	1	4	R-1300-1, R-1300-1A, R-1300-2, R-1300-2A, R-1300-2B	Wright	2R-R1300-4 (Rev.)	10/59X

2208		R	1300	1	4	R-1300-1, R-1300-1A, R-1300-2, R-1300-2A, R-1300-2B	Wright	2R-R1300-4 (Rev.)	10/59X
2209		R	1300	1	4	R-1300-1, R-1300-1A, R-1300-2, R-1300-2A, R-1300-2B	Wright	2R-R1300-4 (I.P.B.)	1959 .
2210		R	1300	1B	3	R-1300-1B, R-1300-3C, R-1300-3D	Wright	2R-R1300-13 (Overhaul Instructions)	1962 .
2211		R	1300	1B	4	R-1300-1B, R-1300-3, R-1300-3A, R-1300-3C, R-1300-3D	Wright	2R-R1300-14	6/82 X
2212		R	1300	1B	4	R-1300-1B, R-1300-3, R-1300-3A, R-1300-3C, R-1300-3D	Wright	2R-R1300-14 (I.P.B.)	1973 .
2213		R	1300	1B	3	R-1300-1B, R-1300-3C, R-1300-3D	Wright	2R-R1300-13	7/62 X
2214		R	1300	1B	3	R-1300-1B, R-1300-3D	Wright	2R-R1300-13	6/78 X
2215		R	1300	3	2	R-1300-3	Wright	02A-35KB-2 (Rev.)	2/55 X
2216		R	1300	3	3	R-1300-3	Wright	02A-35KB-3 (Rev.)	10/55X
2217		R	1300	3	4	R-1300-3	Wright	2R-R1300-14	10/55X
2218		R	1300	3	4	R-1300-3	Wright	2R-R1300-14	5/54 X
2219		R	1300	3	3	R-1300-3, R-1300-3A, R-1300-3B	Wright	2R-R1300-13 (Overhaul Instructions)	1959 .
2220		R	1300	3	3	R-1300-3, R-1300-3A	Wright	2R-R1300-13 (Overhaul Man.)	1957 .

2221		R	1300	3	2	R-1300-3, R-1300-3A, R-1300-3B	Wright	2R-R1300-12 (Svc. Instructions)	1959 .
2222		R	1300	3	3	R-1300-3, R-1300-3A, R-1300-3B	Wright	02A-35KB-3 (Rev.)	5/60 X
2223		R	1300	3	4	R-1300-3, R-1300-3A, R-1300-3B	Wright	2R-R1300-14 (Rev., Missing Pgs.)	2/57 X
2224		R	1300	3	4	R-1300-3, R-1300-3A, R-1300-3B	Wright	2R-R1300-14 (Rev.)	6/59 X
2225		R	1300	3	4	R-1300-3, R-1300-3A, R-1300-3B	Wright	2R-R1300-14 (I.P.B.)	1959 .
2226		R	1300	3D	2	R-1300-3D	Wright	02A-35KB-2	1/59 X
2227		R	1300	3D	3	R-1300-3D	Wright	02A-35KB-3 (Rev.)	7/61 X
2228		R	1300	3D	3	R-1300-3D	Wright	02A-35KB-3	7/61 X
2229		R	1300	3D	4	R-1300-3D	Wright	02A-35KB-4	7/61 X
2230		R	1300	4	3	R-1300-4	Wright	02A-35KC-503	4/57 X
2231		R	1300	4	4	R-1300-4	Wright	02A-35KC-504	10/56X
2232		R	1300	4	3	R-1300-4, R-1300-4A	Wright	02A-35KC-503	6/58 X
2233		R	1300	4	4	R-1300-4, R-1300-4A	Wright	02A-35KC-504	5/58 X
2234		R	540	1	4-Mar	R-540-1	Wright	00-35E-19	9/43 X
2235		R	760	1	4	R-760-1	Wright	02-35DA-4	2/42 X
2236		R	760	1	4	R-760-1	Wright	02-35DA-4 (Parts Cat.)	2/42 X
2237		R	760	E		R-760E, R-975EM, R-975F	Wright	02-35A-2	7/39 X
2238		R	975	11	3	R-975-11, R-975-7, R-975-28	Wright	02-35A-3	

2239		R	975	40	2	R-975-40, R-975-42, R-975-46	Wright	02A-40DA-2,2R-R975-2	3/54 Y
2240		R	975	46	2	R-975-46	Wright	02A-40DA-2	12/54X
2241		R	975	46	3	R-975-46	Wright	02A-40DA-3	4/60 X
2242		R	975	46	3	R-975-46	Wright	02A-40DA-3	4/60 X
2243		R	975	46	3	R-975-46	Wright	02A-40DA-3 (Rev.)	1/59 X
2244		R	975	46	4	R-975-46	Wright	02A-40DA-4	1/59 X
2245		R	975	46	4	R-975-46	Wright	02A-40DA-4	1/59 X
2246		R	975	7	1	R-975-7	Wright	02-35A-1	4/41 X
2247		R	975	7	4	R-975-7	Wright	02-35A-4	9/41 X
2248		R	975	EC-2	2	R-975EC-2	Wright	TM-9-1751	2/42 X
2249	G	R	1820	G-3	4	GR-1820-G-3	Wright	Wright Aero Corp.	1/38 X
2250		R	975	11	2-Jan	R-975-11	Wright	00-35E-2	7/43 X
2251		R	1820	56	1	R-1820-56, R-1820-66, R-1820-72 (Wright Aero Corp.)	Wright Aero Corp.		8/45 X
2252		R	1820	G200	2	R-1820-G200 (9GC, Wright Aero Corp.)	Wright Aero Corp.		1945 X
2253		R	1750		4	R-1750, R-1750-A, R-1750-AB, R-1750-B, R-1750-C, R-1750-D (Wright, Cyclone)	Wright, Cyclone	Parts	2/31 X

2254		R	1750		2	R-1750, R-1750-A, R-1750-B, R-1750-C, R-1750-CE, R-1750-D, R-1750-E, R-1820E (Wright, Cyclone)	Wright, Cyclone		9/30 X
2255		R	1820	40	4	R-1820-40, R-1820-40B, R-1820-87 (Wright, Cyclone)	Wright, Cyclone	Parts	4/43 X
2256		R	1820	G		R-1820-G, GR-1820-G, GR-1820-G100 (Wright, Cyclone)	Wright, Cyclone		5/40 X
2257		R	760E		2-Jan	R-760E, R-975E (Wright, Whirlwind 7, 9)	Wright, Whirlwind	Operations, Maint.	1940 .
2258		R	760	E		R-760E, R-975E (Wright, Whirlwind)	Wright, Whirlwind		3/40 X
2259		J	1600		2	J-1600		Svc. Data	9/44 X
2260		R	R1	506	2	R-R1-506		2R-R1-506 (Approved Piston Rings Arrangements For Chrome Plated Cylinder)	1960 .

2261		R	R1	2	1	R-R1-2		2R-R1-2 (Tightening Torque & Stretch Recommendations)	9/60 .
2262		R	1650	23	2	R-1650-23		02-10EB-2 (Svc. Instructions)	2/1941
2263	P	S	200	14	4	PS200-14		2JA3-9-4 (Technical Man., Parts)	3/72 X
2264	P	S	200	16	2	PS200-16, PS200-24		2JA3-9-26 (Technical Man., Maint. Instructions)	7/72 X
2265	Y	T	54	A-1	2	YT54-A-1		2J-T54-2 (Svc. Instructions)	8/56 X
2266		T	41M	1-Aug	3	T41M-8-1		2JAS-2-13	7/67 X
2267					3	101796, 169479, 190255, 169478, 104384, 169953, 222552, 229300		6R6-3-2-3 (Water Regulators, Overhaul Instructions, Book 24)	1960 .
2268						Gas Turbine Eng.		2J-1-18 (Corrosion Control)	4/1976
2269					3	Jupiter VIII F.P., XI F.P.		Air Publication #1417 (Overhaul Man.)	1932 .
2270					2	Liberty 12		Installation, Inspection, Maint.	
2271					2	Liberty Eng.		Eng. Handbook	1928 .
2272						Model 745C18BA1		#745-D (Spec.)	1946 .
2273						Model 749C18BD1		#749-D (Spec.)	1947 .

2274					2	Model 972TC18DA		Svc. Man.	1956 .
2275					3			02-60-3 (Overhaul Tools Man.)	1943 .
2276						Turbo-Jet Governor		03-10FAC-3, P/N 8469727 (I.P.B.)	
2277					4	Model EQ6042- C		6R4-3-4 (I.P.B. Technical Man., Infection Sys., Fuel)	3/12/19 69, Chng. 1, 1/1/197 1